


Setting Up Geodetic Parameters with EPSG Code By Trevor Hamlett


When setting your Geodetic Parameters, please be aware of the tab that you are in because it matters! If you do not plan on using an EPSG code, then select your desired grid, zone, distance unit, etc., and press [OK] while in the Predefined tab.

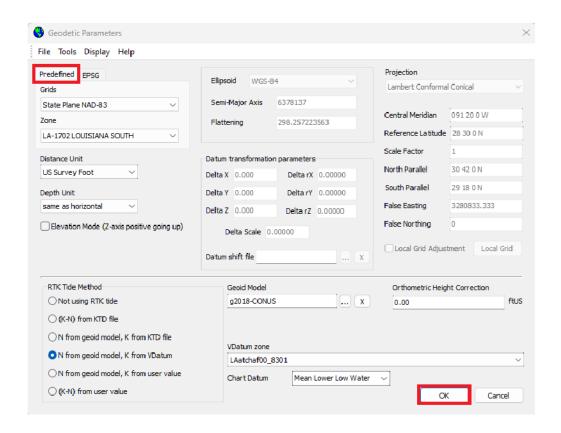

If your project requires an EPSG code, you will still set your Predefined tab up like normal, but head over to the EPSG tab once you're done. It will copy over the grid and other settings. Input your desired EPSG code and click the check mark to apply. Then review your settings

September / 2024

and click [OK] while on the EPSG tab. Please note that if you want your EPSG setting to take effect, you must press [OK] while in the EPSG tab.

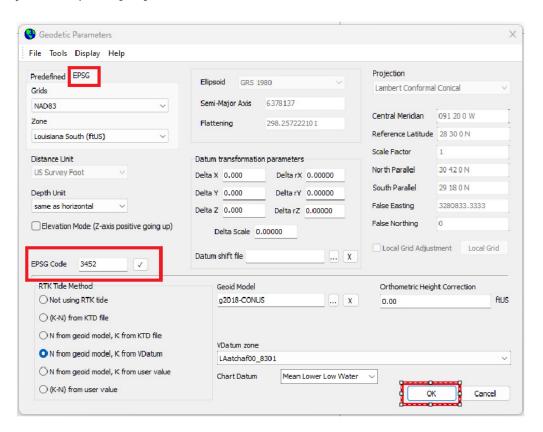

While in the HYPACK Shell, look at the Map window to verify which geodetic parameters you are working in.

