




Installation, Operation and
Programming Manual

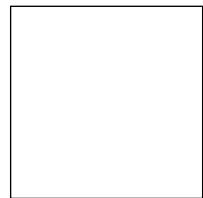

hydrovar X Series

Motor with integrated variable speed drive EXM

Table of Contents

1	Introduction and Safety	6
1.1	Introduction	6
1.2	Hazard levels and safety symbols.....	6
1.3	User safety	7
1.4	Protection of the environment.....	7
2	Handling and Storage.....	8
2.1	Unit inspection upon delivery.....	8
2.1.1	Package inspection	8
2.1.2	Unpacking and inspection of the unit	8
2.2	Guidelines for transport.....	8
2.2.1	Handling of the packed unit using a forklift truck.....	9
2.2.2	Lifting with a crane	9
2.3	Storage	10
3	Product Description	11
3.1	Features	11
3.2	Part names	11
3.3	Data plates.....	12
4	Installation	14
4.1	Precautions	14
4.2	Mechanical installation.....	15
4.2.1	Installation area	15
4.2.2	Permitted positions	15
4.3	Guidelines for electrical connection.....	16
4.4	Guidelines for the control panel.....	17
4.4.1	Fuses and/or automatic switches (hydrovar X, hydrovar X+).	17
4.4.2	Ground fault circuit interrupter, GFCI	17
4.5	Power supply connection.....	18
4.6	Auxiliary connections	20
4.6.1	Signal terminals, hydrovar X+.....	20
4.6.2	Signal terminals, hydrovar X	22
5	Control.....	24
5.1	hydrovar X+ drive display.....	24
5.1.1	Graphic display.....	25
5.1.2	Parameter menu, hydrovar X+	26
5.1.3	Unit start using the hydrovar X+ drive display.....	26
5.1.4	Operating mode change, hydrovar X+	26
5.1.5	Error reset, hydrovar X+	27
5.2	hydrovar X drive display	27

5.2.1	Main visualization	29
5.2.2	Parameter menu, hydrovar X	29
5.2.3	Unit start using the hydrovar X drive display	30
5.2.4	Operating mode change, hydrovar X	30
5.2.5	Error reset, hydrovar X	30
5.3	Xylem X App	30
6	Programming	32
6.1	M01 Home menu	32
6.1.1	S01.0 Application	32
6.1.2	S01.1 Sensors	35
6.1.3	S01.2 Setpoints	36
6.1.4	S01.3 Actual Measured Values	37
6.1.5	S01.4 Jog mode	38
6.1.6	S01.5 Security	38
6.2	M02 Error Log	38
6.2.1	S02.0 Errors	38
6.3	M03 Pump information	39
6.3.1	S03.0 Actual Measured Values	39
6.3.2	S03.1 Counters	40
6.3.3	S03.2 Motor	40
6.3.4	S03.3 Input/Output Status	40
6.3.5	S03.4 Product information	41
6.4	M04 Pump Control	42
6.4.1	S04.0 Configuration	42
6.4.2	S04.1 Setpoints	44
6.4.3	S04.2 Regulation	45
6.4.4	S04.3 Thresholds	47
6.4.5	S04.4 Test Run	48
6.4.6	S04.5 Setpoint Shift	48
6.4.7	S04.6 Pipe filling	49
6.5	M05 Input/Output Settings	50
6.5.1	S05.0 Measuring ranges	50
6.5.2	S05.1 Analog inputs	51
6.5.3	S05.2 Digital inputs	54
6.5.4	S05.3 Analog output	55
6.5.5	S05.4 Digital outputs	55
6.5.6	S05.8 Calibrations	57
6.6	M06 Multipump	58
6.6.1	S06.0 Configuration	58
6.6.2	S06.1 Regulation	58
6.7	M07 Inverter	60
6.7.1	S07.0 Switching Frequency Settings	60

6.7.2 S07.1 Skip Speed Function.....	60
6.7.3 S07.2 Motor Heating	60
6.8 M08 Communication	61
6.8.1 S08.0 Ports.....	61
6.8.2 S08.1 Modbus RTU.....	61
6.8.3 S08.2 Bacnet MS/TP	61
6.8.4 S08.3 Wireless Communication.....	62
6.9 M09 General Settings	62
6.9.1 S09.0 Localization	62
6.9.2 S09.1 Display.....	62
6.9.3 S09.3 Factory Settings	63
6.9.4 S09.4 Security.....	63
7 Modbus RTU.....	64
7.1 Communication.....	64
7.2 Transmission	64
7.3 Data Protection.....	64
7.4 Protocol transmission modes	64
7.5 Supported function codes	65
7.5.1 Example 1	65
7.5.2 Example 2	66
7.6 Connections and data management, Modbus RTU	67
7.7 List of registers	68
8 Bacnet MS/TP.....	81
8.1 Protocol implementation compliance statement (PICS)	81
8.2 Bacnet Device and Bacnet Device Object Identifier.....	84
8.3 Connections and data management, Bacnet MS/TP	84
8.4 Bacnet Strings TABLE	85
8.5 Bacnet Analog Inputs TABLE.....	85
8.6 Bacnet Analog Values TABLE	92
9 Maintenance.....	99
9.1 Precautions	99
9.2 Replacing the drive	100
9.3 Long periods of inactivity.....	102
9.4 Identification of spare parts.....	102
10 Troubleshooting	103
10.1 List of alarms	103
10.2 List of errors	104
11 Specifications	107
11.1 Operating environment	107
11.2 Technical characteristics	107
11.3 Conformity of radio frequency characteristics	108
11.4 Other conformities and approvals.....	110

11.5	Characteristics of inputs and outputs	110
11.6	Lithium battery	110
11.7	Magnetic fields	110
11.8	Sound pressure (EN 60034-9, CLC/TS 60034-25).....	111
12	Disposal	112
12.1	Precautions	112
12.2	WEEE (EU/EEA)	112
12.3	WEEE (UK)	112
13	Declarations of Conformity	114
14	Warranty	117

1 Introduction and Safety

1.1 Introduction

Purpose of this manual

This manual provides information on how to do the following in the correct manner:

- Installation
- Operation
- Programming.

Nomenclature used in the document

- hydrovar X: EXM motor with HVX drive
- hydrovar X+: EXM motor with HVX+ drive

Firmware Version

Check:

- That the firmware version indicated at the back of this manual is compatible with the one supplied with the unit (parameter P03.4.19, see chapters **Programming** on page 32 and **Modbus RTU** on page 64)
- The descriptions shown on the control panel and in the Xylem X App, for any additions not shown in the manual.

Supplementary instructions

The instructions and warnings of this manual apply to the standard unit as described in the sale documentation. Special version pumps may be supplied with supplementary instruction manuals. For situations not considered in the manual or in the commercial documentation, contact Xylem or the Authorised Distributor.

1.2 Hazard levels and safety symbols

Before using the unit, the user must read, understand and comply with the indications of the danger warnings in order to avoid the following risks:

- Injuries and health hazards
- Damage to the product
- Unit malfunction.

Hazard levels

Hazard level	Indication
 DANGER:	It identifies a dangerous situation which, if not avoided, causes serious injury, or even death.
 WARNING:	It identifies a dangerous situation which, if not avoided, may cause serious injury, or even death.
 ATTENTION:	It identifies a dangerous situation which, if not avoided, may cause small or medium level injuries.
NOTE:	It identifies a situation which, if not avoided, may cause damage to property but not to people.

Complementary symbols

Symbol	Description
	Electrical hazard
	Hot surface hazard
	Explosive atmosphere hazard
	Ionizing radiation hazard
	Magnetic hazard

1.3 User safety

Strictly comply with current health and safety regulations.

Qualified personnel

This unit must be used only by qualified users. Qualified users are people able to recognise the risks and avoid hazards during installation, use and maintenance of the unit.

1.4 Protection of the environment

Disposal of packaging and product

Comply with the current regulations on sorted waste disposal.

Sites exposed to ionizing radiations



WARNING: Ionizing radiation hazard

If the unit has been exposed to ionizing radiations, implement the necessary safety measures for the protection of people. If the unit needs to be dispatched, inform the carrier and the recipient accordingly, so that appropriate safety measures can be put in place.

2 Handling and Storage

2.1 Unit inspection upon delivery

2.1.1 Package inspection

1. Check that quantity, descriptions and product codes match the order.
2. Check the packaging for any damage or missing components.
3. In case of immediately detectable damage or missing parts:
 - Accept the goods with reserve, indicating any findings on the transport document, or
 - Reject the goods, indicating the reason on the transport document.In both cases, promptly contact Xylem or the Authorised Distributor from whom the product was purchased.

2.1.2 Unpacking and inspection of the unit



ATTENTION: Cut and abrasion hazard

Always wear personal protective equipment.

-
1. Remove the packaging.
 2. Ensure sorting of all packaging materials in accordance with the applicable regulations.
 3. Release the unit by removing the screws and/or cutting the straps, if fitted.
 4. Check the unit for integrity and to make sure that there are no missing components.
 5. In case of damage or missing components, promptly contact Xylem or the Authorised Distributor.

2.2 Guidelines for transport

Precautions



WARNING: Crushing hazard

The unit and components are heavy: risk of crushing.



WARNING:

Always wear personal protective equipment.



WARNING:

Check the gross weight marked on the packaging.



WARNING:

Handle the unit in compliance with the current regulations on "manual load handling", to avoid undesirable ergonomic conditions causing risks of back-spine injury.




WARNING:

Take appropriate measures during transport, installation and storage to prevent contamination from external substances.

2.2.1 Handling of the packed unit using a forklift truck

The figure shows the lifting points.

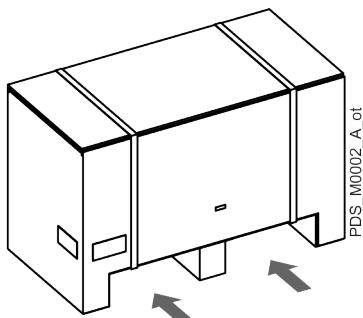

2.2.2 Lifting with a crane



WARNING:

Use ropes, chains and/or slings (hereinafter referred to as "ropes"), hooks and/or clasps (hereinafter referred to as "hooks"), shackles or eyebolts that comply with the applicable directives and are suitable for use.

NOTE:

Make sure that the harnessing does not hit and/or damage the unit.



WARNING:

Lift and handle the unit slowly to avoid stability issues.



WARNING:

During handling, make sure to avoid injury to people and animals, and/or damage to property.



WARNING:

Use the eyebolts screwed onto the motor only for lifting the motor itself.

1. Attach the ropes to the eyebolts on the motor.
2. Fix the ropes to the crane.
3. Lift the crane and tension the ropes without lifting the unit.
4. Lift and move the unit slowly, holding the motor shaft with one hand to balance the load
5. Set the unit down slowly.
6. Release the ropes from the eyebolts.

The figure shows how to lift the unit.



2.3 Storage

Storage of the packed unit

The unit must be stored:

- In a covered and dry place
- Away from heat sources
- Protected from dirt
- Protected from vibrations
- At an ambient temperature between -40°C and +70°C (-40°F and 158°F), and maximum relative humidity of 90% at 30°C (86°F).

NOTE:

Do not place heavy loads on top of the unit.

NOTE:

Protect the unit from collisions.

Long-term storage of the unit

Follow the same instructions for the storage of the packed unit.

For more information on long-term storage contact the Xylem sales company or Authorised Distributor.

3 Product Description

3.1 Features

The product is a permanent-magnet-assisted synchronous reluctance motor (PMaSynRM), high efficiency, with built-in electronic variable speed drive (HVX or HVX+ drive depending on the version).

Available:

- With normalised or special prolonged shaft extension, depending on the pump unit on which it is installed
- With or without pressure sensor cable.

Intended use

Xylem brand drive for surface pump units, where performance must be varied as required. Supplied already built into the pump unit: available as a stand-alone unit for use as a spare for an identical EXM motor.

Observe the operating limits in **Specifications** on page 107.



DANGER: Potentially explosive atmosphere hazard


It is prohibited to start the unit in environments with potentially explosive atmospheres or with combustible dusts.

Incorrect use

Drive of:

- Pump units of another type and/or manufacturer
- Equipment and other items not included in the intended use.


3.2 Part names

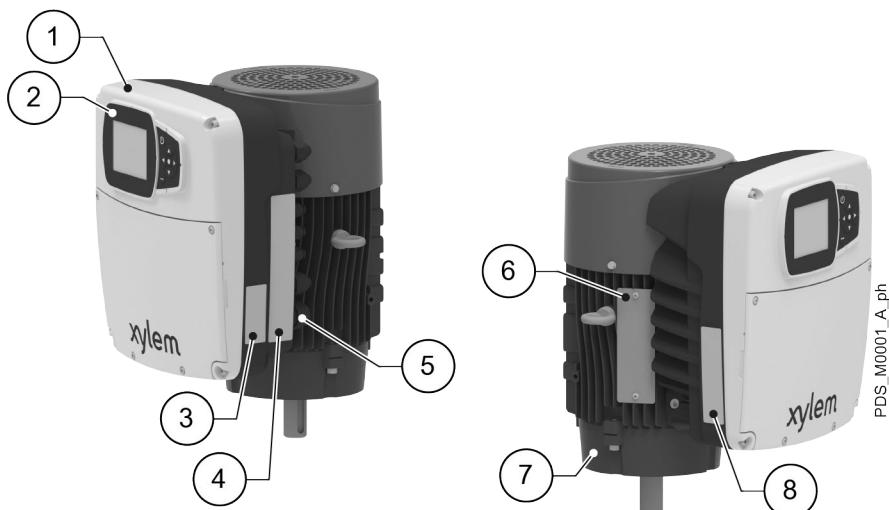

1. Drive
2. Drive display
3. HVX or HVX+ drive "radio equipment" approval sticker
4. HVX or HVX+ drive warning sticker
5. Power supply and signal cable inlets
6. Data plate of the e-XM motor assembly
7. Motor
8. Data plate of the HVX or HVX+ drive


3.3 Data plates

Data plate of the e-XM motor assembly

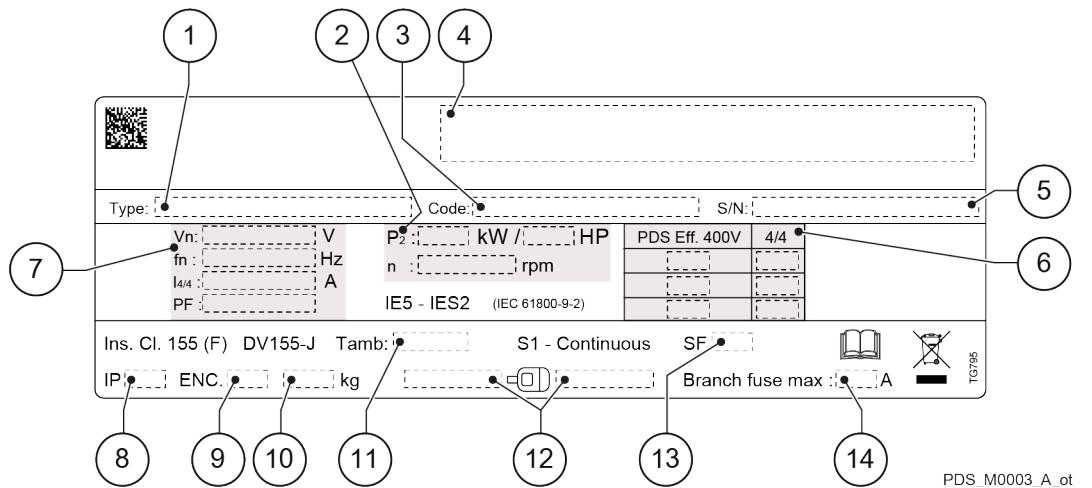


1. Model
2. Rated values at output
3. Identification code
4. Brands
5. Serial number
6. Unit full load efficiency
7. Rated values at input
8. IP protection degree
9. NEMA enclosure type
10. Mass of the unit
11. Room temperature range
12. Bearing model
13. Service factor
14. Max. capacity of protective fuses

Identification code

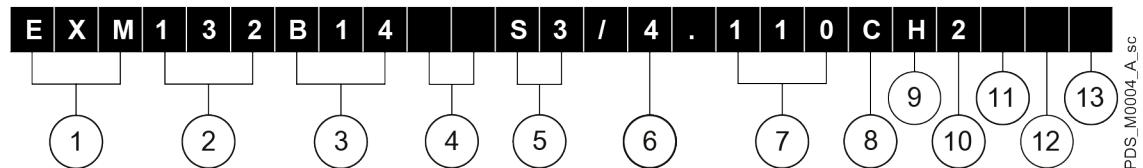

1. Series name
2. Axis height 90, 112, 132, 160 or 180 mm
3. Flange type B3, B5, B14, HM, CEA or CA
4. Key type SV, HA, HB or normalised []
5. Special shaft extension type S1, S2, S3 or S4 or normalised []
6. Power supply voltage 3x208-240 V [03] or 3x380-480 V [04]
7. Rated motor power in kWx10
8. Model size B, C or D
9. hydrovar X [S] or hydrovar X+ [H] drive
10. Speed range at rated power 3000 to 4000 rpm [2] or 1500 to 2000 rpm [4]
11. Standard drive [] or without filters [W]
12. Motor with foot [F] or without foot []
13. Standard motor [] or oversized motor [R]

Data plate of the drive (HVX, HVX+)

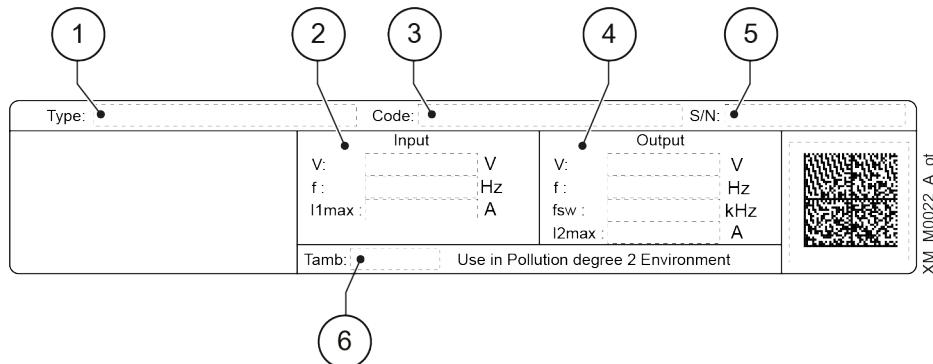


1. Model
2. Input operating limits
3. Identification code
4. Output operating limits
5. Serial number
6. Room temperature range

Drive warning sticker (HVX, HVX+)



Approval sticker as radio equipment (HVX, HVX+)

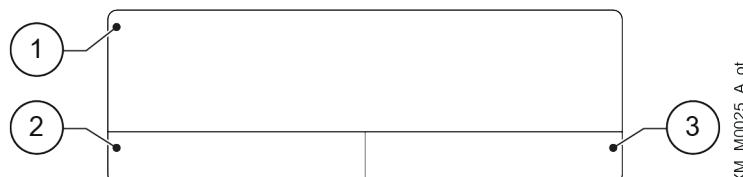

1. United States of America
2. Canada
3. Other countries

4 Installation

4.1 Precautions

General precautions

Before starting, make sure that the safety instructions shown in **Introduction and Safety** on page 6 have been fully read and understood.



DANGER:

Installation and all the electrical connections must be completed by a technician possessing the technical-professional requirements outlined in the current regulations.



WARNING:

Always wear personal protective equipment.



WARNING:

Always use suitable working tools.



WARNING:

When selecting the place of installation and connecting the unit to the electric power supplies, strictly comply with current regulations.

Electrical measures



DANGER: Electrical hazard

Before starting work, check that the electric power supply is disconnected and locked out, to avoid unintentional restart of the unit, the control panel and the auxiliary control circuit.

Earth



DANGER: Electrical hazard

Always connect the external protection conductor (earth) to the earth terminal before attempting to make any other electrical connections.



DANGER: Electrical hazard

Connect all the electrical accessories of the unit to earth.



DANGER: Electrical hazard

Check that the external protection conductor (earth) is longer than the phase conductors. In case of accidental disconnection of the unit from the phase conductors, the protection conductor must be the last one to detach itself from the terminal.

**DANGER: Electrical hazard**


Install suitable systems for protection against indirect contact, in order to prevent lethal electric shocks.

4.2 Mechanical installation

Install the unit on a concrete or metal foundation base sufficiently strong to ensure permanent and rigid support. See the Additional Instructions for Installation, Operation and Maintenance of the pump unit in which the hydrovar X or hydrovar X+ unit is installed.

4.2.1 Installation area

1. Follow the provisions in **Operating environment** on page 107.
2. Place the unit in a raised position in relation to the floor.
3. Make sure that any leaks will not cause flooding to the installation area or submerge the unit.
4. In case of outdoor installation, ensure appropriate protection of the unit against direct sunlight, rain and snow using appropriate covers.

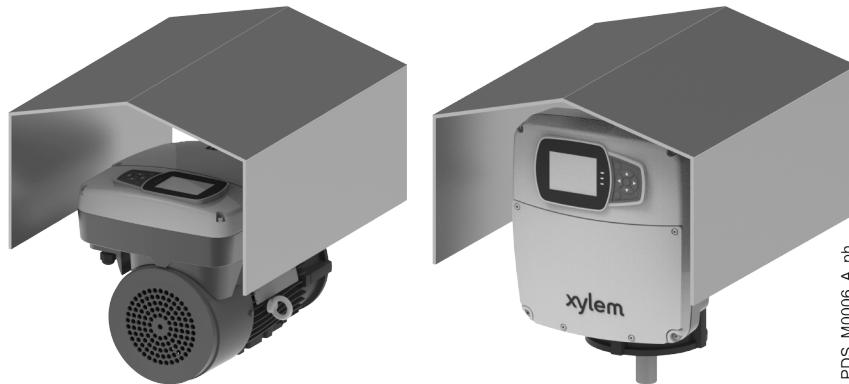

Air clearance between a wall and the external surfaces of the unit


- To ensure suitable ventilation: $\geq 100 \text{ mm (4 in)}$
- To permit inspection and removal of the motor: $\geq 300 \text{ mm (12 in)}$
- If the space available is any less, refer to the technical documentation of the pump unit.

4.2.2 Permitted positions


The figures show the allowed positions for the drive only: see also the allowed positions in the pump unit manual. Contact Xylem or the Authorised Distributor for other positions.

**WARNING:**

Ensure that the condensate drain is always positioned downwards. If necessary, turn the motor front flange.

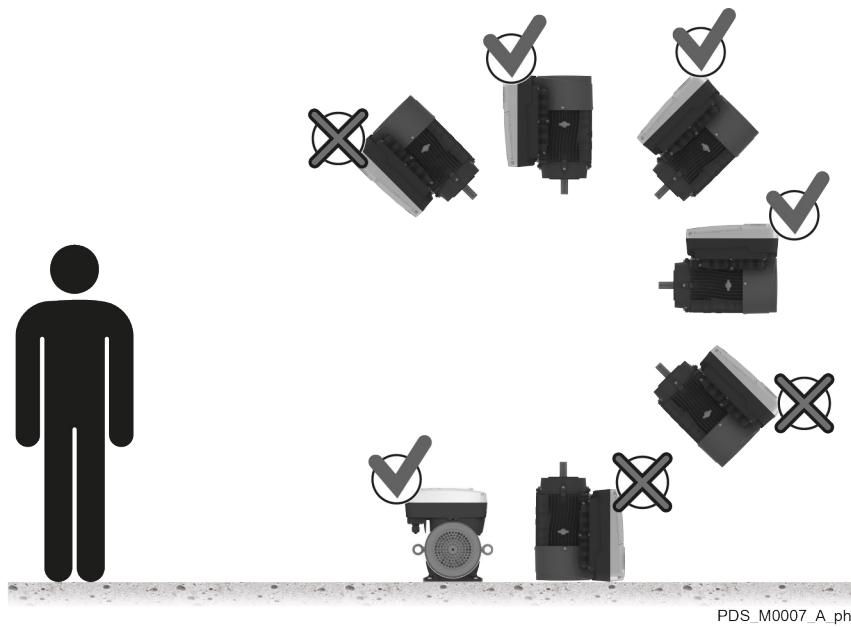

PDS_M0007_A_ph

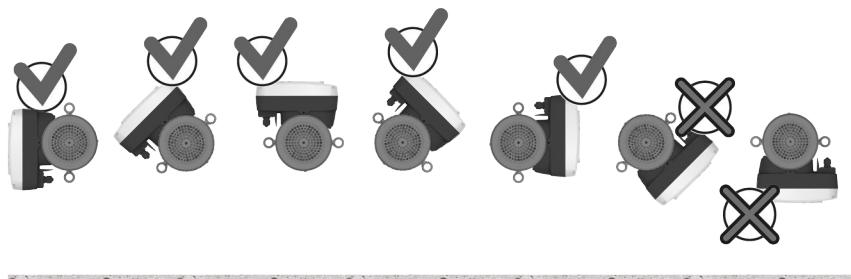

PDS_M0008_A_ph

4.3 Guidelines for electrical connection

1. Check that the electrical leads are protected against:
 - High temperature
 - Vibrations
 - Collisions
 - Liquids.
2. Check that the power supply line is provided with:
 - A short circuit protection device of appropriate size
 - A mains disconnection device with contact opening distance ensuring complete disconnection for overvoltage III category conditions.

Isolated type networks (IT)

The installation of hydrovar X and hydrovar X+ units in distribution networks where the neutral is isolated from earth, must be evaluated according to the declared leakage current and the number of units to be connected. Contact Xylem or the Authorised Distributor for further information.

4.4 Guidelines for the control panel

NOTE:

The control panel must match the ratings on the unit data plate.

4.4.1 Fuses and/or automatic switches (hydrovar X, hydrovar X+)

- An electronically activated drive function ensures motor overload protection. The overload protection function calculates the increment level in order to activate the timing of the trigger function (motor stop).
The higher the input current, the faster the response. The function provides Class 20 protection for the motor.
- The drive must be equipped with overcurrent and short-circuit protection to prevent the overheating of the power supply cables. Line fuses or automatic switches must be installed to ensure this protection. Fuses and automatic switches must be provided by the installer as part of the installation.
- Use the recommended fuses and/or automatic switches on the power supply side as protection in the event of drive component failure (first failure). The use of the recommended fuses and automatic switches ensures that possible damage to the drive is limited to the inside of the same. For other types of protection, ensure that the passing energy is equal to or less than that of the recommended models.
- Compliance with UL requirements is only ensured by using approved fuses of category JDDZ.2/8 type T and with the characteristics indicated below and in the table.
- The fuses shown in the table are suitable for use on a circuit capable of releasing 5000 Arms (symmetrical), maximum 480 V. With the indicated fuses, the short-circuit current rating (SCCR) for the drive is 5000 Arms.

The figure shows the recommended fuses and switches.

HVX, HVX+ model	Xylem motor model	Three-phase power supply voltage, Vac	Non-UL fuses, type gG, A	UL fuses, type T, manufacturer and model				MCB S203 model ABB Switches
				Bussmann	Edison	Littelfuse	Ferraz- Shawmut	
B	EXM.../3....B..	200 - 240	16	JJN-15	TJN (15)	JLLN 15	A3T15	C16
C	EXM.../3....C..		30	JJN-30	TJN (30)	JLLN 30	A3T30	C32
D	EXM.../3....D..		63	JJN-60	TJN (60)	JLLN 60	A3T60	C63
B	EXM.../4....B..	380 - 480	16	JJS-15	TJS (15)	JLLS 15	A6T15	C16
C	EXM.../4....C..		30	JJS-30	TJS (30)	JLLS 30	A6T30	C32
D	EXM.../4....D..		63	JJS-60	TJS (60)	JLLS 60	A6T60	C63


NOTE:

Refer to the current shown on the data plate for the selection of the protective device and comply with local and national regulations for its sizing.

4.4.2 Ground fault circuit interrupter, GFCI

If a switch is installed to protect people against earth leakage, check that:

- It is suitably sized for the system configuration and environment of use
- It has a starting delay to prevent faults caused by transient earth currents
- It can detect alternate or direct current, it is marked with the symbols shown in the figure.

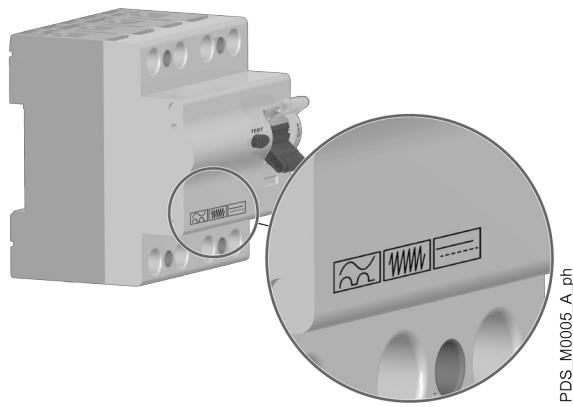


NOTE:

When using an automatic earth leakage switch or an earth fault switch, make sure to consider the total earth leakage current of all the electric devices of the system.

4.5 Power supply connection

NOTE:

The cable cross section must be sized according to the rated current of the hydrovar X / hydrovar X+ unit. Observe local and national regulations for cable sizing.

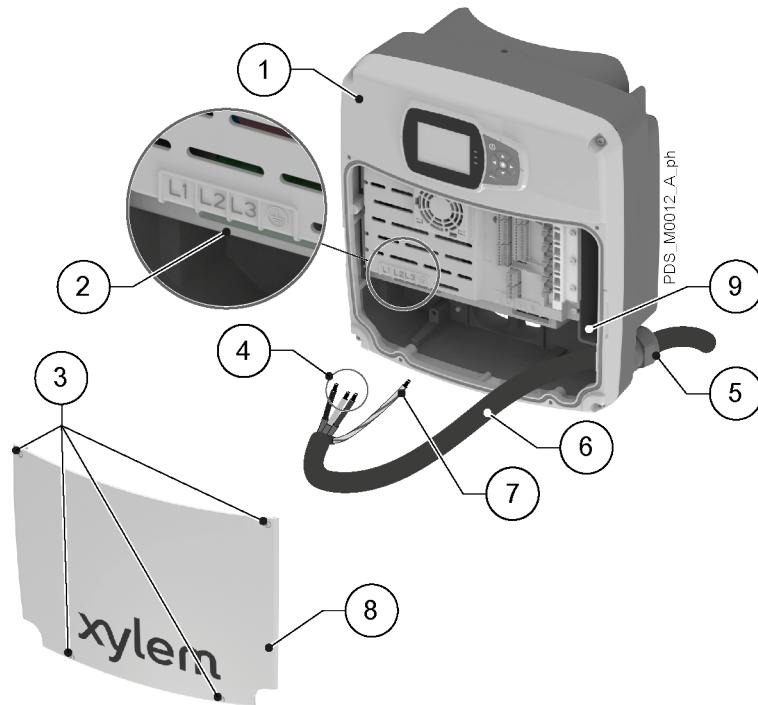

1. Drive
2. Terminals
3. Screws of the cover
4. Phase conductors
5. Cable Gland
6. Power supply cord
7. Protection conductor (earth)
8. Cover
9. Additional earth connection

1. Remove the cover and observe the wiring diagrams inside.
2. Insert the power cable in the power supply cable gland:

Model size	Type of cable gland	Cable gland torque, Nm (lbf-in)
B	M20	6(53)
C	M25	7(71)
D	M40	12(106)

3. Tightly connect the conductors, making sure that the protection one is longer than the phase ones. In models size:
 - B and C, open the springs with a slotted screwdriver with a maximum width of 2.5 mm (0.98 in)
 - D, tighten the terminal screws with a Pozidriv screwdriver and tightening torque of 4 Nm (35 lbf-in).

Note: For size D models, it is advisable to use cable terminals with a plastic sheath.

4. Tighten the cable gland.

Torque: see the table in point 2.

5. Fit the cover and tighten the screws.

Tightening torque: 3 Nm (27 lbf-in) ± 15%.

Cable input characteristics

Type of cable gland	Cable diameter, mm (in)	Tightening torque on the support plate, Nm (lbf-in)	Cable gland torque, Nm (lbf-in)	Number of inputs according to model size		
				B	C	D
M12	3-6.5 (0.1-0.26)	2.7(24)	1.5(13)	3	3	-
M16	5-10 (0.2-0.4)	5(44)	3(27)	3	3	5
M20	8-13 (0.3-0.5)	7(62)	6(53)	1	-	3
M25	11-17 (0.4-0.7)	7.5(66)	7(62)	-	1	-
M40	19-28(0.7-1.1)	14(124)	12(106)	-	-	1

NOTE:

During installation, check that the cable glands on the support plate are tightened correctly, according to the values in the table.

NOTE:

When replacing cable glands and/or installing adapters, use suitable approved components to maintain degrees of protection IP55 and NEMA 4.

Characteristics of power terminals and conductors

Model size	Connection type	Type and cross-section of installable conductors	Stripping length, mm (in)
B and C	Spring	<ul style="list-style-type: none"> • Rigid: 1.5-10 mm² • Flexible: 1.5-6 mm² • Cable terminals without plastic sheath: 1.5-6 mm² • Cable terminals with plastic sheath: 1.5-4 mm² • UL/CSA compliant: AWG 16-8 	15(0.6)
D	With screw	<ul style="list-style-type: none"> • Rigid: 2.5-35 mm² • Flexible: 2.5-25 mm² • Cable terminals without plastic sheath: 2.5-25 mm² • Cable terminals with plastic sheath: 2.5-25 mm² • UL/CSA compliant: AWG 14-2 	


4.6 Auxiliary connections



WARNING:

If relay 1 is connected to a voltage higher than 30 VAC, disconnect and do not use the terminals of relay 2.

It is recommended to connect the signal cable screens to earth via the spring metal terminals available near the signal terminals.

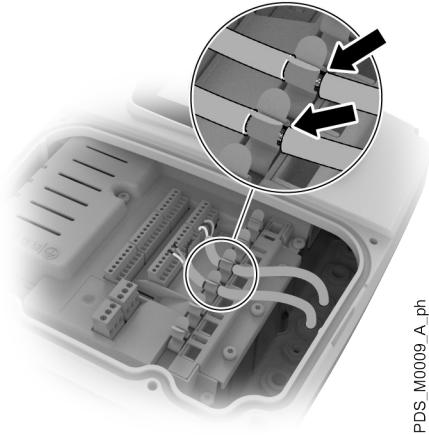

PDS_M0009_A_ph


NOTE:

- Keep signal cables at least 200 mm (8 in) away from the power cable
- Do not intersect the power supply cables; if this cannot be avoided, a 90°intersection angle is permitted.

Characteristics of terminals

Position	Name	Type and cross-section of installable cables	Stripping length, mm (in)	Tightening torque, Nm (lbf·in) ± 15%
1-39	Analogue and digital inputs and outputs	<ul style="list-style-type: none"> 0.2-1.5 mm² AWG 28-16 	6-7 (0.2-0.3)	0.2 (1.7)
40-45	Relay	<ul style="list-style-type: none"> 0.34-2.5 mm² AWG 24-12 		

4.6.1 Signal terminals, hydrovar X+

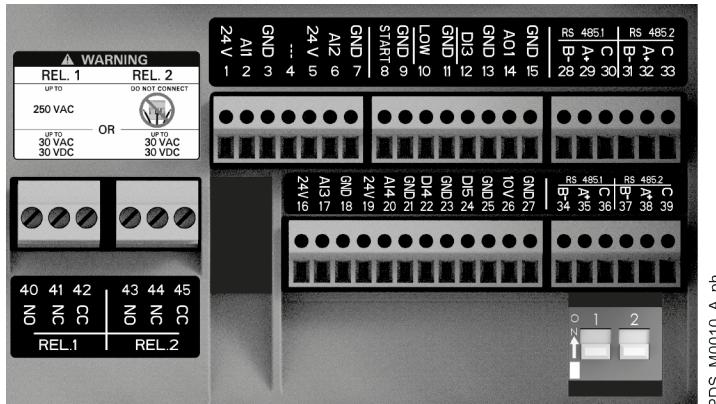


PDS_M0010_A_ph

Position number	Name	Description	Default setting
1	Analogue input 1	Power supply +24 VDC, max. 60 mA (total, terminals 1 + 5)	Pressure sensor 1
2		Configurable analogue input 1	
3		Electronic GND	
4	Reserved	For internal use, do not connect	-
5	Analogue input 2	Power supply +24 VDC, max. 60 mA (total, terminals 1 + 5)	Not selected
6		Configurable analogue input 2	
7		Electronic GND	
8	External Start/Stop	Digital start/stop input, internal pull-up +24 VDC, contact current 6 mA	-
9		Electronic GND	
10	External Lack of Water	Low water level digital input, internal pull-up +24 VDC, contact current 6 mA	-
11		Electronic GND	
12	Digital Input 3	Configurable digital input 3, internal pull-up +24 VDC, contact current 6 mA	Emergency start at maximum speed
13		Electronic GND	
14	Analogue output	Configurable analogue output	Motor Speed
15		Electronic GND	
16	Analogue input 3	Power supply +24 VDC, max. 60 mA (total, terminals 16 and 19)	Not selected
17		Configurable analogue input 3	
18		Electronic GND	
19	Analogue input 4	Power supply +24 VDC, max. 60 mA (total, terminals 16 and 19)	Not selected
20		Configurable analogue input 4	
21		Electronic GND	
22	Digital Input 4	Configurable digital input 4, internal pull-up +24 VDC, contact current 6 mA	Not selected
23		Electronic GND	
24	Digital Input 5	Configurable digital input 5, internal pull-up +24 VDC, contact current 6 mA	Not selected
25		Electronic GND	
26	10 VDC power supply	Power supply +10 VDC, max. 3 mA	-
27		Electronic GND	
28	Communication Bus 1	RS485 port 1: RS485-1B N (-)	Multipump
29		RS485 port 1: RS485-1A P (+)	
30		RS485 port 1: RS485-COM	
31	Communication Bus 2	RS485 port 2: RS485-2B N (-)	Modbus
32		RS485 port 2: RS485-2A P (+)	
33		RS485 port 2: RS485-COM	
34	Communication Bus 1	RS485 port 1: RS485-1B N (-)	Multipump
35		RS485 port 1: RS485-1A P (+)	
36		RS485 port 1: RS485-COM	

Position number	Name	Description	Default setting
37	Communication Bus 2	RS485 port 2: RS485-2B N (-)	Modbus
38		RS485 port 2: RS485-2A P (+)	
39		RS485 port 2: RS485-COM	
40	Relay 1	Configurable relay 1: normally open	Error Reporting
41		Configurable relay 1: normally closed	
42		Configurable relay 1: common contact	
43	Relay 2	Configurable relay 2: normally open	Motor start
44		Configurable relay 2: normally closed	
45		Configurable relay 2: common contact	

4.6.2 Signal terminals, hydrovar X

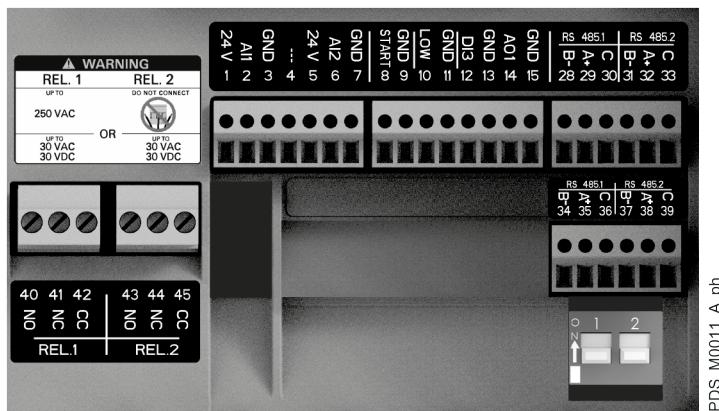

Position number	Name	Description	Default setting
1	Analogue input 1	Power supply +24 VDC, max. 60 mA (total, terminals 1 + 5)	Pressure sensor 1
2		Configurable analogue input 1	
3		Electronic GND	
4	Reserved	For internal use, do not connect	-
5	Analogue input 2	Power supply +24 VDC, max. 60 mA (total, terminals 1 + 5)	Not selected
6		Configurable analogue input 2	
7		Electronic GND	
8	External Start/Stop	Digital start/stop input, internal pull-up +24 VDC, contact current 6 mA	-
9		Electronic GND	
10	External Lack of Water	Low water level digital input, internal pull-up +24 VDC, contact current 6 mA	-
11		Electronic GND	
12	Digital Input 3	Configurable digital input 3, internal pull-up +24 VDC, contact current 6 mA	Emergency start at maximum speed
13		Electronic GND	
14	Analogue output	Configurable analogue output	Motor Speed
15		Electronic GND	-

Position number	Name	Description	Default setting
28	Communication Bus 1	RS485 port 1: RS485-1B N (-)	Multipump
29		RS485 port 1: RS485-1A P (+)	
30		RS485 port 1: RS485-COM	
31	Communication Bus 2	RS485 port 2: RS485-2B N (-)	Modbus
32		RS485 port 2: RS485-2A P (+)	
33		RS485 port 2: RS485-COM	
34	Communication Bus 1	RS485 port 1: RS485-1B N (-)	Multipump
35		RS485 port 1: RS485-1A P (+)	
36		RS485 port 1: RS485-COM	
37	Communication Bus 2	RS485 port 2: RS485-2B N (-)	Modbus
38		RS485 port 2: RS485-2A P (+)	
39		RS485 port 2: RS485-COM	
40	Relay 1	Configurable relay 1: normally open	Error Reporting
41		Configurable relay 1: normally closed	
42		Configurable relay 1: common contact	
43	Relay 2	Configurable relay 2: normally open	Motor start
44		Configurable relay 2: normally closed	
45		Configurable relay 2: common contact	

5 Control

Introduction



DANGER: Electrical hazard

If the drive display is damaged, contact Xylem or the Authorised Distributor.




WARNING: Hot surface hazard

Only touch the drive display buttons. Pay attention to the high temperature released by the unit.

Depending on model, please observe the instructions in the paragraphs **hydrovar X+ drive display** on page 24 or **hydrovar X drive display** on page 27.

5.1 hydrovar X+ drive display

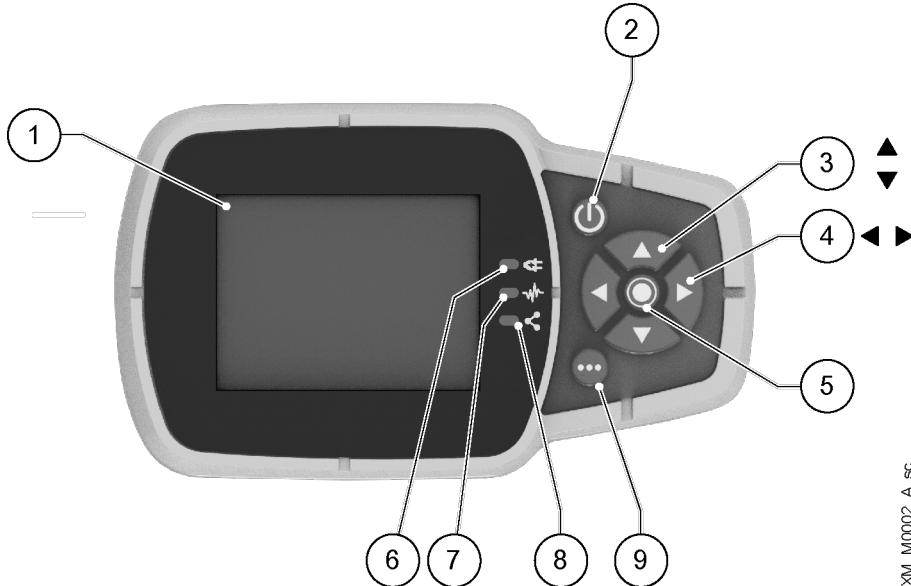


XM_M0002_A_sc

Position number	Name	Function
1	Display	
2	ON/OFF button	<ul style="list-style-type: none"> Start and stop the unit Reset the errors by pressing for 5 seconds.
3	UP and DOWN arrow keys	<ul style="list-style-type: none"> Move vertically between menu options Perform a manual switch-over on a multi-pump system by pressing the DOWN arrow (extended pressure) Rotate the display 180° by simultaneously pressing ENTER and the UP arrow (extended pressure).
4	RIGHT and LEFT arrow keys	<ul style="list-style-type: none"> Move horizontally to navigate home screens and menus Lock and unlock the display by simultaneously pressing the RIGHT and LEFT arrows (extended pressure).


Position number	Name	Function
5	SEND button	<ul style="list-style-type: none"> Advancing through the menu levels Confirm the selection of a parameter Confirm the value of a parameter.
6	Unit LED on	Indicate that the unit is powered.
7	Unit status LED	Indicate: <ul style="list-style-type: none"> Motor not powered (off) Alarm active and motor stopped (yellow) Unit error and motor stopped (red) Motor started (green) Alarm active and motor started (yellow alternating green).
8	Connection status LED	Indicate: <ul style="list-style-type: none"> BMS communication disabled (off) BMS communication active (green) Wireless communication with mobile device established (fixed blue) Wireless communication with mobile device being established (flashing blue) Wireless communication and BMS communication active (blue alternating green).
9	Multifunction button	<ul style="list-style-type: none"> Access the parameter menu or additional functions according to the screen on the display. Enable the unit to a mobile device (extended pressure)

5.1.1 Graphic display

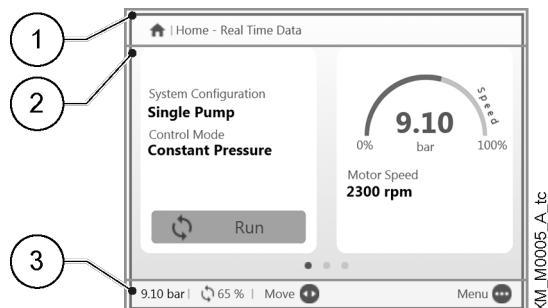

Position number	Name	Description
1	Header bar	It shows static information and messages relating to the operating conditions, such as: <ul style="list-style-type: none"> Alarms Errors Multi-pump operation.
2	Main screen	It shows the main information and allows the operating parameters to be changed. There are up to 5 screens, which can be navigated by pressing the RIGHT and LEFT arrow keys. The symbol <input checked="" type="checkbox"/> next to an entry indicates an editable parameter.
3	Lower bar	Show: <ul style="list-style-type: none"> On the left, the essential operating information, such as the actual adjustment value and the speed percentage at which the unit is operating On the right, the buttons available for interaction in the main screen.

5.1.2 Parameter menu, hydrovar X+

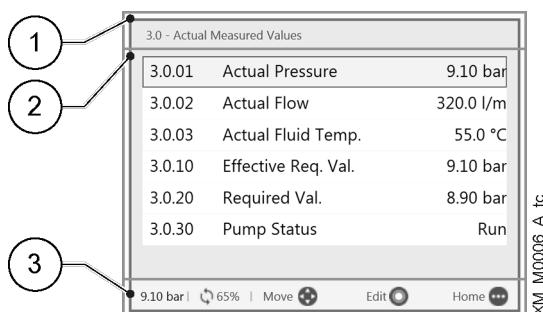

Position number	Name	Description
1	Header bar	It shows the parameter path at menu and submenu level.
2	Parameter list	Show: <ul style="list-style-type: none">• The index,• The name,• The preview of the value of the parameters for the current menu level. To advance a level or change the value, press SEND or the RIGHT arrow key.
3	Lower bar	Show: <ul style="list-style-type: none">• On the left, the essential operating information, such as the actual adjustment value and the speed percentage at which the unit is operating• On the right, the buttons available for interaction in the main screen.

The menu is split into 3 levels:

- Main
- Submenu
- Parameters.

To display or change a parameter:

1. Press the function button in the main screen.
2. Enter the password using the arrow keys.
3. Press SEND.
Note: after 10 minutes of inactivity, the password must be re-entered.
4. Press the RIGHT arrow key or SEND to advance between levels, or the LEFT arrow key to return.

5.1.3 Unit start using the hydrovar X+ drive display

1. Check the connection between the START/STOP and GND inputs on the terminal board.
2. Press ON/OFF to start the unit.
Note: if parameter 1.0.45 Autostart is configured to "Yes", it will not be necessary to press ON/OFF again at the next start.
3. With the unit in operation, the working setpoint can be changed by switching to the second screen.


5.1.4 Operating mode change, hydrovar X+

The unit parameters are set at the factory and the unit is ready for use.

To change parameters and advanced features, access the configuration menu.

1. Press the multi-function button.
2. Enter the password using the arrow keys.
3. Press SEND.
4. Navigate through the menus to locate the parameter or function to be changed.

5.1.5 Error reset, hydrovar X+

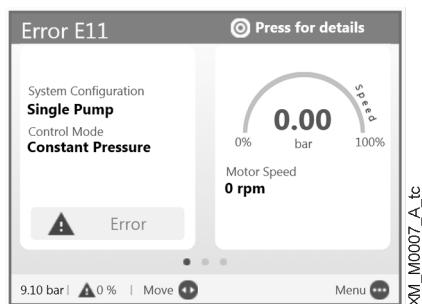


In the event of an error, the unit automatically makes several attempts to reset itself, where permitted: if the attempts are unsuccessful, the unit stops and the display shows the error code.

To eliminate the error:

1. Open the first main screen by pressing SEND.
2. Read the description of the error in the screen.
3. Identify the cause and follow the troubleshooting instructions
4. Reset the error by pressing and holding down ON/OFF for 3 seconds: the unit returns to the status before the error.

5.2 hydrovar X drive display

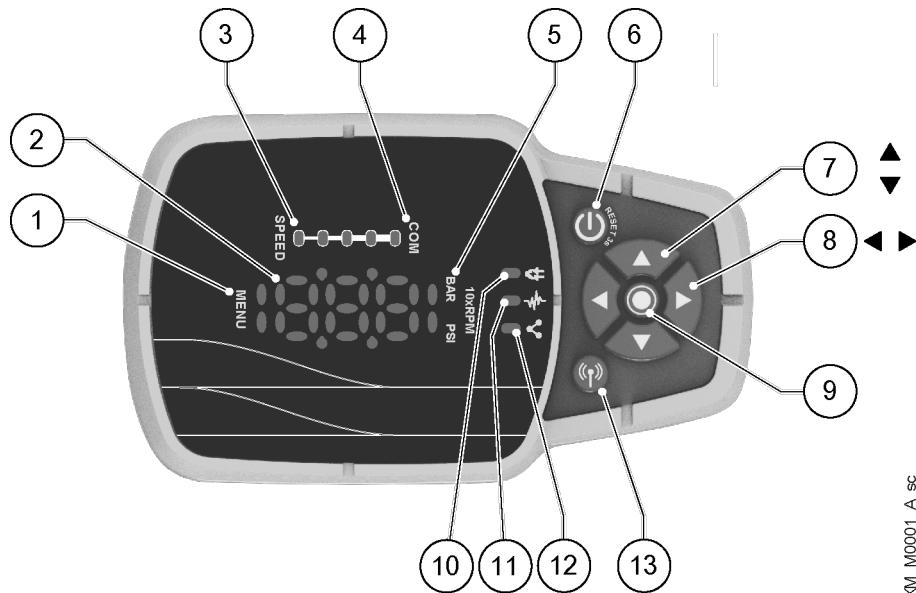

XM_M0001_A_sc

Position number	Name	Function
1	Menu indicator	Indicate: <ul style="list-style-type: none">• Navigation through the menu items (steady light)• The display of a parameter value (flashing light).
2	Seven-segment display	
3	Speed bar	
4	Multi-pump communication indicator	

Position number	Name	Function
5	Unit of measure indicator	
6	ON/OFF button	<ul style="list-style-type: none"> Start and stop the unit Reset the errors by pressing for 5 seconds.
7	UP and DOWN arrow keys	<ul style="list-style-type: none"> Quickly change the setpoint in the main display Navigate through the submenus and change the parameter displayed in the parameter menu Perform a manual switch-over on a multi-pump system by pressing the DOWN arrow (extended pressure) Rotate the display 180° by simultaneously pressing ENTER and the UP arrow (extended pressure).
8	RIGHT and LEFT arrow keys	<ul style="list-style-type: none"> Show speed and pressure in alternation in the main display Navigate the parameter menu levels LEFT arrow only, confirm the changed value Lock and unlock the display by simultaneously pressing the RIGHT and LEFT arrows (extended pressure). RIGHT arrow only, navigate through the active error codes, if more than one are present
9	SEND button	<ul style="list-style-type: none"> Advancing through the menu levels Confirm the value of a parameter Enter the parameter configuration menu (extended pressure).
10	Unit LED on	Indicate that the unit is powered.
11	Unit status LED	Indicate: <ul style="list-style-type: none"> Motor not powered (off) Alarm active and motor stopped (yellow) Unit error and motor stopped (red) Motor started (green) Alarm active and motor started (yellow alternating green).
12	Connection status LED	Indicate: <ul style="list-style-type: none"> BMS communication disabled (off) BMS communication active (green) Wireless communication with mobile device established (fixed blue) Wireless communication with mobile device being established (flashing blue) Wireless communication and BMS communication active (blue alternating green).
13	Wireless technology communication button	Connect the unit to a mobile device.

5.2.1 Main visualization

Glyph	Name	Description
	OFF	Unit stopped with ON/OFF button or BMS. Note: lower priority in relation to STOP.
	STOP	START/STOP and GND digital inputs open.
	Start request	Request to start the unit with the ON/OFF button. It remains active for a few seconds, then the following appears: <ul style="list-style-type: none"> • Unit in operation, or • Alarm, or • Error.
	Alarm	Alarm code of the unit in alarm status, in alternation with the main display. The unit status LED can be: <ul style="list-style-type: none"> • Yellow = motor stopped • Yellow in alternation with green = motor started.
	Error	Error code of the unit in error status.
	Unit in operation	Unit in operation and selected unit of measure display: <ul style="list-style-type: none"> • Speed, 10xRPM • Pressure in bar or psi.
	Display blocked	Display locked by the operator and button operation inhibited.

5.2.2 Parameter menu, hydrovar X

The menu is split into 3 levels:

- Main
- Submenu
- Parameters.

To display or change a parameter:

1. Press the SEND button (extended pressure).
 2. Enter the password using the arrow keys.
 3. Press SEND.
- Note: after 10 minutes of inactivity, the password must be re-entered.
4. Press the UP and DOWN arrow keys to navigate through the menus.
 5. Press SEND or the RIGHT arrow to go to the menu sub-levels until the parameter value is found.
 6. Press the UP and DOWN arrow keys to increase or decrease the parameter value.
 7. Press SEND or the LEFT arrow key to confirm.

Note: after 5 seconds of inactivity, the parameter returns to the previously set value.

Glyph	Name	Notes
	Main menu	<ul style="list-style-type: none"> • Menus numbered from 1 to 9. • Menu indicator: fixed light.
	Submenu	<ul style="list-style-type: none"> • Submenus numbered from 1 to 9. • Menu indicator: fixed light.
	Parameter	Navigation in the parameter level. <ul style="list-style-type: none"> • Parameters numbered from 0 to 99. • Submenus numbered from 1 to 9. • Menu indicator: fixed light.
	Parameter value	Parameter value modification. <ul style="list-style-type: none"> • Menu indicator: light flashing. • Parameter value while editing: flashing.

5.2.3 Unit start using the hydrovar X drive display

1. Check the connection between the START/STOP and GND inputs on the terminal board.
2. Press ON/OFF to start the unit.
Note: if parameter 1.0.45 Autostart is configured to "Yes", it will not be necessary to press ON/OFF again at the next start.
3. With the unit in operation, the control setpoint can be changed with immediate effect using the UP and DOWN arrow keys.

5.2.4 Operating mode change, hydrovar X

- The unit parameters are set at the factory and the unit is ready for use.
To change parameters and advanced features, access the configuration parameters.
1. Press the SEND button (extended pressure).
 2. Enter the password using the arrow keys.
 3. Press SEND.
 4. Select the parameter to be changed in the M01 menu.

5.2.5 Error reset, hydrovar X

In the event of an error, the unit automatically makes several attempts to reset itself, where permitted: if the attempts are unsuccessful, the unit stops and the display shows the error code. To eliminate the error:

1. Identify the cause and follow the troubleshooting instructions
2. Reset the error by pressing and holding down ON/OFF for 3 seconds: the unit returns to the status before the error.

5.3 Xylem X App

Introduction

Available for mobile devices with wireless technology operating system.

Use the App to:

- Check the status of the unit
- Configure parameters
- Interact with the unit and obtain data during installation and maintenance
- Generate a work report
- Contact the assistance service.

Download the App and connect the mobile device with the unit


1. Download the Xylem X App to the mobile device from App Store¹ or Google Play² by scanning the QR code:



¹ Compatible with iOS® operating systems with version 15.0 and above


² Compatible with Android operating systems with version 10.0 and above

2. Complete the registration.

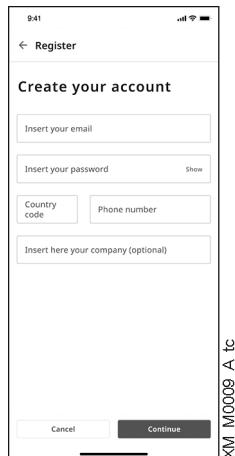


XM_M0009_A_tc

3. On the drive display, press the wireless communication button.
4. Add the unit to the user profile.

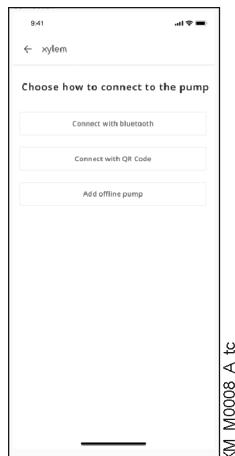

XM_M0008_A_tc

5. When the connection has been established, the connection light turns blue steady: it is now possible to control the unit using the mobile device.

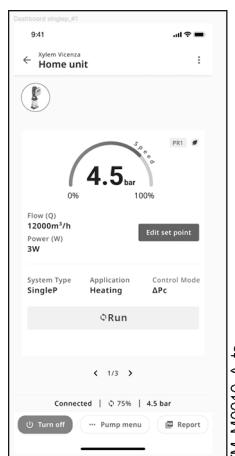

XM_M0010_A_tc

6 Programming

Firmware version

The firmware version can be displayed through parameter P03.4.19.

Symbols used

Symbol	Description
(G)	Global. The change of this parameter in one unit of a multi-pump system is transmitted to all other units. If the symbol is not present, the parameter is only applied to the unit in which it is displayed.
(X+)	Only available on HVX+.
(X)	Only available on HVX.
(A)	Only available on HVX when using the Xylem X app.
(R)	Read only. The parameter cannot be changed. If the symbol is not present, the parameter can be changed.

6.1 M01 Home menu

Frequently used parameters or their aliases.

6.1.1 S01.0 Application

Parameter	Type	Name	Description	Value
P01.0.01	(X+)	Language	Select the display language.	Default = English
P01.0.05	(G)	System Type	Select the system type. 0-Pressurization (P-S): for open-loop systems, i.e. boosting water to a high building 1-Circulation (HV legacy) (C-L): for closed-loop systems, i.e. HVAC	Default = Pressurization
P01.0.06	(G)	Control Mode	Select the control mode for the pump. 0-Actuator (AC): The unit operates as a constant speed actuator. It can only be used for one unit in single operation. 1-Constant Pressure (CP): The unit maintains constant pressure regardless of flow variation. 2-Prop. Press. (PP): The unit increases the pressure setpoint linearly proportional to the flow. 3-Prop. Quad. Press.: The unit increases the pressure setpoint (actual demand value) quadratically proportional to the flow. 4-Constant Flow: The unit varies the motor speed to keep the flow constant. 5-Constant Temp: The unit varies the motor speed to keep the temperature constant. 6-Constant Level: The unit varies the motor speed to keep the level constant (for example in a tank or well). 7-Generic: The unit varies its speed to maintain a constant generic measured quantity.	Default = Constant Pressure

Parameter	Type	Name	Description	Value
P01.0.10	(G)	System Configuration	Select system configuration. 0-Single Pump (S&G): The unit is set up to operate on its own, with no interactions with other units. 1-Serial Cascade (RS485): In this configuration, several units work together, connected via the RS485 interface. Only the last started unit varies its speed, while the already running units operate at maximum speed. 2-Synchronous Cascade (RS485): In this configuration, several units work together, connected via the RS485 interface. All running units operate at the same variable speed.	Default = Single Pump
P01.0.11		Multipump Address	Select the pump address in a multipump system. In a multipump system each unit has an unique address, with value from 1 to 8.	Min = 1 Max = 8 Default = 1
P01.0.15	(G)	Start Value	Define the start value after system stop for no demand, in percentage of the setpoint. In a pressurization system type, if the setpoint is met and there is no more consumption, the pump stops. The pump starts again when the pressure drops below the Restart Value (e.g. if the setpoint is set to 10 bar, a Restart Value set to 90% makes the pump start at 9 bar). Attention: If the value is set too low, (e.g. lower than the incoming pressure) the pump will not start. Value 100% makes this parameter not effective.	Min = 0 % Max = 100 % Default = 100 %
P01.0.20	(G)	Lack Of Water Delay	Select the delay time of the lack of water (LOW) protection. This delay is the time that passes between the opening of the LOW contact and the actual activation of the error "E21 Lack of water (LOW)".	Min = 1 s Max = 100 s Default = 2 s
P01.0.31	(G)	Pressure - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.11 Max = P05.0.12 Default = 0 bar
P01.0.32	(G) (X+)	Flow - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min
P01.0.33	(G) (X+)	Temperature - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.31 Max = P05.0.32 Default = -50 °C
P01.0.34	(G) (X+)	Level - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.41 Max = P05.0.42 Default = 0 m
P01.0.35	(X+)	Generic - Min. Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P01.0.40	(G)	Minimum Threshold Delay	Select the delay time of the minimum threshold protection. This delay is the time given to the system to reach the minimum threshold value: if not reached the unit stops giving the error "E22 Minimum threshold".	Min = 1 s Max = 100 s Default = 2 s

Parameter	Type	Name	Description	Value
P01.0.45	(G)	Auto Start	Select the status of the pump following a power disconnection. 0-No (NO): at the power return the unit is set to OFF. 1-Yes (YES): at the power return, the unit is set to the status that was active prior of the power disconnection.	Default = Yes
P01.0.46		On/Off Set	Select the ON/OFF status of the pump. Corresponds to the action on the ON/OFF button.	Default = Off
P01.0.50	(G) (X+)	Date	Select the unit calendar date.	
P01.0.51	(G) (X+)	Time	Set the unit clock.	

6.1.2 S01.1 Sensors

Parameter	Type	Name	Description	Value
P01.1.00	(G)	Measuring Unit Selection	Select the measuring unit set used by the unit.	Default = SI Units
P01.1.01	(X+)	Actuator - Zero Value	Select the zero value of the regulation feedback sensor.	Min = 0 rpm Max = 9999 rpm Default = 0 rpm
P01.1.02	(X+)	Actuator - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 rpm Max = 9999 rpm Default = 3600 rpm
P01.1.11	(G)	Pressure - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -5 bar*) Max = 10 bar*) Default = 0 bar*)
P01.1.12	(G)	Pressure - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 bar*) Max = 100 bar*) Default = 10 bar*)
P01.1.21	(G) (X+)	Flow - Zero Value	Select the zero value of the regulation feedback sensor.	Min = 0 l/min*) Max = 9999 l/min*) Default = 0 l/min*)
P01.1.22	(G) (X+)	Flow - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 l/min*) Max = 9999 l/min*) Default = 100 l/min*)
P01.1.31	(G) (X+)	Temperature - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -100 °C Max = 9999 °C Default = 0 °C
P01.1.32	(G) (X+)	Temperature - Full Scale	Select the full range of the regulation feedback sensor.	Min = -100 °C Max = 9999 °C Default = 100 °C
P01.1.41	(G) (X+)	Level - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -999 m*) Max = 9999 m*) Default = 0 m*)
P01.1.42	(G) (X+)	Level - Full Scale	Select the full range of the regulation feedback sensor.	Min = -999 m*) Max = 9999 m*) Default = 10 m*)
P01.1.51	(G) (X+)	Generic - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -1000 Max = 1000 Default = 0
P01.1.52	(G) (X+)	Generic - Full Scale	Select the full range of the regulation feedback sensor.	Min = -1000 Max = 1000 Default = 100
P01.1.61	(G) (X+)	SPS Pressure Zero Value	Select the zero value of the pressure sensor used for the Setpoint Shift function.	Min = -1 bar Max = 99 bar Default = 0 bar
P01.1.62	(G) (X+)	SPS Pressure Full Scale	Select the full scale of the pressure sensor used for the Setpoint Shift function.	Min = 0 bar Max = 999 bar Default = 10 bar

*) depending on the pump model

6.1.3 S01.2 Setpoints

Parameter	Type	Name	Description	Value
P01.2.01	(G)	Speed Setpoint 1	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P01.2.02	(G)	Speed Setpoint 2	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P01.2.03	(G) (X+)	Speed Setpoint 3	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P01.2.04	(G) (X+)	Speed Setpoint 4	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P01.2.11	(G)	Pressure Setpoint 1	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P01.2.12	(G)	Pressure Setpoint 2	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P01.2.13	(G) (X+)	Pressure Setpoint 3	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P01.2.14	(G) (X+)	Pressure Setpoint 4	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P01.2.21	(G) (X+)	Flow Setpoint 1	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P01.2.22	(G) (X+)	Flow Setpoint 2	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P01.2.23	(G) (X+)	Flow Setpoint 3	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P01.2.24	(G) (X+)	Flow Setpoint 4	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P01.2.31	(G) (X+)	Temp. Setpoint 1	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P01.2.32	(G) (X+)	Temp. Setpoint 2	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P01.2.33	(G) (X+)	Temp. Setpoint 3	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C

*) depending on the pump model

Parameter	Type	Name	Description	Value
P01.2.34	(G) (X+)	Temp. Setpoint 4	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P01.2.41	(G) (X+)	Level Setpoint 1	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P01.2.42	(G) (X+)	Level Setpoint 2	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P01.2.43	(G) (X+)	Level Setpoint 3	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P01.2.44	(G) (X+)	Level Setpoint 4	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P01.2.51	(G) (X+)	Generic Setpoint 1	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P01.2.52	(G) (X+)	Generic Setpoint 2	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P01.2.53	(G) (X+)	Generic Setpoint 3	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P01.2.54	(G) (X+)	Generic Setpoint 4	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51

*) depending on the pump model

6.1.4 S01.3 Actual Measured Values

Parameter	Type	Name	Description	Value
P01.3.01	(R)	Actual Pressure	Current measured PRESSURE value	-
P01.3.02	(R)	Actual Flow	Current measured FLOW value	-
P01.3.03	(R) (X+)	Actual Fluid Temperature	Current measured FLUID TEMPERATURE value	-
P01.3.04	(R) (X+)	Actual Level	Current measured LEVEL value	-
P01.3.05	(R) (X+)	Actual Generic	Current measured GENERIC value	-
P01.3.10	(G) (R)	Effective Required Value	Current calculated setpoint. This value is the result of proportional or quadratic pressure control, head losses compensation and Setpoint Shift function.	-

6.1.5 S01.4 Jog mode

Parameter	Type	Name	Description	Value
P01.4.01		Jog Speed	Select the speed for the Jog mode. Jog mode is used to run the pump at a specific speed for priming or minimum speed verification.	Min = 0 rpm Max = P04.2.32 Default = 0 rpm
P01.4.02	(G)	Min Speed	Select the pump minimum speed.	Min = 0 rpm*) Max = 2000 rpm*) Default = 800 rpm*)

*) depending on the pump model

6.1.6 S01.5 Security

Parameter	Type	Name	Description	Value
P01.5.10		Password Entry	Enter the password. The default user password is 66.	Min = 0 Max = 999 Default = 0
P01.5.11	(R)	Logout	Logout	-
P01.5.12		Set Password	Set a new password. The password is required to access the menu.	Min = 0 Max = 999 Default = 66

6.2 M02 Error Log

6.2.1 S02.0 Errors

Parameter	Type	Name	Description	Value
P02.0.01	(G) (R)	Error 1 (Most Recent)		-
P02.0.02	(G) (R)	Error 2		-
P02.0.03	(G) (R)	Error 3		-
P02.0.04	(G) (R)	Error 4		-
P02.0.05	(G) (R)	Error 5		-
P02.0.06	(G) (R)	Error 6		-
P02.0.07	(G) (R)	Error 7		-
P02.0.08	(G) (R)	Error 8		-
P02.0.09	(G) (R)	Error 9		-
P02.0.10	(G) (R)	Error 10		-

6.3 M03 Pump information

6.3.1 S03.0 Actual Measured Values

Parameter	Type	Name	Description	Value
P03.0.01	(R)	Actual Pressure	Current measured PRESSURE value	-
P03.0.02	(R)	Actual Flow	Current measured FLOW value	-
P03.0.03	(R) (X+)	Actual Fluid Temperature	Current measured FLUID TEMPERATURE value	-
P03.0.04	(R) (X+)	Actual Level	Current measured LEVEL value	-
P03.0.05	(R) (X+)	Actual Generic	Current measured GENERIC value	-
P03.0.06	(R) (X+)	Actual Shift	Current measured Setpoint Shift X	-
P03.0.10	(G) (R)	Effective Required Value	Current calculated setpoint. This value is the result of proportional or quadratic pressure control, head losses compensation and Setpoint Shift function.	-
P03.0.20	(G) (R)	Required Value	Current setpoint. This value is the current setpoint, before the calculation of proportional or quadratic pressure control, head losses compensation or Setpoint Shift function.	-
P03.0.30	(G) (R)	Pump Status	Display the current status of the unit. 0-Off (OFF): the unit is set to stay still. 1-Run (RUN): the unit is currently running. 2-Alarm, unit stopped (AL5): the unit is currently not running because the START/STOP digital input is open and an alarm is active 3-Alarm, unit running (AL1): the unit is currently running and an alarm is active 4-Alarm, unit on (AL2): the unit is not running but is ready to run, and an alarm is active 5-Alarm, unit off (AL0): the unit is set to stay still and an alarm is active 6-Error (ERR): the unit is not running because an error is active 7-Stop (STOP): the unit is not running because the START/STOP digital input is open 8-On (ON): the unit is not running but is ready to run	-

6.3.2 S03.1 Counters

Parameter	Type	Name	Description	Value
P03.1.01	(G) (R) (A)	Unit Powered Time	Display the total time the unit has spent connected to power.	-
P03.1.02	(G) (R) (A)	Motor Running Time	Display the total time the motor has spent running.	-
P03.1.05	(G) (R) (A)	Energy Counter	Display the total energy used by the unit	-

6.3.3 S03.2 Motor

Parameter	Type	Name	Description	Value
P03.2.01	(G) (R)	Motor Speed	Display the actual motor speed in rpm	-
P03.2.02	(G) (R)	Motor Speed %	Display the actual motor speed in percentage	-
P03.2.05	(G) (R)	Motor Current	Display the actual current drawn by the motor	-
P03.2.06	(G) (R)	Motor Power	Display the actual electric power drawn by the motor	-
P03.2.07	(G) (R)	Motor Voltage	Display the actual voltage provided to the motor	-
P03.2.08	(G) (R)	Grid Voltage	Display the actual voltage provided by the power grid	-
P03.2.09	(G) (R)	DC Bus Voltage	Display the actual DC bus voltage	-
P03.2.20	(G) (R)	Power Module Temperature	Display the actual temperature of the power module. This is the temperature of the electronic component responsible of the current supply to the motor.	-
P03.2.21	(G) (R)	Inverter Temperature	Display the drive actual internal temperature. This is the temperature of the air inside the drive, measured on the electronic board.	-

6.3.4 S03.3 Input/Output Status

Parameter	Type	Name	Description	Value
P03.3.01	(R) (A)	Digital I/O Status	Display the status of the digital inputs and outputs	-
P03.3.11	(R)	Analog Input 1 Value	Display the raw value of the analog input.	-
P03.3.12	(R)	Analog Input 2 Value	Display the raw value of the analog input.	-
P03.3.13	(R) (X+)	Analog Input 3 Value	Display the raw value of the analog input.	-
P03.3.14	(R) (X+)	Analog Input 4 Value	Display the raw value of the analog input.	-
P03.3.20	(R)	Analog Output Value	Display the value of the analog output	-

6.3.5 S03.4 Product information

Parameter	Type	Name	Description	Value
P03.4.01	(R) (A)	Unit Part Number	Display the part number (PN) of the complete pump	-
P03.4.02	(R) (A)	Unit Production Date	Display the production date (PD) of the complete pump	-
P03.4.03	(R) (A)	Unit Serial Number	Display the serial number (SN) of the complete pump	-
P03.4.05	(R) (A)	Drive Production Date	Display the production date (PD) of the drive	-
P03.4.06	(R) (A)	Drive Serial Number	Display the serial number (SN) of the drive	-
P03.4.10	(G) (R) (A)	Hmi Firmware Version	Display the firmware version of the user interface board	-
P03.4.11	(G) (R) (A)	Hmi-Bt Firmware Version	Display the firmware version of the wireless communication board	-
P03.4.12	(G) (R) (A)	Power Card Firmware Version	Display the firmware version of the power board	-
P03.4.13	(G) (R) (A)	Control Card Firmware Version	Display the firmware version of the control board	-
P03.4.14	(R) (A)	Map File Version	Display the version of the map file	-
P03.4.15	(R) (A)	Default File Version	Display the version of the default file	-
P03.4.16	(R) (A)	Parameter File Version	Display the version of the parameter file	-
P03.4.17	(R) (X+)	Language File Version	Display the version of the language file	-
P03.4.19	(R)	Firmware Version	Display the cumulative firmware version of the device	-

6.4 M04 Pump Control

6.4.1 S04.0 Configuration

Parameter	Type	Name	Description	Value
P04.0.01	(G)	System Type	Select the system type. 0-Pressurization (Pr-S): for open-loop systems, i.e. boosting water to a high building 1-Circulation (HV legacy) (Cr-L): for closed-loop systems, i.e. HVAC	Default = Pressurization
P04.0.02	(G)	Control Mode	Select the control mode for the pump. 0-Actuator (AC-L): The unit operates as a constant speed actuator. It can only be used for one unit in single operation. 1-Constant Pressure (CP): The unit maintains constant pressure regardless of flow variation. 2-Prop. Press. (PP): The unit increases the pressure setpoint linearly proportional to the flow. 3-Prop. Quad. Press.: The unit increases the pressure setpoint (actual demand value) quadratically proportional to the flow. 4-Constant Flow: The unit varies the motor speed to keep the flow constant. 5-Constant Temp: The unit varies the motor speed to keep the temperature constant. 6-Constant Level: The unit varies the motor speed to keep the level constant (for example in a tank or well). 7-Generic: The unit varies its speed to maintain a constant generic measured quantity.	Default = Constant Pressure
P04.0.03	(G) (X+)	Regulation Mode	Select the regulation mode. 0-Normal: The motor speed increases when the measured value is below the setpoint, and decreases when the measured value is above the setpoint 1-Inverse: The motor speed increases when the measured value is above the setpoint, and decreases when the measured value is below the setpoint	Default = Normal
P04.0.05	(G)	Start Value	Define the start value after system stop for no demand, in percentage of the setpoint. In a pressurization system type, if the setpoint is met and there is no more consumption, the pump stops. The pump starts again when the pressure drops below the Restart Value (e.g. if the setpoint is set to 10 bar, a Restart Value set to 90% makes the pump start at 9 bar). Attention: If the value is set too low, (e.g. lower than the incoming pressure) the pump will not start. Value 100% makes this parameter not effective.	Min = 0 % Max = 100 % Default = 100 %
P04.0.06	(G)	Auto Start	Select the status of the pump following a power disconnection. 0-No (NO): at the power return the unit is set to OFF. 1-Yes (YES): at the power return, the unit is set to the status that was active prior of the power disconnection.	Default = Yes

Parameter	Type	Name	Description	Value
P04.0.07	(G)	Min Speed Configuration	Select the behaviour of the pump when the minimum speed and the setpoint are reached. If ACTUATOR mode is selected, this parameter selects the behaviour of the pump when the speed setpoint is below the minimum speed. 0-Zero Speed (0): The pump will reach speed 0 and stop 1-Min speed (1): The pump will continue to keep the minimum speed.	Default = Zero Speed
P04.0.09	(G)	Measuring Unit Selection	Select the measuring unit set used by the unit.	Default = SI Units
P04.0.11	(G)	Pressure Measuring Unit	Select the measuring unit.	Default = Bar
P04.0.12	(G) (X+)	Flow Measuring Unit	Select the measuring unit.	Default = m3/h
P04.0.13	(G) (X+)	Temperature Measuring Unit	Select the measuring unit.	Default = °C
P04.0.14	(G) (X+)	Level Measuring Unit	Select the measuring unit.	Default = m
P04.0.15	(G) (X+)	Power Measuring Unit	Select the measuring unit.	Default = kW
P04.0.16	(X+)	Energy Measuring Unit	Select the measuring unit.	Default = kWh
P04.0.21		Setpoint 1 Selection	Select the source for the setpoint 1. 0-Analog (AaA): The setpoint reference is given via one of the analog inputs 1-Parameter (PBr): The setpoint reference is given via one of the dedicated parameter	Default = Parameter
P04.0.22		Setpoint 2 Selection	Select the source for the setpoint. 0-Off (OFF): setpoint not used 1-Analog (AaA): The setpoint reference is given via one of the analog inputs 2-Parameter (PBr): The setpoint reference is given via one of the dedicated parameter	Default = Parameter
P04.0.23	(X+)	Setpoint 3 Selection	Select the source for the setpoint. 0-Off: setpoint not used 1-Analog: The setpoint reference is given via one of the analog inputs 2-Parameter: The setpoint reference is given via one of the dedicated parameter	Default = Parameter
P04.0.24	(X+)	Setpoint 4 Selection	Select the source for the setpoint. 0-Off: setpoint not used 1-Analog: The setpoint reference is given via one of the analog inputs 2-Parameter: The setpoint reference is given via one of the dedicated parameter	Default = Parameter

6.4.2 S04.1 Setpoints

Parameter	Type	Name	Description	Value
P04.1.01	(G)	Speed Setpoint 1	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P04.1.02	(G)	Speed Setpoint 2	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P04.1.03	(G) (X+)	Speed Setpoint 3	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P04.1.04	(G) (X+)	Speed Setpoint 4	Select the value for Setpoint.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P04.1.11	(G)	Pressure Setpoint 1	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P04.1.12	(G)	Pressure Setpoint 2	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P04.1.13	(G) (X+)	Pressure Setpoint 3	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P04.1.14	(G) (X+)	Pressure Setpoint 4	Select the value for Setpoint.	Min = P05.0.11 Max = P05.0.12 Default = 3,5 bar*)
P04.1.21	(G) (X+)	Flow Setpoint 1	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P04.1.22	(G) (X+)	Flow Setpoint 2	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P04.1.23	(G) (X+)	Flow Setpoint 3	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P04.1.24	(G) (X+)	Flow Setpoint 4	Select the value for Setpoint.	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min*)
P04.1.31	(G) (X+)	Temp. Setpoint 1	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P04.1.32	(G) (X+)	Temp. Setpoint 2	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P04.1.33	(G) (X+)	Temp. Setpoint 3	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C

*) depending on the pump model

Parameter	Type	Name	Description	Value
P04.1.34	(G) (X+)	Temp. Setpoint 4	Select the value for Setpoint.	Min = P05.0.31 Max = P05.0.32 Default = 25 °C
P04.1.41	(G) (X+)	Level Setpoint 1	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P04.1.42	(G) (X+)	Level Setpoint 2	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P04.1.43	(G) (X+)	Level Setpoint 3	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P04.1.44	(G) (X+)	Level Setpoint 4	Select the value for Setpoint.	Min = P05.0.41 Max = P05.0.42 Default = 0 m*)
P04.1.51	(G) (X+)	Generic Setpoint 1	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P04.1.52	(G) (X+)	Generic Setpoint 2	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P04.1.53	(G) (X+)	Generic Setpoint 3	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P04.1.54	(G) (X+)	Generic Setpoint 4	Select the value for Setpoint.	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P04.1.60	(G)	Limit setpoint saving	The function limits the number of saves in internal memory. To be enabled in case of continuous writing of the setpoint by the fieldbus.	Default = No

*) depending on the pump model

6.4.3 S04.2 Regulation

Parameter	Type	Name	Description	Value
P04.2.01	(G)	Window	Select the regulation window. This parameter defines a band around the setpoint, as a percentage of the setpoint. When the measured value is out of the window the system will use ramps 1 and 2; when the measured value is inside the window the system will use ramps 3 and 4.	Min = 1 % Max = 100 % Default = 20 %
P04.2.02	(G)	Hysteresis	Select the regulation hysteresis. This parameter defines a band, around the setpoint, that is a percentage of the window. The limits of the hysteresis band define the change between accelerating and decelerating ramps.	Min = 1 % Max = 100 % Default = 90 %

Parameter	Type	Name	Description	Value
P04.2.06	(G)	Lift Speed	Select the speed value at which the setpoint value starts to increase, if a lift amount is set.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm ^{*)}
P04.2.07	(G)	Linear Lift Amount	Select the amount of linear increase of the setpoint at maximum speed, as a percentage of the setpoint, in order to compensate the friction losses. The increase will be linear, starting from 0% when the motor speed is equal to LIFT SPEED, up to LINEAR LIFT AMOUNT when the motor speed is maximum.	Min = 0 % Max = 200 % Default = 0 %
P04.2.08	(G) (X+)	Quad. Lift Amount	Select the amount of quadratic increase of the setpoint at maximum speed, as a percentage of the setpoint, in order to compensate the friction losses. The increase will be quadratic, starting from 0% when the motor speed is equal to LIFT SPEED, up to QUADRATIC LIFT AMOUNT when the motor speed is maximum.	Min = 0 % Max = 999 % Default = 0 %
P04.2.11	(G)	Ramp 1	Select the fast acceleration time. This ramp is used when the motor speed is above the MINIMUM SPEED and the measured value is outside the range defined by the WINDOW.	Min = 1 s ^{*)} Max = 250 s ^{*)} Default = 10 s ^{*)}
P04.2.12	(G)	Ramp 2	Select the fast deceleration time. This ramp is used when the motor speed is above the MINIMUM SPEED and the measured value is outside the range defined by the WINDOW.	Min = 1 s ^{*)} Max = 250 s ^{*)} Default = 10 s ^{*)}
P04.2.13	(G)	Ramp 3	Select the slow acceleration time. This ramp is used when the measured value is inside the range defined by the WINDOW.	Min = 1 s ^{*)} Max = 999 s ^{*)} Default = 70 s ^{*)}
P04.2.14	(G)	Ramp 4	Select the slow deceleration time. This ramp is used when the measured value is inside the range defined by the WINDOW.	Min = 1 s ^{*)} Max = 999 s ^{*)} Default = 70 s ^{*)}
P04.2.15	(G)	Ramp Speed Min Acceleration	Select the minimum speed accelerating ramp time. This ramp is used when the motor speed is below the MINIMUM SPEED	Min = 0,1 s ^{*)} Max = 25 s ^{*)} Default = 2 s ^{*)}
P04.2.16	(G)	Ramp Speed Min Deceleration	Select the minimum speed decelerating ramp time. This ramp is used when the motor speed is below the MINIMUM SPEED	Min = 0,1 s ^{*)} Max = 25 s ^{*)} Default = 2 s ^{*)}
P04.2.31	(G)	Min Speed	Select the pump minimum speed.	Min = 0 rpm ^{*)} Max = 2000 rpm ^{*)} Default = 800 rpm ^{*)}
P04.2.32	(G)	Max Speed	Select the pump maximum speed.	Min = 2000 rpm ^{*)} Max = 4100 rpm ^{*)} Default = 3600 rpm ^{*)}
P04.2.35	(G)	Min Speed Time	Select the delay time the motor stays at minimum speed, before reaching a complete stop. This parameter is only active if parameter MIN SPEED CONFIGURATION is set to "Zero speed".	Min = 0 s Max = 100 s Default = 1 s

^{*)} depending on the pump model

6.4.4 S04.3 Thresholds

Parameter	Type	Name	Description	Value
P04.3.00	(G)	Automatic Error Reset	Select the type of error reset. 0-No (NO): in case of error the unit will stay stopped, waiting for an error reset commanded by the user. 1-Yes (YES): the unit will automatically reset the error, if possible, up to a maximum of 5 times in 1 hour.	Default = Yes
P04.3.01	(G)	Pressure - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.11 Max = P05.0.12 Default = 0 bar
P04.3.02	(G) (X+)	Flow - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.21 Max = P05.0.22 Default = 0 l/min
P04.3.03	(G) (X+)	Temperature - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.31 Max = P05.0.32 Default = -50 °C
P04.3.04	(G) (X+)	Level - Minimum Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.41 Max = P05.0.42 Default = 0 m
P04.3.05	(X+)	Generic - Min. Threshold	Select the minimum threshold limit: if the value is not reached within the parameter P01.0.40 "Minimum threshold delay", then the unit stops giving the error "E22 Minimum threshold".	Min = P05.0.51 Max = P05.0.52 Default = P05.0.51
P04.3.10	(G)	Minimum Threshold Delay	Select the delay time of the minimum threshold protection. This delay is the time given to the system to reach the minimum threshold value: if not reached the unit stops giving the error "E22 Minimum threshold".	Min = 1 s Max = 100 s Default = 2 s
P04.3.11	(G)	Lack Of Water Delay	Select the delay time of the lack of water (LOW) protection. This delay is the time that passes between the opening of the LOW contact and the actual activation of the error "E21 Lack of water (LOW)".	Min = 1 s Max = 100 s Default = 2 s

6.4.5 S04.4 Test Run

Parameter	Type	Name	Description	Value
P04.4.01	(G)	Test Run Speed	Select the motor speed for the test run.	Min = 0 rpm*) Max = P04.2.32 Default = 1200 rpm*)
P04.4.02	(G)	Test Run Timeout	Select the time that have to pass before the test run starts. The pump must be not running for the time set in this parameter in order to start the test run. In order to let the TEST RUN work, the START/STOP digital input must be closed	Min = 0 h Max = 255 h Default = 100 h
P04.4.03	(G)	Test Run Time	Select the duration time of the test run.	Min = 0 s Max = 180 s Default = 5 s
P04.4.05		Test Run Command	Select ON to manually start the test run.	Default = Off

*) depending on the pump model

6.4.6 S04.5 Setpoint Shift

Parameter	Type	Name	Description	Value
P04.5.01	(G) (X+)	SP Shift Function	Select the type of Setpoint Shift function. 0-Off: The Setpoint Shift function is disabled 1-SSV1: The Setpoint Shift function is enabled and only SSV1 (Setpoint Shift Value 1) is used 2-SSV2: The Setpoint Shift function is enabled and only SSV2 (Setpoint Shift Value 2) is used 3-Full: The Setpoint Shift function is enabled and both SSV1 and SSV2 are used	Default = Off
P04.5.02	(G) (X+)	SP Shift Input	Select the magnitude used as reference for the Setpoint Shift function. 0-Setpoint Shift Pressure: The analog input set to Setpoint Shift Pressure 1-Pressure: The analog input set to Pressure 2-Flow: The analog input set to Flow 3-Temperature: Tanalog input set to Temperature 4-Level: The analog input set to Level 5-Generic: The analog input set to Generic	Default = Setpoint Shift Pressure
P04.5.05	(G) (X+)	SP Shift VALUE 1	Select the setpoint value desired for the first section of the Setpoint Shift function	Min = - Max = - Default = 0
P04.5.06	(G) (X+)	SP Shift VALUE 2	Select the setpoint value desired for the second section of the Setpoint Shift function	Min = - Max = - Default = 0
P04.5.10	(G) (X+)	SP Shift X 1	Select the Setpoint Shift input value at which the Setpoint Shift Value 1 starts to shift towards the Setpoint	Min = - Max = P04.5.11 Default = 0
P04.5.11	(G) (X+)	SP Shift X 2	Select the Setpoint Shift input value at which the Setpoint is used	Min = P04.5.10 Max = P04.5.12 Default = 0
P04.5.12	(G) (X+)	SP Shift X 3	Select the Setpoint Shift input value at which the Setpoint value starts to shift towards Setpoint Shift Value 2	Min = P04.5.11 Max = P04.5.13 Default = 0
P04.5.13	(G) (X+)	SP Shift X 4	Select the Setpoint Shift input value at which the Setpoint Shift Value 2 is used	Min = P04.5.12 Max = - Default = 0

6.4.7 S04.6 Pipe filling

Check the filling of the hydraulic system when not pressurised, to avoid water hammer. When enabled, this function starts if the measured pressure is below the *Pipe Filling Threshold* and one of the following cases occurs:

- The unit is switched on
- The start/stop contact switches from open to closed
- The unit is set to ON
- An error is reset.

When the function is active, the unit runs at the minimum speed for the *pipe filling stabilisation time* and the pressure is monitored:

- If during the *stabilisation time* the pressure is constant, the speed is increased by the *pipe filling speed increase* value and the pressure is monitored again for another *stabilisation time*, etc.
- If the pressure is not constant, the speed is not increased
- If the *pipe filling threshold* is reached during the *pipe filling time*, the unit switches to the set standard control.

The *pipe-filling function* parameter allows to disable the function or select the status of the unit if the *pipe-filling threshold* is not reached within the *pipe-filling time*.

Parameter	Type	Name	Description	Value
P04.6.01	(G)	Pipe Filling Function	With this parameter you can disable the Pipe Filling function or select the status of the unit if the Pipe Filling Threshold is not reached. 0-Disabled (d iS): the Pipe Filling function is disabled 1-Alarm (Rt R): the failure of the Pipe Filling function gives the alarm A29 Pipe Filling Alarm and the unit continues to run the function. 2-Error (Err): the failure of the Pipe Filling function gives the error E29 Pipe Filling Error and the unit stops.	Default = Disabled
P04.6.03	(G)	Pipe Filling Threshold	Select the pressure the system has to reach to exit the pipe filling function.	Min = P05.0.11 Max = P05.0.12 Default = 2 bar
P04.6.05	(G)	Pipe Filling Time	Select the maximum time given to the pipe filling function to reach the PIPE FILLING THRESHOLD.	Min = 0 s Max = 999 s Default = 180 s
P04.6.06	(G)	Max Pipe Filling Pumps	Select the number of pumps that will run simultaneously during the pipe filling function.	Min = 1 Max = P06.0.02 Default = 1
P04.6.10	(G)	Pipe Filling Steady Time	Select the time given to the unit to verify if the measured pressure is stable. The pressure is considered stable if its value is within the WINDOW calculated on the setpoint, centered on the pressure measured at the beginning of the current steady time.	Min = 1 s Max = P04.6.05 Default = 5 s
P04.6.15	(G)	Pipe Filling Speed Step	Select the amount of speed, in percentage of the maximum speed, that the unit will add to the current speed if the measured pressure is stable for the PIPE FILLING STEADY TIME.	Min = 5 % Max = 100 % Default = 10 %

6.5 M05 Input/Output Settings

6.5.1 S05.0 Measuring ranges

Parameter	Type	Name	Description	Value
P05.0.00		Actual Value Source	Select the input for the controlled value. 0-Auto AI (PUE): The Actual Value is automatically linked to the Analog Input set to the controlled quantity of the Control Mode 1-Delta AI (d IF): The Actual Value is equal to the absolute difference of two Analog Inputs set to the controlled quantity of the Control Mode 2-Auto AI - Low (LOU): The Actual Value is equal to the lowest value of the Analog Inputs set to the controlled quantity of the Control Mode 3-Auto AI - High (H IG): The Actual Value is equal to the highest value of the Analog Inputs set to the controlled quantity of the Control Mode 4-DI Selection (d IF): The Analog Value is selected via the status of the Digital Input set to function "Sensor 1/2 Selection"	Default = Auto AI
P05.0.01		Actuator - Zero Value	Select the zero value of the regulation feedback sensor.	Min = 0 rpm Max = 9999 rpm Default = 0 rpm
P05.0.02		Actuator - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 rpm Max = 9999 rpm Default = 3600 rpm
P05.0.11	(G)	Pressure - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -5 bar*) Max = 10 bar*) Default = 0 bar*)
P05.0.12	(G)	Pressure - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 bar*) Max = 100 bar*) Default = 10 bar*)
P05.0.21	(G) (X+)	Flow - Zero Value	Select the zero value of the regulation feedback sensor.	Min = 0 l/min*) Max = 9999 l/min*) Default = 0 l/min*)
P05.0.22	(G) (X+)	Flow - Full Scale	Select the full range of the regulation feedback sensor.	Min = 0 l/min*) Max = 9999 l/min*) Default = 100 l/min*)
P05.0.31	(G) (X+)	Temperature - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -100 °C Max = 9999 °C Default = 0 °C
P05.0.32	(G) (X+)	Temperature - Full Scale	Select the full range of the regulation feedback sensor.	Min = -100 °C Max = 9999 °C Default = 100 °C

*) depending on the pump model

Parameter	Type	Name	Description	Value
P05.0.41	(G) (X+)	Level - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -999 m*) Max = 9999 m*) Default = 0 m*)
P05.0.42	(G) (X+)	Level - Full Scale	Select the full range of the regulation feedback sensor.	Min = -999 m*) Max = 9999 m*) Default = 10 m*)
P05.0.51	(G) (X+)	Generic - Zero Value	Select the zero value of the regulation feedback sensor.	Min = -1000 Max = 1000 Default = 0
P05.0.52	(G) (X+)	Generic - Full Scale	Select the full range of the regulation feedback sensor.	Min = -1000 Max = 1000 Default = 100
P05.0.61	(G) (X+)	SPS Pressure Zero Value	Select the zero value of the pressure sensor used for the Setpoint Shift function.	Min = -1 bar Max = 99 bar Default = 0 bar
P05.0.62	(G) (X+)	SPS Pressure Full Scale	Select the full scale of the pressure sensor used for the Setpoint Shift function.	Min = 0 bar Max = 999 bar Default = 10 bar

*) depending on the pump model

6.5.2 S05.1 Analog inputs

Parameter	Type	Name	Description	Value
P05.1.01		Analog Input 1 Function	Select the function for the analog input. 0-Off (OFF): the analog input is disabled 1-Pressure (P-E): A pressure sensor is connected to the analog input 2-Setpoint (SET): A setpoint reference is connected to the analog input 3-Flow: A flow sensor is connected to the analog input 4-Temperature: A temperature sensor is connected to the analog input 5-Level: A level sensor is connected to the analog input 6-Generic: a Generic input is connected to the analog input 7-Setpoint Shift: an input used for the Setpoint Shift function is connected to the analog input	Default = Pressure
P05.1.02		Analog Input 1 Type	Select the type of analog signal connected to the analog input. 0-0÷20 mA 1-4÷20 mA 2-0÷10 V 3-2÷10 V	Default = 4÷20 mA

Parameter	Type	Name	Description	Value
P05.1.11		Analog Input 2 Function	Select the function for the analog input. 0-Off (OFF): the analog input is disabled 1-Pressure (P-E): A pressure sensor is connected to the analog input 2-Setpoint (SET): A setpoint reference is connected to the analog input 3-Flow: A flow sensor is connected to the analog input 4-Temperature: A temperature sensor is connected to the analog input 5-Level: A level sensor is connected to the analog input 6-Generic: a Generic input is connected to the analog input 7-Setpoint Shift: an input used for the Setpoint Shift function is connected to the analog input	Default = Off
P05.1.12		Analog Input 2 Type	Select the type of analog signal connected to the analog input. 0-0÷20 mA 1-4÷20 mA 2-0÷10 V 3-2÷10 V	Default = 4÷20 mA
P05.1.21	(X+)	Analog Input 3 Function	Select the function for the analog input. 0-Off: the analog input is disabled 1-Pressure: A pressure sensor is connected to the analog input 2-Setpoint: A setpoint reference is connected to the analog input 3-Flow: A flow sensor is connected to the analog input 4-Temperature: A temperature sensor is connected to the analog input 5-Level: A level sensor is connected to the analog input 6-Generic: a Generic input is connected to the analog input 7-Setpoint Shift: an input used for the Setpoint Shift function is connected to the analog input	Default = Off
P05.1.22	(X+)	Analog Input 3 Type	Select the type of analog signal connected to the analog input. 0-0÷20 mA 1-4÷20 mA 2-0÷10 V 3-2÷10 V	Default = 4÷20 mA

Parameter	Type	Name	Description	Value
P05.1.31	(X+)	Analog Input 4 Function	Select the function for the analog input. 0-Off: the analog input is disabled 1-Pressure: A pressure sensor is connected to the analog input 2-Setpoint: A setpoint reference is connected to the analog input 3-Flow: A flow sensor is connected to the analog input 4-Temperature: A temperature sensor is connected to the analog input 5-Level: A level sensor is connected to the analog input 6-Generic: a Generic input is connected to the analog input 7-Setpoint Shift: an input used for the Setpoint Shift function is connected to the analog input	Default = Off
P05.1.32	(X+)	Analog Input 4 Type	Select the type of analog signal connected to the analog input. 0-0÷20 mA 1-4÷20 mA 2-0÷10 V 3-2÷10 V	Default = 4÷20 mA
P05.1.40	(X+)	Sensor Curve	Select the mathematical function (curve) to determine the Actual Value based on the Sensor signal, when used for flow sensor. 0-Linear: Suitable for flow sensors with analog signal linearly proportional to the measured flow. 1-Quadratic: Suitable for flow control using an orifice plate with a differential pressure sensor or 2 pressure sensors, where the measured value is quadratically proportional to the flow.	Default = Linear
P05.1.50		Analog Actuator Type	Select the type of actuator profile to be used when the setpoint for the actuator mode is set to analog input. 0-Hydrovar HVL (H'L'): The profile is the same used in the Hydrovar HVL, see dedicated chart 1-Manual: The profile can be tuned using the dedicated parameters.	Default = Hydrovar HVL

6.5.3 S05.2 Digital inputs

Parameter	Type	Name	Description	Value
P05.2.03	Digital Input 3	Digital Input 3 Function	Select the function for the Digital Input. 0-Disabled (d !5): function not used 1-Setpoint Switch: Use the digital input to switch between Setpoints. 2-Sensor 1/2 Selection (S i2): Use the digital input to switch between Analog Sensor 1 and Analog Sensor 2. 3-Min. Speed (n ln): Close the digital input to run the motor at minimum speed 4-Max Speed: Close the digital input to run the motor at maximum speed 5-Solo Run (Sr n): Close the digital input to run the motor at maximum speed bypassing most of the errors. 6-Error Reset (r ES): Close the digital input to reset the error condition 7-External Error (EEC): Open the digital input to activate the error condition "E16 External D.I. error" 8-External Alarm (ERC): Open the digital input to activate the alarm condition "A16 External D.I. alarm"	Default = Solo Run
P05.2.04	(X+)	Digital Input 4 Function	Select the function for the Digital Input. 0-Disabled: function not used 1-Setpoint Switch: Use the digital input to switch between Setpoints. 2-Sensor 1/2 Selection: Use the digital input to switch between Analog Sensor 1 and Analog Sensor 2. 3-Min. Speed: Close the digital input to run the motor at minimum speed 4-Max Speed: Close the digital input to run the motor at maximum speed 5-Solo Run: Close the digital input to run the motor at maximum speed bypassing most of the errors. 6-Error Reset: Close the digital input to reset the error condition 7-External Error: Open the digital input to activate the error condition "E16 External D.I. error" 8-External Alarm: Open the digital input to activate the alarm condition "A16 External D.I. alarm"	Default = Disabled
P05.2.05	(X+)	Digital Input 5 Function	Select the function for the Digital Input. 0-Disabled: function not used 1-Setpoint Switch: Use the digital input to switch between Setpoints. 2-Sensor 1/2 Selection: Use the digital input to switch between Analog Sensor 1 and Analog Sensor 2. 3-Min. Speed: Close the digital input to run the motor at minimum speed 4-Max Speed: Close the digital input to run the motor at maximum speed 5-Solo Run: Close the digital input to run the motor at maximum speed bypassing most of the errors. 6-Error Reset: Close the digital input to reset the error condition 7-External Error: Open the digital input to activate the error condition "E16 External D.I. error" 8-External Alarm: Open the digital input to activate the alarm condition "A16 External D.I. alarm"	Default = Disabled

6.5.4 S05.3 Analog output

Parameter	Type	Name	Description	Value
P05.3.01		Analog Output Function	Select the Analog Output function. 0-Actual value (U _{RL}): The Analog Output replicates the current measured value 1-Effective required value (EFF): The Analog Output replicates the Effective Required Value 2-Motor speed (SPd): The Analog Output replicates the current motor speed 3-Motor load (P _{ur}): The Analog Output replicates the current motor power 4-Motor current: The Analog Output replicates the actual current drained from the motor 5-AN1 value (R _{n1}): The Analog Output replicates the value read on analog input 1 6-AN2 value (R _{n2}): The Analog Output replicates the value read on analog input 2 7-AN3 value: The Analog Output replicates the value read on analog input 3 8-AN4 value: The Analog Output replicates the value read on analog input 4 9-Temperature: The Analog Output replicates the value of measured fluid temperature 10-Flow rate: The Analog Output replicates the current measured flow 11-SPS Input Value: The Analog Output replicates the current value of the analog input used for the Setpoint Shift function	Default = Motor speed
P05.3.02		Analog Output Type	Select the Analog Output type. 0-0÷20 mA 1-4÷20 mA 2-0÷10 V 3-2÷10 V	Default = 4÷20 mA

6.5.5 S05.4 Digital outputs

Parameter	Type	Name	Description	Value
P05.4.01		Relay 1 Function	Select the function of the Relay. 0-Off (OFF): the Relay is disabled 1-Power (P _{ur}): the relay is active when the unit is connected to the power supply 2-Running (R _{UN}): the relay is active when the motor is running 3-Motor Heating (M _{HE}): the relay is active when the motor heating function is active 4-Error (ERR): the relay is active when no errors are active 5-Alarm or Error (ALR): the relay is active when no alarms or errors are active 6-On (ON): the relay is active when the unit is in status ON (not running but ready to run) 7-Error Reset (R _{ES}): the relay is active when the parameter "Automatic Error Reset" is set to YES and the maximum number of automatic reset has been reached	Default = Error

Parameter	Type	Name	Description	Value
P05.4.02		Relay 2 Function	<p>Select the function of the Relay.</p> <p>0-Off (OFF): the Relay is disabled 1-Power (PWR): the relay is active when the unit is connected to the power supply 2-Running (-RUN): the relay is active when the motor is running 3-Motor Heating (MHE): the relay is active when the motor heating function is active 4-Error (ERR): the relay is active when no errors are active 5-Alarm or Error (ALR): the relay is active when no alarms or errors are active 6-On (ON): the relay is active when the unit is in status ON (not running but ready to run) 7-Error Reset (-RES): the relay is active when the parameter "Automatic Error Reset" is set to YES and the maximum number of automatic reset has been reached</p>	Default = Running

6.5.6 S05.8 Calibrations

Parameter	Type	Name	Description	Value
P05.8.01		Analog Input 1 Offset	Select the offset at zero value for the Analog Input 1	Min = -10 Max = 10 Default = 0
P05.8.02		Analog Input 1 Gain	Select the gain for Analog Input 1	Min = 0 Max = 1,5 Default = 1
P05.8.11		Analog Input 2 Offset	Select the offset at zero value for the Analog Input 1	Min = -10 Max = 10 Default = 0
P05.8.12		Analog Input 2 Gain	Select the gain for Analog Input 1	Min = 0 Max = 1,5 Default = 1
P05.8.21	(X+)	Analog Input 3 Offset	Select the offset at zero value for the Analog Input 1	Min = -10 Max = 10 Default = 0
P05.8.22	(X+)	Analog Input 3 Gain	Select the gain for Analog Input 1	Min = 0 Max = 1,5 Default = 1
P05.8.31	(X+)	Analog Input 4 Offset	Select the offset at zero value for the Analog Input 1	Min = -10 Max = 10 Default = 0
P05.8.32	(X+)	Analog Input 4 Gain	Select the gain for Analog Input 1	Min = 0 Max = 1,5 Default = 1
P05.8.40	(X+)	Flow Sensor Offset	Select the offset at zero value for the embedded flow sensor	Min = -10 Max = 10 Default = 0
P05.8.41	(X+)	Flow Sensor Gain	Select the gain for the embedded flow sensor	Min = 0 Max = 1,5 Default = 1
P05.8.42	(X+)	Temperature Sensor Offset	Select the offset at zero value for the embedded temperature sensor	Min = -10 °C Max = 10 °C Default = 0 °C
P05.8.43	(X+)	Temperature Sensor Gain	Select the gain for the embedded temperature sensor	Min = 0 °C Max = 1,5 °C Default = 1 °C

6.6 M06 Multipump

6.6.1 S06.0 Configuration

Parameter	Type	Name	Description	Value
P06.0.01	(G)	System Configuration	Select system configuration. 0-Single Pump (S _n G): The unit is set up to operate on its own, with no interactions with other units. 1-Serial Cascade (FSE): In this configuration, several units work together, connected via the RS485 interface. Only the last started unit varies its speed, while the already running units operate at maximum speed. 2-Synchronous Cascade (FSY): In this configuration, several units work together, connected via the RS485 interface. All running units operate at the same variable speed.	Default = Single Pump
P06.0.02	(G)	Max Units	Select the maximum number of units that operate simultaneously in the multipump system.	Min = 1 Max = - Default = 6
P06.0.03		Multipump Address	Select the pump address in a multipump system. In a multipump system each unit has an unique address, with value from 1 to 8.	Min = 1 Max = 8 Default = 1
P06.0.04	(R) (A)	Multipump Map	Display the map of the units that could be part of the multipump	-
P06.0.05	(R)	Multipump Priority	Display the multipump priority	-

6.6.2 S06.1 Regulation

Parameter	Type	Name	Description	Value
P06.1.11	(G)	Pressure - Inc. value	Select the multipump actual value increase. This value, in conjunction with the actual value decrease, will be used to calculate the effective required value in a multipump system.	Min = 0 bar*) Max = P05.0.12 Default = 0,35 bar*)
P06.1.12	(G)	Pressure - Dec. value	Select the multipump actual value decrease. This value, in conjunction with the actual value increase, will be used to calculate the effective required value in a multipump system.	Min = 0 bar*) Max = P05.0.12 Default = 0,15 bar*)
P06.1.21	(G) (X+)	Flow - Inc. value	Select the multipump actual value increase. This value, in conjunction with the actual value decrease, will be used to calculate the effective required value in a multipump system.	Min = 0 l/min*) Max = P05.0.22 Default = 0,35 l/min*)
P06.1.22	(G) (X+)	Flow - Dec. value	Select the multipump actual value decrease. This value, in conjunction with the actual value increase, will be used to calculate the effective required value in a multipump system.	Min = 0 l/min*) Max = P05.0.22 Default = 0,15 l/min*)
P06.1.31	(G) (X+)	Temperature - Inc. value	Select the multipump actual value increase. This value, in conjunction with the actual value decrease, will be used to calculate the effective required value in a multipump system.	Min = 0 °C Max = P05.0.32 Default = 1,5 °C

Parameter	Type	Name	Description	Value
P06.1.32	(G) (X+)	Temperature - Dec. value	Select the multipump actual value decrease. This value, in conjunction with the actual value increase, will be used to calculate the effective required value in a multipump system.	Min = 0 °C Max = P05.0.32 Default = 1,5 °C
P06.1.41	(G) (X+)	Level - Inc. value	Select the multipump actual value increase. This value, in conjunction with the actual value decrease, will be used to calculate the effective required value in a multipump system.	Min = 0 m*) Max = P05.0.42 Default = 0,35 m*)
P06.1.42	(G) (X+)	Level - Dec. value	Select the multipump actual value decrease. This value, in conjunction with the actual value increase, will be used to calculate the effective required value in a multipump system.	Min = 0 m*) Max = P05.0.42 Default = 0,15 m*)
P06.1.51	(X+)	Generic - Inc. value	Select the multipump actual value increase. This value, in conjunction with the actual value decrease, will be used to calculate the effective required value in a multipump system.	Min = 0 Max = P05.0.52 Default = 1,5
P06.1.52	(X+)	Generic - Dec. value	Select the multipump actual value decrease. This value, in conjunction with the actual value increase, will be used to calculate the effective required value in a multipump system.	Min = 0 Max = P05.0.52 Default = 1,5
P06.1.61	(G)	Multipump Enable Speed	Select the desired release speed for the following pumps. The next pump starts when the below conditions are matched: - the motor speed reaches the MULTIPUMP ENABLE SPEED - the actual value drops below SETPOINT-ACTUAL VALUE DECREASE.	Min = P04.2.31 Max = P04.2.32 Default = 3000 rpm*)
P06.1.71	(G)	Synchronous Limit	Select the speed limit for the multipump cascade synchronous. The pump with priority P2 will shut off if its speed goes below this value.	Min = 0 rpm*) Max = 3600 rpm*) Default = 840 rpm*)
P06.1.72	(G)	Synchronous Window	Select the speed window for the multipump cascade synchronous. The pump with priority P3 will shut off when its speed goes below SYNCHRONOUS LIMIT + SYNCHRONOUS WINDOW, P4 will shut off when its speed goes below SYNCHRONOUS LIMIT + 2 x SYNCHRONOUS WINDOW, and so on.	Min = 0 rpm Max = P04.2.32 Default = 150 rpm
P06.1.81	(G)	Automatic Switchover Interval	Select the timeout for the automatic switchover: it allows an automatic change-over of the MASTER pump and the assist pumps. As soon as the timeout is elapsed, the next pump becomes MASTER and the counter restarts; this gives even wear and similar operating hours to all pumps. The switchover interval is active as long as the MASTER does not stop.	Min = 0 h Max = 250 h Default = 24 h

*) depending on the pump model

6.7 M07 Inverter

6.7.1 S07.0 Switching Frequency Settings

Parameter	Type	Name	Description	Value
P07.0.01		Max Switching Frequency	Select the maximum switching frequency of the inverter modulation. Range: 2 ÷ 16 KHz	Default = 16 KHz
P07.0.02		Min Switching Frequency	Select the minimum switching frequency the unit will use. Default = 4 KHz In case of overheating, the unit will automatically decrease the switching frequency down to this value.	

6.7.2 S07.1 Skip Speed Function

Parameter	Type	Name	Description	Value
P07.1.01	(G)	Skip Speed Center	Select the center of the speed band that will be avoided by the motor.	Min = P04.2.31 Max = P04.2.32 Default = 2000 rpm*)
P07.1.02	(G)	Skip Speed Range	Select the range of the speed band that will be avoided by the motor.	Min = 0 rpm Max = 300 rpm Default = 0 rpm

*) depending on the pump model

6.7.3 S07.2 Motor Heating

Parameter	Type	Name	Description	Value
P07.2.01	(G)	Motor heating function	Select to enable the motor heating function. When this function is enabled, if the motor is not running and the inverter temperature decreases below the motor heating temperature (7.2.03), a current flows to the motor to avoid icing. This current flow does not make the motor rotate. 0-Off (OFF): the motor heating function is disabled 1-On (ON): the motor heating function is enabled and starts running when the motor is not running and the inverter temperature is below the Motor Heating Temperature (7.2.03) 2-Always On (ALWAYS ON): the motor heating function is always running when the motor is not running, independently from the inverter temperature	Default = Off
P07.2.02		Motor heating current	Select the amount of current, in percentage of the maximum current, that will flow through the motor when the motor heating function is running.	Min = 0 %*) Max = 100 %*) Default = 50 %*)
P07.2.03	(G)	Motor heating temperature	Select the temperature below which the motor heating function will run. This parameter is active only if Motor heating function (7.2.01) is set to ON	Min = -5 °C Max = 30 °C Default = 0 °C

*) depending on the pump model

6.8 M08 Communication

6.8.1 S08.0 Ports

Parameter	Type	Name	Description	Value
P08.0.01		Com 1 Function	Select the function for the communication port 1 (RS 485.1). 0-Disabled (d iS): The communication port is not active 1-Modbus RTU (Mod): The protocol selected is MODBUS RTU and the unit acts as Modbus slave 2-BACnet MS/TP (bAC): The protocol selected is BACnet MS/TP 3-Multipump (MP): The protocol selected is the Hydrovar X Multipump protocol	Default = Multipump
P08.0.02		Com 2 Function	Select the function for the communication port 2 (RS 485.2). 0-Disabled (d iS): The communication port is not active 1-Modbus RTU (Mod): The protocol selected is MODBUS RTU and the unit acts as Modbus slave 2-BACnet MS/TP (bAC): The protocol selected is BACnet MS/TP	Default = Modbus RTU

6.8.2 S08.1 Modbus RTU

Parameter	Type	Name	Description	Value
P08.1.01		Modbus RTU Address	Select the unit address in the Modbus RTU network.	Min = 0 Max = 127 Default = 1
P08.1.02		Modbus RTU Baudrate	Select the unit network baudrate in order to match the baudrate of the Modbus RTU master.	Default = 115200
P08.1.08		Modbus RTU Format	Select the unit network format in order to match the format of the Modbus RTU master.	Default = 8N1

6.8.3 S08.2 Bacnet MS/TP

Parameter	Type	Name	Description	Value
P08.2.01		BACnet MS/TP Mac Address	Select the unit address in the RS-485 network.	Min = 0 Max = P08.2.05 Default = 1
P08.2.02		BACnet MS/TP Baudrate	Select the unit network baudrate in order to match the baudrate of the other BACnet MS/TP devices in the network.	Default = 38400
P08.2.03		BACnet MS/TP Format	Select the unit network format in order to match the format of the other BACnet MS/TP devices in the network.	Default = 8N1
P08.2.04		BACnet MS/TP Device Id	Select the BACnet MS/TP device ID	Min = - Max = 4194304 Default = 84003
P08.2.05		BACnet MS/TP Max Master	Select the BACnet MS/TP maximum number of masters	Min = P08.2.01 Max = 127 Default = 127

6.8.4 S08.3 Wireless Communication

Parameter	Type	Name	Description	Value
P08.3.01		Enable Wireless Communication	Select the activation of the wireless communication service. Default = On 0-Off (OFF): The wireless communication is disabled and the unit cannot be connected to a smartphone 1-On (ON): The wireless communication is active and the unit can be connected to a smartphone running the dedicated app	

6.9 M09 General Settings

6.9.1 S09.0 Localization

Parameter	Type	Name	Description	Value
P09.0.01	(X+)	Language	Select the display language.	Default = English
P09.0.11	(G) (X+)	Date	Select the unit calendar date.	
P09.0.12	(G) (X+)	Time	Set the unit clock.	

6.9.2 S09.1 Display

Parameter	Type	Name	Description	Value
P09.1.01		Display Energy Saving	Select the status of the display energy saving function. 0-Off (OFF): The unit will keep the display always active 1-On (ON): The unit will dim the display after the ENERGY SAVING TIME is elapsed	Default = On
P09.1.02		Energy Saving Time	Select the time in minutes that must pass from the last keyboard action before the display dims.	Min = 60 s Max = 999 s Default = 600 s
P09.1.10		Display Orientation	Select the display orientation. 0-6 O'Clock (6): The display has the correct orientation for an horizontal pump 1-12 O'Clock (12): The display has the correct orientation for a vertical pump	Default = 6 O'Clock*
P09.1.11		Max Decimals	Set the maximum number of decimal points for values to be shown in the homepage	Min = 0 Max = 3 Default = 3

*) depending on the pump model

6.9.3 S09.3 Factory Settings

Parameter	Type	Name	Description	Value
P09.3.01		Error Log Reset	Select YES to reset the error log.	Default = No
P09.3.02		Operating Time Counter Reset	Select YES to reset the operating time counter	Default = No
P09.3.03		Motor Running Counter Reset	Select YES to reset the motor running time counter	Default = No
P09.3.04		Energy Counter Reset	Select YES to reset the energy counter	Default = No
P09.3.05		Factory Restore	Select YES to restore the unit to factory default parameters	Default = No
P09.3.06	(G) (X+)	Commissioning Completed	Select if the Genie procedure is completed.	Default = No
P09.3.07		Bonded Device List Reset	Select Yes to reset the bluetooth bonded device list	Default = No
P09.3.10		Upgrade Control Card	Upgrade Control Card	Default = No

6.9.4 S09.4 Security

Parameter	Type	Name	Description	Value
P09.4.01		Password Entry	Enter the password. The default user password is 66.	Min = 0 Max = 999 Default = 0
P09.4.02	(R)	Logout	Logout	-
P09.4.03		Set Password	Set a new password. The password is required to access the menu.	Min = 0 Max = 999 Default = 66
P09.4.10		Key Lock	Select the activation of the key lock. Possible selections are: 0-No (NO): The key buttons are always active. 1-Yes (YES): After the Energy Saving Time is elapsed, the arrow and wireless communication buttons are locked. ON/OFF button is still active. 2-Yes - Password (YES): After the Energy Saving Time is elapsed, all buttons are locked. Inserting the password is required to unlock the buttons. Attention: also On/Off button is locked, therefore an external Start/Stop contact is recommended.	Default = No

7 Modbus RTU

7.1 Communication

The unit uses the RS485 serial interface, which defines:

- The connection pins
- The wiring
- The signal levels
- The transmission baud rates
- The parity check.

Controllers communicate with a master-client solution, where only the master can initiate a transfer, or polling. The other devices (client) respond by providing the master with the requested data, or by terminating the action requested in the query.

7.2 Transmission

Function not supported.

7.3 Data Protection

Standard Modbus serial networks use two types of error checks:

- The parity check (even or odd), which can be applied optionally to each character
- The frame check (LRC or CRC), applied to the entire message.

Both the parity check and the frame check are generated in the master device and applied to the message content before transmission.

The client device checks each character and the entire message frame during reception.

7.4 Protocol transmission modes

The data managed by the unit can be accessed considering the Modbus virtual memory, consisting of Holding Registers for all values.

When setting the parameters of the S08.0 Ports menu, the Modbus RTU protocol transmission mode is available.

The serial port communication parameters:

- P08.0.01 Address
- P08.0.02 Baud rate
- P08.0.08 Format

must be selected according to the network configuration.

NOTE:

The mode and serial parameters must be the same for all devices in the Modbus network.

When setting P08.0.08 Format parameter, the following modes are available:

- 8N1 1 start bit, 8 data bits, 1 stop bit, no parity
- 8N2 1 start bit, 8 data bits, 2 stop bits, no parity
- 8E1 1 start bit, 8 data bits, 1 stop bit, even parity
- 8O1 1 start bit, 8 data bits, 1 stop bit, odd parity.

The default configuration of the serial port is:

- P08.0.01 Address=1
- P08.0.02 Baud rate=115200
- P08.0.08 Format=8N1.

7.5 Supported function codes

The Modbus protocol function codes implemented in the unit are:

- Read Holding Registers (hex code 0x03), to read both Holding Registers representing Parameters and Information
- Write Multiple Registers (hex code 0x10), to write Holding Registers representing the Parameters.

7.5.1 Example 1

0x03 Read Holding Registers - READ COMMAND reads the binary content of holding registers in the client.

Note: Modbus registers are addressed from zero, for example, a Holding Register indexed as 0xBB must be addressed as 0XBBA.

Example: Current Pressure Reading

Query

Client address	0x01
Function	0x03 Read Holding Register
Starting address High	0x0B
Starting address Low	0xB9 => 3001 DEC => Modbus address of current pressure (FLOAT32)
Number of points High	0x00
Number of points Low	0x02 Reading of two registers as FLOAT32
CRC Error Check-High	0x17
CRC Error Check-Low	0xCA CRC-Checksum generated

Response

Client address	0x01
Function	0x03
Byte count	0x04
Data High	0x40
Data Low	0xA0
Data High	0x00
Data Low	0x00
CRC Error Check-High	0xEF => 0x40A00000 HEX = 5.2f FLOAT32 => Actual value = 5.2 bar
CRC Error Check-Low	0xD1 CRC-Checksum generated

7.5.2 Example 2

0x10 Write Multiple Registers - WRITE COMMAND writes values in a block of contiguous registers.

Note: Modbus registers are addressed from zero, e.g. a Holding Register indexed as 0x1074 must be addressed as 0x1073.

Example: set Ramp 1 and Ramp 2 to 25 s, Ramp 3 and Ramp 4 to 100 s.

Query

Client address	0x01
Function	0x10 Write Multiple Registers
Starting address High	0x10
Starting address Low	0x74 => 4211 DEC => the first register is Ramp 1
Registers Quantity High	0x00
Registers Quantity Low	0x04 a total of 4 registers (Ramp 1 to Ramp 4) to be written
Byte Count	0x08 2 * Quantity of Registers
Reg Value High	0x00
Reg Value Low	0x19 => 19 HEX = 25 DEC => set ramp 1 to 25 sec
Reg Value High	0x00
Reg Value Low	0x19 => 19 HEX = 25 DEC => set ramp 2 to 25 sec
Reg Value High	0x00
Reg Value Low	0x64 => 64 HEX = 100 DEC => set ramp 3 to 100 sec
Reg Value High	0x00
Reg Value Low	0x64 => 64 HEX = 100 DEC => set ramp 4 to 100 sec
CRC Error Check-High	0xED
CRC Error Check-Low	0x6D CRC-Checksum generated

Response

Client address	0x01
Function	0x10
Starting address High	0x00
Starting address Low	0xCA
Registers Quantity High	0x00
Registers Quantity Low	0x04 a total of 4 registers (Ramp 1 to Ramp 4) written
CRC Error Check-High	0xF4
CRC Error Check-Low	0xE1 CRC-Checksum generated

7.6 Connections and data management, Modbus RTU

For detailed information on the installation, wiring and configuration of the unit, please refer to the Additional Installation, Operation and Maintenance Instructions manual.


- When Modbus RTU communication between the drive and an external device is active, the drive display connection status light comes on.
- Set parameter *P04.1.60 Limit setpoint saving* to *Yes* to write to the volatile memory area and extend the life of the non-volatile EEPROM memory.

NOTE:

Do not connect terminal (C) of the control board to different voltage potentials or PE.

Connect a single pump unit to an external device


1. Remove the cover of the drive and observe the wiring diagrams inside.
2. Connect terminals 31 (B), 32 (A) and 33 (C) to the external device, for example PLC, BMS, etc.

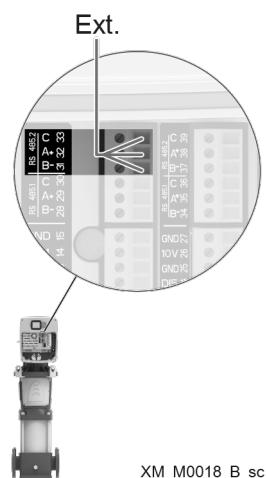

Connecting a multi-pump system to an external device

Multi-pump mode allows the connection of two or three motor drives in Multi-Master Multi-Pump configuration.

- Each unit of the booster set has its own unique Modbus address and provides a complete list of registers to the external device
- Parameter P08.1.01 Address must be set to a unique value on each unit of the booster set. Parameter P08.1.01 Address consists of the unit identification number in the Modbus network.
- Terminals 31 (B), 32 (A) and 33 (C) are used by default for communication with an external control device (e.g. PLC, BMS, etc.).
- To facilitate cascade connections of RS485 port signals, the terminals for each port are replicated on two connector rows.
- RS485.2 port signals are replicated on both terminal combination 31-31-33 and terminal combination 37-38-39.

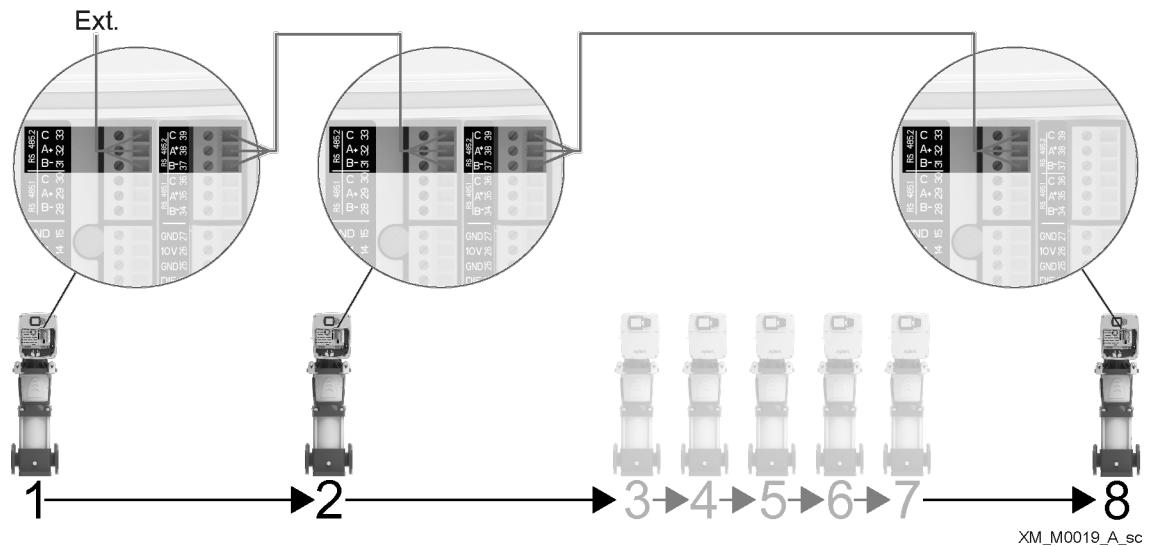

As the drive is also connected in a multi-pump system, special care must be taken in case an external device (through Modbus protocol) requests to read and write drive parameters.

In particular:

- In a multi-pump system, in response to a "Read Registers" request on the Modbus, each unit only returns its own parameters to the external device, and not those of the other connected drives in the booster set.
- In a multi-pump system, "Write Registers" requests on the Modbus must be sent from the external device to all the connected units, even if the parameters to be written are "Global" (for the booster set).

7.7 List of registers

Modbus Register	Menu ID	Name	R/W	Type	Dimension	Min	Max
0	-	Start/Stop: 0-Stop 1-Start	R/W	ENUM	-	0	1
1	-	Error Reset Command	R/W	ENUM	-	0	1
2001	P02.0.01	Error 1 (Most Recent)	R	UINT16	-	-	-
2002	-	Error 1 - Date	R	UINT32	-	-	-
2004	-	Error 1 - Time	R	UINT32	-	-	-
2006	-	Error 1 - End Date	R	UINT32	-	-	-
2008	-	Error 1 - End Time	R	UINT32	-	-	-
2010	-	Log: Error Counter	R	UINT16	-	-	-
2011	-	Log: Error 1 Bitfield	R	UINT32	-	-	-
2013	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2015	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2017	-	LogSpeed	R	UINT32	-	-	-
2019	-	Log: Error Code	R	UINT32	-	-	-
2021	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2023	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
2025	-	Log: Power Module Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2027	-	Log: Motor Current	R	FLOAT32	A	-	-
2029	-	Log: Motor Voltage	R	FLOAT32	V	-	-
2031	-	Log: Inverter Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2033	-	LogPower	R	FLOAT32	-	-	-

2035	-	Log: DC Bus Voltage	R	FLOAT32	V	-	-
2037	-	Log: Grid Voltage	R	FLOAT32	V	-	-
2039	P02.0.02	Error 2	R	UINT16	-	-	-
2040	-	Error 2 - Date	R	UINT32	-	-	-
2042	-	Error 2 - Time	R	UINT32	-	-	-
2044	-	Error 2 - End Date	R	UINT32	-	-	-
2046	-	Error 2 - End Time	R	UINT32	-	-	-
2048	-	Log: Error Counter	R	UINT16	-	-	-
2049	-	Log: Error 1 Bitfield	R	UINT32	-	-	-
2051	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2053	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2055	-	LogSpeed	R	UINT32	-	-	-
2057	-	Log: Error Code	R	UINT32	-	-	-
2059	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2061	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
2063	-	Log: Power Module Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2065	-	Log: Motor Current	R	FLOAT32	A	-	-
2067	-	Log: Motor Voltage	R	FLOAT32	V	-	-
2069	-	Log: Inverter Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2071	-	LogPower	R	FLOAT32	-	-	-
2073	-	Log: DC Bus Voltage	R	FLOAT32	V	-	-
2075	-	Log: Grid Voltage	R	FLOAT32	V	-	-
2077	P02.0.03	Error 3	R	UINT16	-	-	-
2078	-	Error 3 - Date	R	UINT32	-	-	-
2080	-	Error 3 - Time	R	UINT32	-	-	-
2082	-	Error 3 - End Date	R	UINT32	-	-	-
2084	-	Error 3 - End Time	R	UINT32	-	-	-
2086	-	Log: Error Counter	R	UINT16	-	-	-
2087	-	Log: Error 1 Bitfield	R	UINT32	-	-	-
2089	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2091	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2093	-	LogSpeed	R	UINT32	-	-	-
2095	-	Log: Error Code	R	UINT32	-	-	-
2097	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2099	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
2101	-	Log: Power Module Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2103	-	Log: Motor Current	R	FLOAT32	A	-	-
2105	-	Log: Motor Voltage	R	FLOAT32	V	-	-
2107	-	Log: Inverter Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2109	-	LogPower	R	FLOAT32	-	-	-
2111	-	Log: DC Bus Voltage	R	FLOAT32	V	-	-
2113	-	Log: Grid Voltage	R	FLOAT32	V	-	-
2115	P02.0.04	Error 4	R	UINT16	-	-	-
2116	-	Error 4 - Date	R	UINT32	-	-	-
2118	-	Error 4 - Time	R	UINT32	-	-	-
2120	-	Error 4 - End Date	R	UINT32	-	-	-
2122	-	Error 4 - End Time	R	UINT32	-	-	-
2124	-	Log: Error Counter	R	UINT16	-	-	-
2125	-	Log: Error 1 Bitfield	R	UINT32	-	-	-

2127	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2129	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2131	-	LogSpeed	R	UINT32	-	-	-
2133	-	Log: Error Code	R	UINT32	-	-	-
2135	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2137	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
2139	-	Log: Power Module Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2141	-	Log: Motor Current	R	FLOAT32	A	-	-
2143	-	Log: Motor Voltage	R	FLOAT32	V	-	-
2145	-	Log: Inverter Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2147	-	LogPower	R	FLOAT32	-	-	-
2149	-	Log: DC Bus Voltage	R	FLOAT32	V	-	-
2151	-	Log: Grid Voltage	R	FLOAT32	V	-	-
2153	P02.0.05	Error 5	R	UINT16	-	-	-
2154	-	Error 5 - Date	R	UINT32	-	-	-
2156	-	Error 5 - Time	R	UINT32	-	-	-
2158	-	Error 5 - End Date	R	UINT32	-	-	-
2160	-	Error 5 - End Time	R	UINT32	-	-	-
2162	-	Log: Error Counter	R	UINT16	-	-	-
2163	-	Log: Error 1 Bitfield	R	UINT32	-	-	-
2165	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2167	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2169	-	LogSpeed	R	UINT32	-	-	-
2171	-	Log: Error Code	R	UINT32	-	-	-
2173	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2175	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
2177	-	Log: Power Module Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2179	-	Log: Motor Current	R	FLOAT32	A	-	-
2181	-	Log: Motor Voltage	R	FLOAT32	V	-	-
2183	-	Log: Inverter Temperature	R	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
2185	-	LogPower	R	FLOAT32	-	-	-
2187	-	Log: DC Bus Voltage	R	FLOAT32	V	-	-
2189	-	Log: Grid Voltage	R	FLOAT32	V	-	-
2191	P02.0.06	Error 6	R	UINT16	-	-	-
2192	-	Error 6 - Date	R	UINT32	-	-	-
2194	-	Error 6 - Time	R	UINT32	-	-	-
2196	-	Error 6 - End Date	R	UINT32	-	-	-
2198	-	Error 6 - End Time	R	UINT32	-	-	-
2200	-	Log: Error Counter	R	UINT16	-	-	-
2201	-	Log: Error 1 Bitfield	R	UINT32	-	-	-
2203	-	Log: Error 2 Bitfield	R	UINT32	-	-	-
2205	-	Log: Alarm 1 Bitfield	R	UINT32	-	-	-
2207	-	LogSpeed	R	UINT32	-	-	-
2209	-	Log: Error Code	R	UINT32	-	-	-
2211	-	Log: Flow	R	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
2213	-	Log: Head	R	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-

6-Motor Startup Error
 7-Generic Firmware Error
 8-Ext-Flash Error
 9-Ext-Eeprom Error
 10-Motor Overtemperature
 11-I2T Error
 12-PowerClassRestrict
 13-Inverter Overtemperature
 14-*Reserved
 15-Motor Connection
 16-*Reserved
 17-External Error
 18-Sensor1 Error
 19-Sensor2 Error
 20-Sensor3 Error
 21-Sensor4 Error
 22-Setpoint 1 Error
 23-Setpoint 2 Error
 24-Setpoint 3 Error
 25-Setpoint 4 Error
 26-*Reserved
 27-Multipump Bus Timeout
 28-Internal Communication MOC
 29-AOC Hardware Error
 30-*Reserved
 31-*Reserved

2385 - Error2 BitField:
 0-*Reserved
 1-Ground Leakage
 2-*Reserved
 3-Grid Overvoltage
 4-Power Failure
 5-Minimum Threshold R UINT32 -
 6-Lack of Water
 7-*Reserved
 8-Missing Configuration files
 9-Grid Undervoltage
 10-Wrong Feedback Configuration
 11÷31-*Reserved

2387 - Alarm1 Bitfield:
 0-Generic Firmware Alarm
 1-External Alarm
 2-*Reserved
 3-MultiPump Comm. Lost
 4-MultiPump Address Conflict
 5-MultiPump Incompatibility
 6-Internal Communication MOC
 7-Wrong Feedback Cfg
 8-Wrong Setpoint Cfg R UINT32 -
 9-FieldBus Comm Lost
 10-Pipe Filling Alarm
 11-IGBT temperature derating
 12-Internal Communication UI-AOC
 13-AI1 Alarm
 14-AI2 Alarm
 15-AI3 Alarm
 16-AI4 Alarm
 17-Internal Communication UI-BLE
 18-Factory Files not in Ext-Flash

4104	P04.1.04 [X+]	Speed Setpoint 4	R/W	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
4111	P04.1.11	Pressure Setpoint 1	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
4113	P04.1.12	Pressure Setpoint 2	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
4115	P04.1.13 [X+]	Pressure Setpoint 3	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
4117	P04.1.14 [X+]	Pressure Setpoint 4	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
4121	P04.1.21 [X+]	Flow Setpoint 1	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
4123	P04.1.22 [X+]	Flow Setpoint 2	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
4125	P04.1.23 [X+]	Flow Setpoint 3	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
4127	P04.1.24 [X+]	Flow Setpoint 4	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
4131	P04.1.31 [X+]	Temp. Setpoint 1	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
4133	P04.1.32 [X+]	Temp. Setpoint 2	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
4135	P04.1.33 [X+]	Temp. Setpoint 3	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
4137	P04.1.34 [X+]	Temp. Setpoint 4	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
4141	P04.1.41 [X+]	Level Setpoint 1	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
4143	P04.1.42 [X+]	Level Setpoint 2	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
4145	P04.1.43 [X+]	Level Setpoint 3	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
4147	P04.1.44 [X+]	Level Setpoint 4	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
4155	P04.1.60	Limit setpoint saving	R/W	ENUM	-	0	1
4156	P04.1.51 [X+]	Generic Setpoint 1	R/W	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
4158	P04.1.52 [X+]	Generic Setpoint 2	R/W	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale

5203	P05.2.03	Digital Input 3 Function	R/W	ENUM	-	0	8
5204	P05.2.04 [X+]	Digital Input 4 Function	R/W	ENUM	-	0	8
5205	P05.2.05 [X+]	Digital Input 5 Function	R/W	ENUM	-	0	8
5301	P05.3.01	Analog Output Function	R/W	ENUM	-	0	12
5302	P05.3.02	Analog Output Type	R/W	ENUM	-	0	3
5401	P05.4.01	Relay 1 Function	R/W	ENUM	-	0	7
5402	P05.4.02	Relay 2 Function	R/W	ENUM	-	0	7
5801	P05.8.01	Analog Input 1 Offset	R/W	FLOAT32	-	-10	10
5803	P05.8.02	Analog Input 1 Gain	R/W	FLOAT32	-	0	1,5
5805	P05.8.11	Analog Input 2 Offset	R/W	FLOAT32	-	-10	10
5807	P05.8.12	Analog Input 2 Gain	R/W	FLOAT32	-	0	1,5
5809	P05.8.21 [X+]	Analog Input 3 Offset	R/W	FLOAT32	-	-10	10
5811	P05.8.22 [X+]	Analog Input 3 Gain	R/W	FLOAT32	-	0	1,5
5813	P05.8.31 [X+]	Analog Input 4 Offset	R/W	FLOAT32	-	-10	10
5815	P05.8.32 [X+]	Analog Input 4 Gain	R/W	FLOAT32	-	0	1,5
6001	P06.0.01	System Configuration	R/W	ENUM	-	0	2
6002	P06.0.02	Max Units	R/W	UINT16	-	1	-
6003	P06.0.03	Multipump Address	R/W	UINT16	-	1	8
6004	P06.0.04	Multipump Map	R	UINT16	-	-	-
6005	P06.0.05	Multipump Priority	R	UINT16	-	-	-
6111	P06.1.11	Pressure - Inc. value	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	0	P05.0.12 - Pressure - Full Scale
6113	P06.1.12	Pressure - Dec. value	R/W	FLOAT32	P04.0.11 - Pressure Measuring Unit	0	P05.0.12 - Pressure - Full Scale
6115	P06.1.21 [X+]	Flow - Inc. value	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	0	P05.0.22 - Flow - Full Scale
6117	P06.1.22 [X+]	Flow - Dec. value	R/W	FLOAT32	P04.0.12 - Flow Measuring Unit	0	P05.0.22 - Flow - Full Scale
6119	P06.1.31 [X+]	Temperature - Inc. value	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	0	P05.0.32 - Temperature - Full Scale
6121	P06.1.32 [X+]	Temperature - Dec. value	R/W	FLOAT32	P04.0.13 - Temperature Measuring Unit	0	P05.0.32 - Temperature - Full Scale
6123	P06.1.41 [X+]	Level - Inc. value	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	0	P05.0.42 - Level - Full Scale
6125	P06.1.42 [X+]	Level - Dec. value	R/W	FLOAT32	P04.0.14 - Level Measuring Unit	0	P05.0.42 - Level - Full Scale
6129	P06.1.61	Multipump Enable Speed	R/W	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
6130	P06.1.71	Synchronous Limit	R/W	UINT16	rpm	0	3600
6131	P06.1.72	Synchronous Window	R/W	UINT16	rpm	0	P04.2.32 - Max Speed
6132	P06.1.81	Automatic Switchover Interval	R/W	UINT16	h	0	250
6133	-	MultipumpDeviceEnable	R/W	UINT16	-	0	1

6134	P06.1.51 [X+]	Generic - Inc. value	R/W	FLOAT32	-	0	P05.0.52 - Generic Full Scale
6136	P06.1.52 [X+]	Generic - Dec. value	R/W	FLOAT32	-	0	P05.0.52 - Generic Full Scale
7001	P07.0.01	Max Switching Frequency	R/W	ENUM	-	0	5
7002	P07.0.02	Min Switching Frequency	R/W	ENUM	-	0	5
7101	P07.1.01	Skip Speed Center	R/W	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
7102	P07.1.02	Skip Speed Range	R/W	UINT16	rpm	0	300
7201	P07.2.01	Motor heating function	R/W	ENUM	-	0	2
8001	P08.0.01	Com 1 Function	R/W	ENUM	-	0	3
8002	P08.0.02	Com 2 Function	R/W	ENUM	-	0	2
8101	P08.1.01	Modbus RTU Address	R/W	UINT16	-	0	127
8102	P08.1.02	Modbus RTU Baudrate	R/W	ENUM	-	0	8
8108	P08.1.08	Modbus RTU Format	R/W	ENUM	-	0	3
8201	P08.2.01	BACnet MS/TP Mac Address	R/W	UINT16	-	0	P08.2.05 - BACnet MS/TP Max Master
8202	P08.2.02	BACnet MS/TP Baudrate	R/W	ENUM	-	0	8
8203	P08.2.03	BACnet MS/TP Format	R/W	ENUM	-	0	3
8204	P08.2.04	BACnet MS/TP Device Id	R/W	UINT32	-	-	4194304
8206	P08.2.05	BACnet MS/TP Max Master	R/W	UINT16	-	P08.2.01 - BACnet MS/TP Mac Address	127
8210	-	BACnet Info Frames	R/W	UINT16	-	1	255
8211	-	BACnet Reinit	R/W	ENUM	-	0	1
8301	P08.3.01	Enable Wireless Communication	R/W	ENUM	-	0	1
9001	P09.0.01 [X+]	Language	R/W	ENUM	-	0	28
9011	P09.0.12 [X+]	Time	R/W	UINT32	-	-	-
9013	P09.0.11 [X+]	Date	R/W	UINT32	-	-	-
9201	P09.1.01	Display Energy Saving	R/W	ENUM	-	0	1
9202	P09.1.02	Energy Saving Time	R/W	UINT16	s	60	999
9210	P09.1.10	Display Orientation	R/W	ENUM	-	0	1
9211	P09.1.11	Max Decimals	R/W	UINT16	-	0	3
9301	P09.3.01	Error Log Reset	R/W	ENUM	-	0	1
9302	P09.3.02	Operating Time Counter Reset	R/W	ENUM	-	0	1
9303	P09.3.03	Motor Running Counter Reset	R/W	ENUM	-	0	1
9304	P09.3.04	Energy Counter Reset	R/W	ENUM	-	0	1
9305	P09.3.05	Factory Restore	R/W	ENUM	-	0	1
9306	P09.3.06 [X+]	Commissioning Completed	R/W	ENUM	-	0	1
9307	P09.3.07	Bonded Device List Reset	R/W	ENUM	-	0	1

8 BACnet MS/TP

8.1 Protocol implementation compliance statement (PICS)

Declaration of conformity

Date	29/03/2023
Vendor name	XYLEM INC
Product name	HYDROVAR X
Product model number	HVX, HVX+, HYDROVAR X, HYDROVAR X+
Application software version	01.00.00 (FW_PackVersion)
Firmware revision	01
BACnet protocol version	19

BACnet standard device profile (Annex L)

<input type="checkbox"/>	BACnet Advanced Workstation	(B-AWS)
<input type="checkbox"/>	BACnet Operator Workstation	(B-OWS)
<input type="checkbox"/>	BACnet Operator Display	(B-OD)
<input type="checkbox"/>	BACnet Building Controller	(B-BC)
<input type="checkbox"/>	BACnet Advanced Application Controller	(B-AAC)
<input type="checkbox"/>	BACnet Application Specific Controller	(B-ASC)
<input type="checkbox"/>	BACnet Smart Sensor	(B-SS)
<input checked="" type="checkbox"/>	BACnet Smart Actuator	(B-SA)

BACnet interoperability blocks (Annex K)

<input type="checkbox"/>	Data Sharing - Read Property-A	DS-RP-A
<input checked="" type="checkbox"/>	Data Sharing - Read Property-B	DS-RP-B
<input type="checkbox"/>	Data Sharing - Read Property Multiple-A	DS-RPM-A
<input type="checkbox"/>	Data Sharing - Read Property Multiple-B	DS-RPM-B
<input type="checkbox"/>	Data Sharing - Write Property-A	DS-WP-A
<input checked="" type="checkbox"/>	Data Sharing - Write Property-B	DS-WP-B
<input type="checkbox"/>	Data Sharing - Write Property Multiple-A	DS-WPM-A
<input type="checkbox"/>	Data Sharing - Write Property Multiple-B	DS-WPM-B
<input type="checkbox"/>	Data Sharing - Change of Value-A	DS-COV-A
<input type="checkbox"/>	Data Sharing - Change of Value-B	DS-COV-B
<input type="checkbox"/>	Data Sharing - Change of Value Property-A	DS-COVP-A
<input type="checkbox"/>	Data Sharing - Change of Value Property-B	DS-COVP-B
<input type="checkbox"/>	Data Sharing - Change of Value Unsolicited-A	DS-COVU-A
<input type="checkbox"/>	Data Sharing - Change of Value Unsolicited-B	DS-COVU-B
<input type="checkbox"/>	Data Sharing - View-A	DS-V-A
<input type="checkbox"/>	Data Sharing - Advanced View-A	DS-AV-A
<input type="checkbox"/>	Data Sharing - Modify-A	DS-M-A
<input type="checkbox"/>	Data Sharing - Advanced Modify-A	DS-AM-A

Network device management

<input type="checkbox"/>	Device Management - Dynamic Device Binding-A	DM-DDB-A
<input checked="" type="checkbox"/>	Device Management - Dynamic Device Binding-B	DM-DDB-B
<input type="checkbox"/>	Device Management - Dynamic Object Binding-A	DM-DOB-A
<input checked="" type="checkbox"/>	Device Management - Dynamic Object Binding-B	DM-DOB-B
<input type="checkbox"/>	Device Management - Device Communication Control-A	DM-DCC-A
<input type="checkbox"/>	Device Management - Device Communication Control -B	DM-DCC-B
<input type="checkbox"/>	Device Management - Private Transfer-A	DM-PT-A
<input type="checkbox"/>	Device Management - Private Transfer-B	DM-PT-B
<input type="checkbox"/>	Device Management - Text Message-A	DM-TM-A
<input type="checkbox"/>	Device Management - Text Message-B	DM-TM-B
<input type="checkbox"/>	Device Management - Time Synchronization-A	DM-TS-A
<input type="checkbox"/>	Device Management - Time Synchronization-B	DM-TS-B
<input type="checkbox"/>	Device Management - UTC Time Synchronization-A	DM-UTC-A
<input type="checkbox"/>	Device Management - UTC Time Synchronization-B	DM-UTC-B
<input type="checkbox"/>	Device Management - Reinitialize Device-A	DM-RD-A
<input type="checkbox"/>	Device Management - Reinitialize Device-B	DM-RD-B
<input type="checkbox"/>	Device Management - Backup and Restore-A	DM-BR-A
<input type="checkbox"/>	Device Management - Backup and Restore-B	DM-BR-B
<input type="checkbox"/>	Device Management - Restart-A	DM-R-A
<input type="checkbox"/>	Device Management - Restart-B	DM-R-B
<input type="checkbox"/>	Device Management - List Manipulation-A	DM-LM-A
<input type="checkbox"/>	Device Management - List Manipulation-B	DM-LM-B
<input type="checkbox"/>	Device Management - Object Creation and Deletion-A	DM-OCD-A
<input type="checkbox"/>	Device Management - Object Creation and Deletion-B	DM-OCD-B
<input type="checkbox"/>	Device Management - Virtual Terminal-A	DM-VT-A
<input type="checkbox"/>	Device Management - Virtual Terminal-B	DM-VT-B
<input type="checkbox"/>	Device Management - Automatic Network Mapping-A	DM-ANM-A
<input type="checkbox"/>	Device Management - Automatic Device Mapping-A	DM-ADM-A
<input type="checkbox"/>	Device Management - Automatic Time Synchronization-A	DM-ATS-A
<input type="checkbox"/>	Device Management - Manual Time Synchronization-A	DM-MTS-A

Supported standard objects

Object	Supported	Created / deleted dynamically	Optional properties supported	Writing properties
Analog Input	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-	-
Analog Value	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-	Present_Value
Device	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Max_Master, Max_Info_Frames	Object_Identifier
Network Port	<input checked="" type="checkbox"/>	<input type="checkbox"/>	MAC_Address, Max_Master, Max_Info_Frames	-
CharacterStringValue	<input checked="" type="checkbox"/>	<input type="checkbox"/>	-	-

Data link level

<input type="checkbox"/>	BACnet IP, (Annex J)	
<input type="checkbox"/>	BACnet IP, (Annex J), Foreign Device	
<input type="checkbox"/>	ISO 8802-3, Ethernet (Clause 7)	
<input type="checkbox"/>	ANSI/ATA 878.1, 2,5 Mb ARCNET (Clause 8)	
..	ANSI/ATA 878.1, 2,5 Mb ARCNET (Clause 8), baud rate(s)	
<input checked="" type="checkbox"/>	MS/TP master (Clause 9), baud rate(s)	<ul style="list-style-type: none"> • 1200 (limited functionality, possibility of timeout caused by low speed) • 2400 (limited functionality, possibility of timeout caused by low speed) • 4800 (limited functionality, possibility of timeout caused by low speed) • 9600 • 19200 • 38400 (recommended) • 57600 • 76800 • 115200
<input type="checkbox"/>	MS/TP slave (Clause 9), baud rate(s)	
<input type="checkbox"/>	Point-To-Point, EIA 232 (Clause 10), baud rate(s)	
<input type="checkbox"/>	Point-To-Point, modem (Clause 10), baud rate(s)	
<input type="checkbox"/>	LonTalk (Clause 11), medium	
<input type="checkbox"/>	Other	

Device address constraint

Are devices with static constraints supported? Necessary for bidirectional communication with MS/TP slave and other devices.	<input type="checkbox"/> yes	<input checked="" type="checkbox"/> no
---	------------------------------	--

Additional features

- Network options: Not present.
- Network safety options: Not present.
- Set of supported characters: Not present.
- Segmentation capabilities: Not present.
- Network management: Not present.
- Alarm and event management: Not present.
- Scheduling and programming: Not present.
- Capability of handling logs (trending): Not present.

8.2 BACnet Device and BACnet Device Object Identifier

HVX and HVX+ are BACnet devices as they support digital communication using the BACnet protocol.

Each BACnet Device contains a Device Object. This is a standard object whose properties represent the characteristics that can be viewed from the outside.

Units connected to the local MS/TP network are localised through:

- a Device Object Identifier, or
- a MAC address.

BACnet Device Object Identifier

The factory set value is 84003.

To change value, use the Write Property service in the Object_Identifier property of the Device Object, or the specific parameter P08.2.04 Device ID BACnet MS/TP available on the display.

MAC address

The factory set value is 1.

Check that each unit connected to the MS/TP network is identified by a different address in parameter P08.2.01 MAC address BACnet MS/TP.

8.3 Connections and data management, BACnet MS/TP

For detailed information on the installation, wiring and configuration of the unit, please refer to the Additional Installation, Operation and Maintenance Instructions manual.


- When BACnet MS/TP communication between the drive and an external device is active, the connection status light on the drive display is on.
- Set parameter *P04.1.60 Limit setpoint saving* to *Yes* to write to the volatile memory area and extend the life of the non-volatile EEPROM memory.

NOTE:

Do not connect terminal (C) of the control board to different voltage potentials or PE.

Connect a single pump unit to an external device

1. Remove the cover of the drive and observe the wiring diagrams inside.
2. Connect terminals 31 (B), 32 (A) and 33 (C) to the external device, for example PLC, BMS, etc.

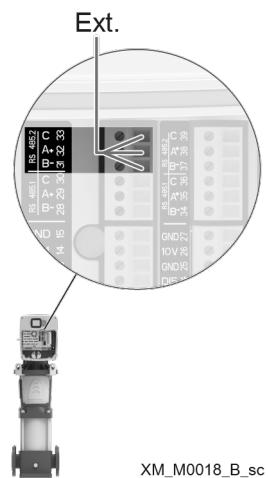

180	P02.0.10	Error 10	Error 10	UINT16	-	-	-
181	-	Error 10 - Date	Error 10 - Date	UINT32	-	-	-
182	-	Error 10 - Time	Error 10 - Time	UINT32	-	-	-
183	-	Error 10 - End Date	Error 10 - End Date	UINT32	-	-	-
184	-	Error 10 - End Time	Error 10 - End Time 1	UINT32	-	-	-
185	-	Log: Error Counter	Log: Error Counter 10	UINT16	-	-	-
186	-	Log: Error 1 Bitfield	Log: Error 1 Bitfield 10	UINT32	-	-	-
187	-	Log: Error 2 Bitfield	Log: Error 2 Bitfield 10	UINT32	-	-	-
188	-	Log: Alarm 1 Bitfield	Log: Alarm 1 Bitfield 10	UINT32	-	-	-
189	-	LogSpeed	Log: Speed 10	UINT32	-	-	-
190	-	Log: Error Code	Log: Error Code 10	UINT32	-	-	-
191	-	Log: Flow	Log: Flow 10	FLOAT32	P04.0.12 - Flow Measuring Unit	-	-
192	-	Log: Head	Log: Head 10	FLOAT32	P04.0.11 - Pressure Measuring Unit	-	-
193	-	Log: Power Module Temperature	Log: Power Module Temp 10	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
194	-	Log: Motor Current	Log: Motor Current 10	FLOAT32	A	-	-
195	-	Log: Motor Voltage	Log: Motor Voltage 10	FLOAT32	V	-	-
196	-	Log: Inverter Temperature	Log: Inverter Temperature 10	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
197	-	LogPower	Log: Motor Power 10	FLOAT32	-	-	-
198	-	Log: DC Bus Voltage	Log: DC Bus Voltage 10	FLOAT32	V	-	-
199	-	Log: Grid Voltage	Log: Grid Voltage 10	FLOAT32	V	-	-
200	-	Total Error Counter	Total Error Counter	UINT16	-	-	-
201	-	Total Alarm Counter	Total Alarm Counter	UINT16	-	-	-
202	-	Error 1 Bitfield: 0-IGBT Overtemperature 1-IGBT Internal Overtemperature 2-IGBT Overcurrent 3-Motor Overcurrent 4-Overvoltage DC-Bus 5-Undervoltage DC-Bus 6-Motor Startup Error 7-Generic Firmware Error 8-Ext-Flash Error 9-Ext-Eeprom Error 10-Motor Overtemperature 11-I2T Error 12-PowerClassRestrict 13-Inverter Overtemperature 14-*Reserved 15-Motor Connection 16-*Reserved 17-External Error 18-Sensor1 Error 19-Sensor2 Error 20-Sensor3 Error 21-Sensor4 Error 22-Setpoint 1 Error 23-Setpoint 2 Error 24-Setpoint 3 Error 25-Setpoint 4 Error 26-*Reserved 27-Multipump Bus Timeout 28-Internal Communication MOC 29-AOC Hardware Error	Error1 Bitfield	UINT32	-	-	-

		30-*Reserved 31-*Reserved			
		Error2 BitField: 0-*Reserved 1-Ground Leakage 2-*Reserved 3-Grid Overvoltage 4-Power Failure			
203	-	5-Minimum Threshold 6-Lack of Water 7-*Reserved 8-Missing Configuration files 9-Grid Undervoltage 10-Wrong Feedback Configuration 11÷31-*Reserved	Error2 Bitfield	UINT32	-
		Alarm1 Bitfield: 0-Generic Firmware Alarm 1-External Alarm 2-*Reserved 3-MultiPump Comm. Lost 4-MultiPump Address Conflict 5-MultiPump Incompatibility 6-Internal Communication MOC 7-Wrong Feedback Cfg 8-Wrong Setpoint Cfg 9-FieldBus Comm Lost 10-Pipe Filling Alarm 11-IGBT temperature derating 12-Internal Communication UI-AOC 13-AI1 Alarm 14-AI2 Alarm 15-AI3 Alarm 16-AI4 Alarm 17-Internal Communication UI-BLE 18-Factory Files not in Ext-Flash	Alarm1 Bitfield 1	UINT32	-
205	P03.0.01	Actual Pressure	Actual Pressure	FLOAT32	P04.0.11 - Pressure Measuring Unit
206	P03.0.02 [X+]	Actual Flow	Actual Flow	FLOAT32	P04.0.12 - Flow Measuring Unit
207	P03.0.03 [X+]	Actual Fluid Temperature	Actual Fluid Temperature	FLOAT32	P04.0.13 - Temperature Measuring Unit
208	P03.0.04 [X+]	Actual Level	Actual Level	FLOAT32	P04.0.14 - Level Measuring Unit
209	P03.0.10	Effective Required Value	Effective Required Value	FLOAT32	-
210	P03.0.20	Required Value	Required Value	FLOAT32	-
211	P03.0.30	Pump Status	Pump Status	ENUM	-
212	P03.1.01	Unit Powered Time	Unit Powered Time	UINT32	h
213	P03.1.02	Motor Running Time	Motor Running Time	UINT32	h
214	P03.1.05	Energy Counter	Energy Counter	FLOAT32	P04.0.16 - Energy Measuring Unit
215	P03.2.01	Motor Speed	Motor Speed	UINT16	rpm
216	P03.2.02	Motor Speed %	Motor Speed %	FLOAT32	%
217	P03.2.05	Motor Current	Motor Current	FLOAT32	A
218	P03.2.06	Motor Power	Motor Power	FLOAT32	P04.0.15 - Power Measuring Unit
219	P03.2.07	Motor Voltage	Motor Voltage	FLOAT32	V
220	P03.2.08	Grid Voltage	Grid Voltage	UINT16	V
221	P03.2.09	DC Bus Voltage	DC Bus Voltage	UINT16	V

222	P03.2.20 Power Module Temperature	Power Module Temperature	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
223	P03.2.21 Inverter Temperature	Inverter Temperature	FLOAT32	P04.0.13 - Temperature Measuring Unit	-	-
224	P03.2.22 Motor Ptc	Motor Ptc	FLOAT32	-	-	-
225	P03.3.01 Digital I/O Status	Digital I/O Status	UINT16	-	-	-
226	P03.3.11 Analog Input 1 Value	Analog Input 1 Value	FLOAT32	P05.1.02 - Analog Input 1 Type	-	-
227	P03.3.12 Analog Input 2 Value	Analog Input 2 Value	FLOAT32	P05.1.12 - Analog Input 2 Type	-	-
228	P03.3.13 [X+] Analog Input 3 Value	Analog Input 3 Value	FLOAT32	P05.1.22 - Analog Input 3 Type	-	-
229	P03.3.14 [X+] Analog Input 4 Value	Analog Input 4 Value	FLOAT32	P05.1.32 - Analog Input 4 Type	-	-
230	P03.3.20 Analog Output Value	Analog Output Value	FLOAT32	P05.3.02 - Analog Output Type	-	-
231	P03.4.02 Unit Production Date	Unit Production Date	UINT32	-	-	-
232	P03.4.05 Drive Production Date	Drive Production Date	UINT32	-	-	-
233	- Drive Type	Drive type	ENUM	-	-	-
234	P06.0.04 Multipump Map	Multipump Map	UINT16	-	-	-
235	P06.0.05 Multipump Priority	Multipump Priority	UINT16	-	-	-
236	P03.4.13 Control Card Firmware Version	Control Card Firmware Version	UINT32	-	-	-
237	P03.4.12 Power Card Firmware Version	Power Card Firmware Version	UINT32	-	-	-
238	P03.4.10 Hmi Firmware Version	Hmi Firmware Version	UINT32	-	-	-
239	P03.4.11 Hmi-Bt Firmware Version	Hmi-Bt Firmware Version	UINT32	-	-	-
240	P03.4.14 Map File Version	Map File Version	UINT32	-	-	-
241	P03.4.15 Default File Version	Default File Version	UINT32	-	-	-
242	P03.4.16 Parameter File Version	Parameter File Version	UINT32	-	-	-
243	P03.4.17 [X+] Language File Version	Language File Version	UINT32	-	-	-

8.6 BACnet Analog Values TABLE

Object Identifier	Menu ID	Param. Name	BACnet Obj. Name	Type	Dimension	Min	Max
0	-	Start/Stop: 0-Stop 1-Start	On/Off Set	ENUM	-	0	1
1	-	Error Reset Command	ERRORRESTCMD	ENUM	-	0	1
2	P04.0.01	System Type	System Type	ENUM	-	0	3
3	P04.0.02	Control Mode	Control Mode	ENUM	-	0	7
4	P04.0.03	Regulation Mode	Regulation Mode	ENUM	-	0	1
5	P04.0.05	Start Value	Start Value	UINT16	%	0	100
6	P04.0.06	Auto Start	Auto Start	ENUM	-	0	1
7	P04.0.07	Min Speed Configuration	Min Speed Configuration	ENUM	-	0	1
8	P04.0.09	Measuring Unit Selection	Measuring Unit Selection	ENUM	-	0	1
9	P04.0.11	Pressure Measuring Unit	Pressure Measuring Unit	ENUM	-	0	8
10	P04.0.12 [X+]	Flow Measuring Unit	Flow Measuring Unit	ENUM	-	0	4
11	P04.0.13 [X+]	Temperature Measuring Unit	Temperature Measuring Unit	ENUM	-	0	2
12	P04.0.14 [X+]	Level Measuring Unit	Level Measuring Unit	ENUM	-	0	3
13	P04.0.15 [X+]	Power Measuring Unit	Power Measuring Unit	ENUM	-	0	3
14	P04.0.16 [X+]	Energy Measuring Unit	Energy Measuring Unit	ENUM	-	0	5
15	P04.0.17 [X+]	Specific Energy Meas. Unit	Specific Energy Meas. Unit	ENUM	-	0	4
16	P09.1.11	Max Decimals	Max Decimals	UINT16	-	0	3
17	P04.0.21	Setpoint 1 Selection	Setpoint 1 Selection	ENUM	-	0	1
18	P04.0.22	Setpoint 2 Selection	Setpoint 2 Selection	ENUM	-	0	2
19	P04.0.23 [X+]	Setpoint 3 Selection	Setpoint 3 Selection	ENUM	-	0	2
20	P04.0.24 [X+]	Setpoint 4 Selection	Setpoint 4 Selection	ENUM	-	0	2
21	P04.1.01	Speed Setpoint 1	Speed Setpoint 1	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
22	P04.1.02	Speed Setpoint 2	Speed Setpoint 2	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
23	P04.1.03 [X+]	Speed Setpoint 3	Speed Setpoint 3	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
24	P04.1.04 [X+]	Speed Setpoint 4	Speed Setpoint 4	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
25	P04.1.11	Pressure Setpoint 1	Pressure Setpoint 1	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
26	P04.1.12	Pressure Setpoint 2	Pressure Setpoint 2	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale

27	P04.1.13 [X+]	Pressure Setpoint 3	Pressure Setpoint 3	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
28	P04.1.14 [X+]	Pressure Setpoint 4	Pressure Setpoint 4	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
29	P04.1.21 [X+]	Flow Setpoint 1	Flow Setpoint 1	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
30	P04.1.22 [X+]	Flow Setpoint 2	Flow Setpoint 2	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
31	P04.1.23 [X+]	Flow Setpoint 3	Flow Setpoint 3	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
32	P04.1.24 [X+]	Flow Setpoint 4	Flow Setpoint 4	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
33	P04.1.31 [X+]	Temp. Setpoint 1	Temp. Setpoint 1	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
34	P04.1.32 [X+]	Temp. Setpoint 2	Temp. Setpoint 2	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
35	P04.1.33 [X+]	Temp. Setpoint 3	Temp. Setpoint 3	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
36	P04.1.34 [X+]	Temp. Setpoint 4	Temp. Setpoint 4	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
37	P04.1.41 [X+]	Level Setpoint 1	Level Setpoint 1	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
38	P04.1.42 [X+]	Level Setpoint 2	Level Setpoint 2	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
39	P04.1.43 [X+]	Level Setpoint 3	Level Setpoint 3	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
40	P04.1.44 [X+]	Level Setpoint 4	Level Setpoint 4	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale

41	P04.1.51 [X+]	Generic Setpoint 1	Generic Setpoint 1	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
42	P04.1.52 [X+]	Generic Setpoint 2	Generic Setpoint 2	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
43	P04.1.53 [X+]	Generic Setpoint 3	Generic Setpoint 3	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
44	P04.1.54 [X+]	Generic Setpoint 4	Generic Setpoint 4	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
45	P04.2.01	Window	Window	UINT16	%	1	100
46	P04.2.02	Hysteresis	Hysteresis	UINT16	%	1	100
47	P04.2.06	Lift Speed	Lift Speed	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
48	P04.2.07	Linear Lift Amount	Linear Lift Amount	UINT16	%	0	200
49	P04.2.08 [X+]	Quad. Lift Amount	Quad. Lift Amount	UINT16	%	0	999
50	P04.2.11	Ramp 1	Ramp 1	UINT16	s	1	250
51	P04.2.12	Ramp 2	Ramp 2	UINT16	s	1	250
52	P04.2.13	Ramp 3	Ramp 3	UINT16	s	1	999
53	P04.2.14	Ramp 4	Ramp 4	UINT16	s	1	999
54	P04.2.15	Ramp Speed Min Acceleration	Ramp Speed Min Acceleration	FLOAT32	s	0,1	25
55	P04.2.16	Ramp Speed Min Deceleration	Ramp Speed Min Deceleration	FLOAT32	s	0,1	25
56	P04.2.31	Min Speed	Min Speed	UINT16	rpm	0	2000
57	P04.2.32	Max Speed	Max Speed	UINT16	rpm	2000	4100
58	P04.2.35	Min Speed Time	Min Speed Time	UINT16	s	0	100
59	P04.3.00	Automatic Error Reset	Automatic Error Reset	ENUM	-	0	1
60	P04.3.01	Pressure - Minimum Threshold	Pressure - Minimum Threshold	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
61	P04.3.02 [X+]	Flow - Minimum Threshold	Flow - Minimum Threshold	FLOAT32	P04.0.12 - Flow Measuring Unit	P05.0.21 - Flow - Zero Value	P05.0.22 - Flow - Full Scale
62	P04.3.03 [X+]	Temperature - Minimum Threshold	Temperature - Minimum Thresho	FLOAT32	P04.0.13 - Temperature Measuring Unit	P05.0.31 - Temperature - Zero Value	P05.0.32 - Temperature - Full Scale
63	P04.3.04 [X+]	Level - Minimum Threshold	Level - Minimum Threshold	FLOAT32	P04.0.14 - Level Measuring Unit	P05.0.41 - Level - Zero Value	P05.0.42 - Level - Full Scale
64	P04.3.05 [X+]	Generic - Min. Threshold	Generic - Min. Threshold	FLOAT32	-	P05.0.51 - Generic - Zero Value	P05.0.52 - Generic - Full Scale
65	P04.3.10	Minimum Threshold Delay	Minimum Threshold Delay	UINT16	s	1	100
66	P04.3.11	Lack Of Water Delay	Lack Of Water Delay	UINT16	s	1	100
67	P04.4.01	Test Run Speed	Test Run Speed	UINT16	rpm	0	P04.2.32 - Max Speed
68	P04.4.02	Test Run Timeout	Test Run Timeout	UINT16	h	0	255

69	P04.4.03	Test Run Time	Test Run Time	UINT16	s	0	180
70	P04.4.05	Test Run Command	Test Run Command	ENUM	-	0	1
71	P04.6.01	Pipe Filling Function	Pipe Filling Function	ENUM	-	0	2
72	P04.6.03	Pipe Filling Threshold	Pipe Filling Threshold	FLOAT32	P04.0.11 - Pressure Measuring Unit	P05.0.11 - Pressure - Zero Value	P05.0.12 - Pressure - Full Scale
73	P04.6.05	Pipe Filling Time	Pipe Filling Time	UINT16	s	0	999
74	P04.6.06	Max Pipe Filling Pumps	Max Pipe Filling Pumps	UINT16	-	1	P06.0.02 - Max Units
75	P04.6.10	Pipe Filling Steady Time	Pipe Filling Steady Time	UINT16	s	1	P04.6.05 - Pipe Filling Time
76	P04.6.15	Pipe Filling Speed Step	Pipe Filling Speed Step	UINT16	%	5	100
77	P05.0.00	Actual Value Source	Actual Value Source	ENUM	-	0	5
78	P05.0.01	Actuator - Zero Value	Actuator - Zero Value	UINT16	rpm	0	9999
79	P05.0.02	Actuator - Full Scale	Actuator - Full Scale	UINT16	rpm	0	9999
80	P05.0.11	Pressure - Zero Value	Pressure - Zero Value	FLOAT32	P04.0.11 - Pressure Measuring Unit	-5	10
81	P05.0.12	Pressure - Full Scale	Pressure - Full Scale	FLOAT32	P04.0.11 - Pressure Measuring Unit	0	100
82	P05.0.21 [X+]	Flow - Zero Value	Flow - Zero Value	FLOAT32	P04.0.12 - Flow Measuring Unit	0	9999
83	P05.0.22 [X+]	Flow - Full Scale	Flow - Full Scale	FLOAT32	P04.0.12 - Flow Measuring Unit	0	9999
84	P05.0.31 [X+]	Temperature - Zero Value	Temperature - Zero Value	FLOAT32	P04.0.13 - Temperature Measuring Unit	-100	9999
85	P05.0.32 [X+]	Temperature - Full Scale	Temperature - Full Scale	FLOAT32	P04.0.13 - Temperature Measuring Unit	-100	9999
86	P05.0.41 [X+]	Level - Zero Value	Level - Zero Value	FLOAT32	P04.0.14 - Level Measuring Unit	-999	9999
87	P05.0.42 [X+]	Level - Full Scale	Level - Full Scale	FLOAT32	P04.0.14 - Level Measuring Unit	-999	9999
88	P05.0.51 [X+]	Generic - Zero Value	Generic - Zero Value	FLOAT32	-	-1000	1000

89	P05.0.52 [X+]	Generic - Full Scale	Generic - Full Scale	FLOAT32	-	-1000	1000
90	P05.1.01	Analog Input 1 Function	Analog Input 1 Function	ENUM	-	0	7
91	P05.1.02	Analog Input 1 Type	Analog Input 1 Type	ENUM	-	0	3
92	P05.1.11	Analog Input 2 Function	Analog Input 2 Function	ENUM	-	0	7
93	P05.1.12	Analog Input 2 Type	Analog Input 2 Type	ENUM	-	0	3
94	P05.1.21 [X+]	Analog Input 3 Function	Analog Input 3 Function	ENUM	-	0	7
95	P05.1.22 [X+]	Analog Input 3 Type	Analog Input 3 Type	ENUM	-	0	3
96	P05.1.31 [X+]	Analog Input 4 Function	Analog Input 4 Function	ENUM	-	0	7
97	P05.1.32 [X+]	Analog Input 4 Type	Analog Input 4 Type	ENUM	-	0	3
98	P05.1.40 [X+]	Sensor Curve	Sensor Curve	ENUM	-	0	1
99	P05.1.50 [X+]	Analog Actuator Type	Analog Actuator Type	ENUM	-	0	1
100	P05.2.03	Digital Input 3 Function	Digital Input 3 Function	ENUM	-	0	8
101	P05.2.04 [X+]	Digital Input 4 Function	Digital Input 4 Function	ENUM	-	0	8
102	P05.2.05 [X+]	Digital Input 5 Function	Digital Input 5 Function	ENUM	-	0	8
103	P05.3.01	Analog Output Function	Analog Output Function	ENUM	-	0	12
104	P05.3.02	Analog Output Type	Analog Output Type	ENUM	-	0	3
105	P05.4.01	Relay 1 Function	Relay 1 Function	ENUM	-	0	7
106	P05.4.02	Relay 2 Function	Relay 2 Function	ENUM	-	0	7
107	P05.8.01	Analog Input 1 Offset	Analog Input 1 Offset	FLOAT32	-	-10	10
108	P05.8.02	Analog Input 1 Gain	Analog Input 1 Gain	FLOAT32	-	0	1,5
109	P05.8.11	Analog Input 2 Offset	Analog Input 2 Offset	FLOAT32	-	-10	10
110	P05.8.12	Analog Input 2 Gain	Analog Input 2 Gain	FLOAT32	-	0	1,5
111	P05.8.21 [X+]	Analog Input 3 Offset	Analog Input 3 Offset	FLOAT32	-	-10	10
112	P05.8.22 [X+]	Analog Input 3 Gain	Analog Input 3 Gain	FLOAT32	-	0	1,5
113	P05.8.31 [X+]	Analog Input 4 Offset	Analog Input 4 Offset	FLOAT32	-	-10	10
114	P05.8.32 [X+]	Analog Input 4 Gain	Analog Input 4 Gain	FLOAT32	-	0	1,5
115	P06.0.01	System Configuration	System Configuration	ENUM	-	0	2
116	P06.0.02	Max Units	Max Units	UINT16	-	1	-
117	P06.0.03	Multipump Address	Multipump Address	UINT16	-	1	8

118	P06.1.11	Pressure - Inc. value	Pressure - Inc. value	FLOAT32	P04.0.11 - Pressure Measuring Unit	0	P05.0.12 - Pressure - Full Scale
119	P06.1.12	Pressure - Dec. value	Pressure - Dec. value	FLOAT32	P04.0.11 - Pressure Measuring Unit	0	P05.0.12 - Pressure - Full Scale
120	P06.1.21 [X+]	Flow - Inc. value	Flow - Inc. value	FLOAT32	P04.0.12 - Flow Measuring Unit	0	P05.0.22 - Flow - Full Scale
121	P06.1.22 [X+]	Flow - Dec. value	Flow - Dec. value	FLOAT32	P04.0.12 - Flow Measuring Unit	0	P05.0.22 - Flow - Full Scale
122	P06.1.31 [X+]	Temperature - Inc. value	Temperature - Inc. value	FLOAT32	P04.0.13 - Temperature Measuring Unit	0	P05.0.32 - Temperature - Full Scale
123	P06.1.32 [X+]	Temperature - Dec. value	Temperature - Dec. value	FLOAT32	P04.0.13 - Temperature Measuring Unit	0	P05.0.32 - Temperature - Full Scale
124	P06.1.41 [X+]	Level - Inc. value	Level - Inc. value	FLOAT32	P04.0.14 - Level Measuring Unit	0	P05.0.42 - Level - Full Scale
125	P06.1.42 [X+]	Level - Dec. value	Level - Dec. value	FLOAT32	P04.0.14 - Level Measuring Unit	0	P05.0.42 - Level - Full Scale
126	P06.1.51 [X+]	Generic - Inc. value	Generic - Inc. value	FLOAT32	-	0	P05.0.52 - Generic - Full Scale
127	P06.1.52 [X+]	Generic - Dec. value	Generic - Dec. value	FLOAT32	-	0	P05.0.52 - Generic - Full Scale
128	P06.1.61	Multipump Enable Speed	Multipump Enable Speed	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
129	P06.1.71	Synchronous Limit	Synchronous Limit	UINT16	rpm	0	3600
130	P06.1.72	Synchronous Window	Synchronous Window	UINT16	rpm	0	P04.2.32 - Max Speed
131	P06.1.81	Automatic Switchover Interval	Automatic Switchover Interval	UINT16	h	0	250
132	P07.0.01	Max Switching Frequency	Max Switching Frequency	ENUM	-	0	5
133	P07.0.02	Min Switching Frequency	Min Switching Frequency	ENUM	-	0	5
134	P07.1.01	Skip Speed Center	Skip Speed Center	UINT16	rpm	P04.2.31 - Min Speed	P04.2.32 - Max Speed
135	P07.1.02	Skip Speed Range	Skip Speed Range	UINT16	rpm	0	300
136	P07.2.01	Motor heating function	Motor heating function	ENUM	-	0	2
137	P08.0.01	Com 1 Function	Com 1 Function	ENUM	-	0	3
138	P08.0.02	Com 2 Function	Com 2 Function	ENUM	-	0	2

139	P08.1.01	Modbus RTU Address	Modbus RTU Address	UINT16	-	0	127
140	P08.1.02	Modbus RTU Baudrate	Modbus RTU Baudrate	ENUM	-	0	8
141	P08.1.08	Modbus RTU Format	Modbus RTU Format	ENUM	-	0	3
142	P08.2.01	BACnet MS/TP Mac Address	Bacnet MS/TP Mac Address	UINT16	-	0	P08.2.05 - BACnet MS/TP Max Master
143	P08.2.02	BACnet MS/TP Baudrate	Bacnet MS/TP Baudrate	ENUM	-	0	8
144	P08.2.03	BACnet MS/TP Format	Bacnet MS/TP Format	ENUM	-	0	3
145	P08.2.04	BACnet MS/TP Device Id	Bacnet MS/TP Device Id	UINT32	-	-	4194304
146	P08.2.05	BACnet MS/TP Max Master	Bacnet MS/TP Max Master	UINT16	-	P08.2.01 - BACnet MS/TP Mac Address	127
147	-	BACnet Info Frames	BACnet Info Frames	UINT16	-	1	255
148	-	BACnet Reinit	BACnet Reinit	ENUM	-	0	1
149	P08.3.01	Enable Wireless Communication	Enable Wireless Communication	ENUM	-	0	1
150	P09.0.01 [X+]	Language	Language	ENUM	-	0	28
151	P09.0.12 [X+]	Time	Time	UINT32	-	-	-
152	P09.0.11 [X+]	Date	Date	UINT32	-	-	-
153	P09.1.01	Display Energy Saving	Display Energy Saving	ENUM	-	0	1
154	P09.1.02	Energy Saving Time	Energy Saving Time	UINT16	s	60	999
155	P09.1.10	Display Orientation	Display Orientation	ENUM	-	0	1
156	P09.3.01	Error Log Reset	Error Log Reset	ENUM	-	0	1
157	P09.3.02	Operating Time Counter Reset	Operating Time Counter Reset	ENUM	-	0	1
158	P09.3.03	Motor Running Counter Reset	Motor Running Counter Reset	ENUM	-	0	1
159	P09.3.04	Energy Counter Reset	Energy Counter Reset	ENUM	-	0	1
160	P09.3.05	Factory Restore	Factory Restore	ENUM	-	0	1
161	P09.3.06	Commissioning Completed	Commissioning Completed	ENUM	-	0	1
162	P09.3.07	Bonded Device List Reset	Bonded Device List Reset	ENUM	-	0	1
163	P04.1.60	Limit setpoint saving	Limit setpoint saving	ENUM	-	0	1

9 Maintenance

9.1 Precautions

Before starting, make sure that the safety instructions shown in **Introduction and Safety** on page 6 have been fully read and understood.



DANGER: Electrical hazard

Before starting work, check that the electric power supply is disconnected and locked out, to avoid unintentional restart of the unit, the control panel and the auxiliary control circuit.



DANGER: Electrical hazard

After disconnecting the system from the power supply, wait 2 min for the discharge of the residual current.



WARNING:

Maintenance must be done by a technician possessing the technical-professional requirements outlined in the current regulations.



WARNING:

Always wear personal protective equipment.



WARNING:

Always use suitable working tools.



WARNING:

In the case of liquids that are excessively hot or cold, pay attention to the risk of injury.



The disassembly or installation of the rotor in the motor casing generates a strong magnetic field:

DANGER: Magnetic hazard


The magnetic field may be dangerous for anyone wearing pacemakers, or any other medical devices sensitive to magnetic fields.

NOTE:

The magnetic field may attract metal debris on the rotor surface, causing damage to the same.

9.2 Replacing the drive


Size B and C

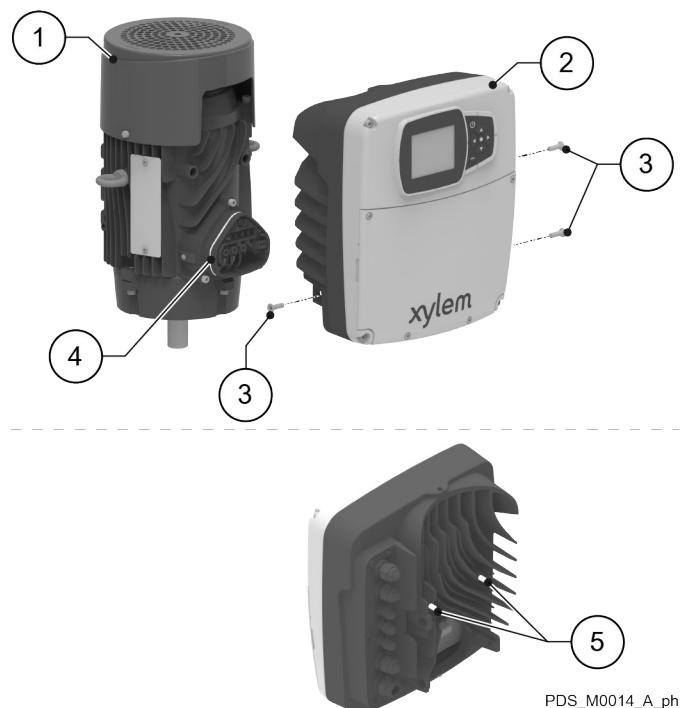

1. Motor
2. Drive
3. Fastening screws
4. Seal
5. Spacers

1. Remove the drive, unscrewing the screws with a Torx spanner.
2. Lubricate the seal with alcohol.
3. Check the correct positioning and integrity of the spacers of the new drive.
4. Fit the drive and tighten the screws.
Tightening torque: 6 Nm (55 lbf·in) \pm 15%.

Size D

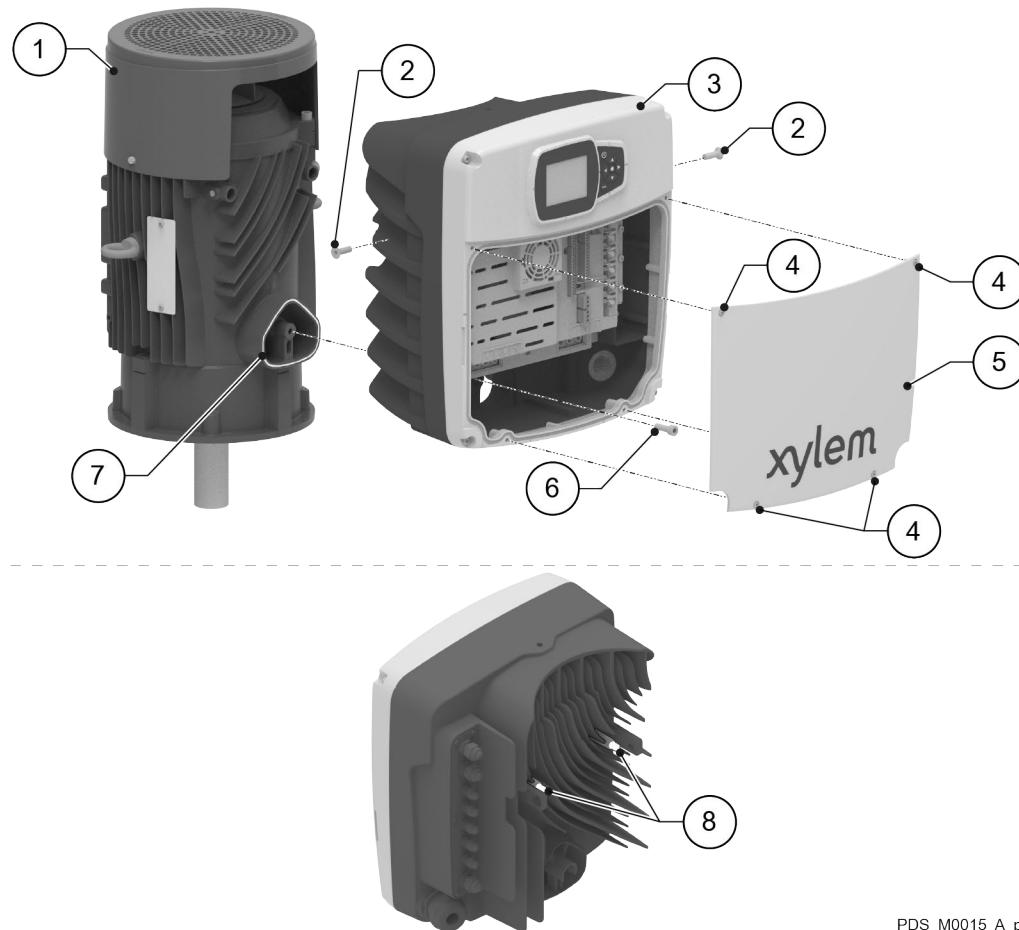

PDS_M0015_A_ph

1. Motor
2. Side fastening screws
3. Drive
4. Screws of the cover
5. Cover
6. Centre fastening screw
7. Seal
8. Spacer

1. Remove the cover.
2. Disconnect the phase conductors of the motor.
3. Remove the drive, unscrewing the side and centre screws with a Torx spanner, taking care not to drop the centre screw inside the motor.
4. Lubricate the seal with alcohol.
5. Check the correct positioning and integrity of the spacers of the new drive.
6. Fit the drive and tighten the screws.
Tightening torque: 8 Nm (70 lbf-in) \pm 15%.
7. Reconnect the phase conductors.
8. Fit the cover and tighten the screws.
Tightening torque: 3 Nm (27 lbf-in) \pm 15%.

9.3 Long periods of inactivity

1. Press the ON/OFF button on the drive display or open the provided enable contact (if used).
2. Disconnect the power supply.
3. Shut the suction and discharge on-off valves.
4. Comply with the instructions on **Storage** page 10.
5. Before starting the unit, check the status of the connections of the electric conductors on the unit and the control panel and ensure the screws are correctly tightened.
6. Start the unit complying with the instructions in the pump unit manual.

9.4 Identification of spare parts

Identify the spare parts with the product codes directly on the site spark.xylem.com. Contact Xylem or the Authorised Distributor for further technical information.

10 Troubleshooting


WARNING:

Maintenance must be done by a technician possessing the technical-professional requirements outlined in the current regulations.


WARNING:

If a fault cannot be corrected or is not mentioned, contact Xylem or the Authorised Distributor.

10.1 List of alarms

Code	Name	Cause	Solution
A05	Data Memory corrupted	The configuration files do not match or have not loaded correctly	<ol style="list-style-type: none"> 1. Power off the unit 2. Wait 1 minute 3. Power the unit
A08	Derating active	The switching frequency was reduced due to the high ambient temperature	<ul style="list-style-type: none"> • Clean the unit • Check the status of the motor fan • Check the environmental conditions of installation
A11	Analog Input 1 Alarm	The analogue input value is too high or too low	Check: <ul style="list-style-type: none"> • The operation of the device connected to the analogue input • The correct configuration of the analogue input
A12	Analog Input 2 Alarm		
A13	Analog Input 3 Alarm		
A14	Analog Input 4 Alarm		
A15	Flow/Temperature Sensor Alarm	The embedded flow/temperature sensor is malfunctioning.	Check the sensor connection
A16	External DI Alarm	The digital input alarm is active	Check the operation of the device connected to the digital input
A17	Internal Communication lost	Communication problem between drive boards	<ol style="list-style-type: none"> 1. Power off the unit 2. Wait 1 minute 3. Power the unit
A18	Multipump Communication Lost	The unit is configured as a multi-pump but there is no communication with other units	Check: <ul style="list-style-type: none"> • The multi-pump system connections • The correct configuration of the communication ports
A19	Multipump Address conflict	There are other units in the system with the same multi-pump address	Check that each unit has a unique multi-pump address
A20	Multipump Incompatibility	A unit connected to the multi-pump system has non-compatible features or a different multi-pump protocol	<ul style="list-style-type: none"> • Do not select the non-compatible feature, or • Bring all the units to the same firmware version

Code	Name	Cause	Solution
A24	Wrong Setpoint configuration	No selected setpoint corresponds to the measured size of the control mode	Verify the correct configuration of the parameters of menus M04 and M05
A28	Fieldbus Communication lost	Interruption of fieldbus communication with the remote device	Check: <ul style="list-style-type: none">• The status of the connected device• The correct configuration of the communication protocol parameters
A29	Pipe Filling Alarm	The pressure value indicated by the <i>pipe filling threshold</i> parameter was not reached within the time set in the <i>pipe filling time</i> parameter	Check: <ul style="list-style-type: none">• The system status• The parameters of the pipe filling function
A35	HMI Communication lost	Communication error between the user interface board and the control board	1. Power off the unit 2. Wait 1 minute 3. Power the unit
A36	BTLE Communication Lost	Communication error between the user interface board and the wireless communication board	1. Power off the unit 2. Wait 1 minute 3. Power the unit

10.2 List of errors

Code	Name	Cause	Solution
E01	Speed limit exceeded	Motor speed above the intended limit	1. Power off the unit 2. Wait 1 minute 3. Power the unit
E02	Overcurrent	The current motor input current is above the limit	Check: <ul style="list-style-type: none">• The condition of the motor• The connection between drive and motor
E03	Undervoltage	Voltage below the minimum limit	Check that the power supply voltage is within the limits when the pump unit is operating at maximum power
E04	Locked rotor	The rotor is locked and cannot rotate	Check that the pump unit is free of dirt or foreign bodies that could cause the rotor to seize
E05	Data Memory corrupted	Part of the memory not correctly initialised or not functioning correctly	1. Power off the unit 2. Wait 1 minute 3. Power the unit
E06	Input phase loss	One or more phases of the power supply network are disconnected	Check: <ul style="list-style-type: none">• The presence of all phases• That the power supply voltage is within the prescribed limits when the pump unit is operating at maximum power

Code	Name	Cause	Solution
E07	Motor Overheating	Motor temperature higher than the operating limits	<ul style="list-style-type: none"> • Clean the unit • Check the status of the motor fan • Check the environmental conditions of installation
E08	Inverter Overheating	Internal drive temperature higher than the operating limits	<ul style="list-style-type: none"> • Clean the unit • Check the status of the motor fan • Check the environmental conditions of installation
E09	Motor Disconnected	The connection of one or more motor phases (between drive and motor) is interrupted.	<p>Check:</p> <ul style="list-style-type: none"> • That the impedance of the motor phases is equal for the three phases • The connection between drive and motor
E11	Sensor 1 Error	The analogue input value is too high or too low	<p>Check:</p> <ul style="list-style-type: none"> • The operation of the device connected to the analogue input • The correct configuration of the analogue input
E12	Sensor 2 Error		
E13	Sensor 3 Error		
E14	Sensor 4 Error		
E15	Flow/Temperature Sensor Error	The flow/temperature sensor is malfunctioning.	Check the sensor connection
E16	External DI Error	The digital input error is active	Check the operation of the device connected to the digital input
E17	Internal Communication lost	Communication problem between drive boards	<ol style="list-style-type: none"> 1. Power off the unit 2. Wait 1 minute 3. Power the unit
E21	Lack of water (LOW)	Contact on LOW digital input open	Check the status of the low-liquid prevention device (float or probes): if not used, connect a jumper to the LOW terminals
E22	Minimum Threshold	The minimum threshold set was not reached in the time set in the <i>minimum threshold delay</i> parameter	<p>Check:</p> <ul style="list-style-type: none"> • That the pump unit is correctly primed • The correct configuration of the minimum threshold parameters
E23	Wrong analog input configuration	No analogue input is configured for the measured size of the control mode	Check that the parameters of menu M05 are configured correctly
E25	Control Card supply error	Power supply issue between the power board and the control board	<ol style="list-style-type: none"> 1. Power off the unit 2. Disconnect all wiring from the control board 3. Power the unit
E26	Hardware configuration error	Incorrect motor-drive configuration files	<ol style="list-style-type: none"> 1. Power off the unit 2. Disconnect all wiring from the control board 3. Power the unit <p>If the problem continues, contact Xylem or the Authorised Distributor</p>

Code	Name	Cause	Solution
E27	Current leakage to ground	The motor insulation to earth is compromised.	<p>Check:</p> <ul style="list-style-type: none"> • That the motor is dry • The insulation of each motor phase to earth
E29	Pipe Filling Error	The pressure value indicated by the <i>pipe filling threshold</i> parameter was not reached within the time set in the <i>pipe filling time</i> parameter	<p>Check:</p> <ul style="list-style-type: none"> • The integrity of the system • The parameters of the pipe filling function
E30	Overload	The motor is overloaded	Check that the characteristics of the pumped liquid are suitable for the pump unit
E31	External Reference 1 Error	The analogue input value is too high or too low	<p>Check:</p> <ul style="list-style-type: none"> • The operation of the device connected to the analogue input • The correct configuration of the analogue input
E32	External Reference 2 Error		
E33	External Reference 3 Error		
E34	External Reference 4 Error		
E36	Mains undervoltage	The power supply voltage is below the minimum accepted limit	Check that the power supply voltage is within the permissible limits
E43	Overvoltage	The DC-Bus voltage exceeds the maximum limit	Check that there are no other pump units in the system which with their flow could cause energy regeneration
E46	Grid Overvoltage	Power supply voltage above the maximum limit	Check that the power supply voltage is within the permissible limits

11 Specifications

11.1 Operating environment

Non-aggressive and non-explosive atmosphere.

Temperature

-20 to 50°C (-4 to 122°F).

Relative air humidity

< 50% at 40°C (104°F).

NOTE:

If the humidity exceeds the stated limits, contact Xylem or the Authorised Distributor.

Condensing environments

If condensing environment conditions are present:

1. Activate the automatic motor heating function, see paragraph S07.2 Motor Heating on page 60.
2. See paragraph Permitted positions in the Additional Instructions for Installation, Use and Maintenance of the pump unit

Elevation

< 1000 m (3280 ft) above sea level.

NOTE: Tripping of the inverter's thermal protection

If the unit is exposed to temperatures or installed at altitudes higher than those indicated, its built-in automatic thermal protection function may intervene.

If the unit is installed at an altitude exceeding 2000 m (6600 ft), contact Xylem or the Authorised Distributor.

11.2 Technical characteristics

See the EXM motor assembly data plate.

Permitted tolerances for the supply voltage

- 200 - 240 V $\pm 10\%$ 50/60 Hz
- 380 - 480 V $\pm 10\%$ 50/60 Hz.

Leakage current (EN 61800-5-1)

≤ 3.5 mA (AC).

Protection class / degree

IP 55, NEMA enclosure Type 4.

Efficiency Class (IEC 61800-9-2)

- IES2 for the complete PDS unit (Power Drive System)
- IE5 for the motors.

Electromagnetic compatibility (EMC)

For EXM motors, see points 6 and 9 of the Declarations on page 114 and following pages.

Electrical data

Rated motor power, kW (hp)	Motor type		Speed range, rpm	Max. input current, A	
	IEC	NEMA		200 - 240 V (EXM..../3.....)	380 - 480 V (EXM..../4.....)
1.5 (2.0)	EXM...../.015B..4..	EXM...../.020B..4..	1500 - 2000	5.7 - 4.9	4.0 - 3.8
2.2 (3.0)	EXM...../.022B..4..	EXM...../.020B..4..		7.9 - 6.7	5.0 - 4.6
3.0 (4.0)	EXM...../.030C..4..	EXM...../.040C..4..		11.0 - 9.8	7.9 - 7.0
4.0 (5.5)	EXM...../.040C..4..	EXM...../.055C..4..		14.0 - 12.3	9.2 - 8.5
5.5 (7.5)	EXM...../.055C..4..	EXM...../.075C..4..		21.6 - 20.4	11.2 - 10.2
	EXM...../.055D..4..	EXM...../.075D..4..		20.5 - 18.8	15.3 - 13.6
7.5 (10)	EXM...../.075D..4..	EXM...../.100D..4..		27.5 - 24.8	18.7 - 17.4
11 (15)	EXM...../.110D..4..	EXM...../.150D..4..		39.0 - 34.5	24.5 - 22.8
3.0 (4.0)	EXM...../.030B..2..	EXM...../.040B..2..	3000 - 4000	10.7 - 8.9*	6.7 - 5.3
4.0 (5.5)	EXM...../.040B..2..	EXM...../.055B..2..		-	7.7 - 6.6
5.5 (7.5)	EXM...../.055B..2..	EXM...../.075B..2..		-	10.2 - 8.7
	EXM...../.055C..2..	EXM...../.075C..2..		18.9 - 16.2	11.4 - 11.0
7.5 (10)	EXM...../.075C..2..	EXM...../.100C..2..		-	14.4 - 12.5
11 (15)	EXM...../.110C..2..	EXM...../.150C..2..		-	20.3 - 16.5
	EXM...../.110D..2..	EXM...../.150D..2..		38.4 - 34.1	24.5 - 22.8
15 (20)	EXM...../.150D..2..	EXM...../.200D..2..		50.0 - 44.1*	30.2 - 27.1
18.5 (25)	EXM...../.185D..2..	EXM...../.250D..2..		-	33.5 - 28.6
22 (30)	EXM...../.220D..2..	EXM...../.300D..2..		-	38.9 - 32.4

* Rotation speed range: 3600 - 4000 rpm

11.3 Conformity of radio frequency characteristics

EU/EEA/GB

Features	Description
Technology	Bluetooth® Low Energy 5.2 wireless technology
Band	2.4 GHz ISM
RF	≤ 4.5 mW (6.5 dBm)

U.S.A.

HVX FCC ID: 2AYCGXSI02
HVX+ FCC ID: 2AYCGXSI03

The variable speed drive complies with Part 15 of the FCC rules (FCC 15.247).

Operation is subject to the following two conditions:

1. This device must not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The variable speed drive is considered a mobile device, and complies with the safety requirements for radio frequency exposure according to FCC Part 2.1093 and KDB 447498 D01, as demonstrated in the analysis of radio frequency exposure.

Installers must ensure that (i) this device is not placed or used together with other antennas or transmitters, except in accordance with FCC procedures for multi-transmitter products, (ii) during normal use, there is always a minimum distance of at least 20 cm.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense

Unauthorised repairs, changes or modifications could cause permanent damage to the equipment and void the warranty and the authorisation to operate this device in accordance with Part 15 of the FCC Rules.

Canada

HVX ISED IC: 26881-XSI02
HVX+ ISED IC: 26881-XSI03

The variable speed drive complies with standard RSS-247

Operation is subject to the following two conditions:

1. This device must not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The variable speed drive is considered a mobile device, and complies with the safety requirements for radio frequency exposure in accordance with RSS-102 version 5.

Installers must ensure that during normal use, there is always a minimum distance of at least 20 cm.

This device complies with the RSS requirements of ISED for licence-exempt radio products.

Changes or modifications to this unit not expressly approved by the party responsible for conformity could void the user's authority to operate the equipment.

11.4 Other conformities and approvals

EU/EEA/GB

EXM motor

CE and UKCA markings (see Declarations on page 114 and following pages)

U.S.A.

Drive HVX, HVX+: cURus (file number E529771)

EXM motor: cURus (file number E488280)

11.5 Characteristics of inputs and outputs

Features	Description
Communication ports	2, RS-485
Digital inputs	3 for hydrovar X, 5 for hydrovar X+: <ul style="list-style-type: none"> • Floating/NPN contact, open manifold/drain open, to GND • Internal polarisation +24 VDC, current limited to 6 mA max. • Protection from -0.5 VDC to +30 VDC, ±15 mA max.
Analogue inputs	2 for hydrovar X, 4 for hydrovar X+: <ul style="list-style-type: none"> • Configurable or 0-20 mA current, or 0-10 V voltage • 24V signal for sensor power supply with current limitation 60 mA
Analogue output	Configurable as either 0-20 mA current signal or 0-10 V voltage signal
Relay	2, with NC and NO changeover contact: <ul style="list-style-type: none"> • Relay 1 up to 250 VAC 0.25 A or 30 VDC 2 A • Relay 2 up to 30 VAC 0.25 A or 30 VDC 2 A



WARNING:

If relay 1 is connected to a voltage higher than 30 VAC, disconnect and do not use the terminals of relay 2.

11.6 Lithium battery

The e-XM motor with HVX+ drive contains a lithium battery that complies with international regulations for land, sea and air transport.

11.7 Magnetic fields

The e-XM motor contains permanent magnets. With the product intact, the magnetic field value is within the IATA limits for air transport.

11.8 Sound pressure (EN 60034-9, CLC/TS 60034-25)

Sound power measured in free field at a distance of one metre from the unit, with no-load operation according to ISO 9614-2 and sound pressure recalculations according to ISO 11203.

Model size	Rated power, kW (hp)	Rotation speed, rpm	Sound pressure, dB(A) ± 2
B	1.5(2), 2.2(3.0)	1500	48
		1800	48
		2000	50
	3.0(4.0), 4(5.5), 5.5(7.5)	3000	61
		3600	64
		4000	70
C	3.0(4.0), 4(5.5), 5.5(7.5)	1500	48
		1800	53
		2000	55
	5.5(7.5), 7.5(10), 11(15)	3000	65
		3600	71
		4000	78
		1500	49
D	5.5(7.5), 7.5(10), 11(15)	1800	52
		2000	54
		3000	64
	11(15), 15(20), 18.5(25), 22(30)	3600	68
		4000	75

12 Disposal

12.1 Precautions



WARNING:


The unit must be disposed of through approved companies specialised in the identification of different types of materials: steel, copper, plastic, lithium, ferrite etc...



WARNING:

It is prohibited to dispose of lubricating fluids and other hazardous substances in the environment.

12.2 WEEE (EU/EEA)

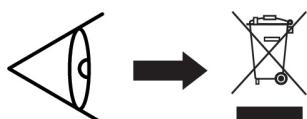


INFORMATION TO USERS pursuant to art. 14 of the Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE). The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately and not disposed of together with other mixed urban waste. Appropriate separate collection for the subsequent start-up of the disused equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and on health and favours the re-use and / or recycling of the materials of which the equipment is composed.

WEEE from users other than private households³: the separate collection of this equipment at the end of its life is organized and managed by the producer⁴.

The user who wants to get rid of this equipment can then contact the producer and follow the system that it has adopted to allow the separate collection of equipment at the end of life or select an organization independently authorized to manage waste.

12.3 WEEE (UK)

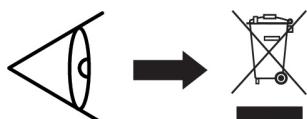

INFORMATION TO USERS pursuant to art. 44 of the The Waste Electrical and Electronic Equipment Regulations 2013 (S. I. 2013 No. 3113). The crossed bin symbol on the appliance or on its packaging indicates that the product at the end of its useful life must be collected separately and not disposed of together with other mixed urban waste. Appropriate separate collection for the subsequent start-up of the disused equipment for recycling, treatment and environmentally compatible disposal helps to avoid possible negative effects on the environment and on health and favours the re-use and / or recycling of the materials of which the equipment is composed.

³ Classification according to product type, use and current local laws

⁴ Producer of EEE as per Directive 2012/19/EU

WEEE from users other than private households⁵: the separate collection of this equipment at the end of its life is organized and managed by the producer⁶.

The user who wants to get rid of this equipment can then contact the producer and follow the system that it has adopted to allow the separate collection of equipment at the end of life or select an organization independently authorized to manage waste.

⁵ Classification according to product type, use and current local laws

⁶ Producer of EEE as per WEEE Regulations 2013

13 Declarations of Conformity

Refer to the specific declaration relating to the marking on the product.



EU Declaration of Conformity (No 75)

1. RED - Radio equipment: EXM ... (see product data plate or label on last page)
RoHS - Unique identification of the EEE: EXM
2. Name and address of the manufacturer:
Xylem Service Italia S.r.l.
Via Vittorio Lombardi 14
36075 Montecchio Maggiore VI
Italy
3. This declaration of conformity is issued under the sole responsibility of the manufacturer.
4. Object of the declaration: permanent magnet-assisted synchronous reluctance motor (PMaSynRM), equipped with integrated variable speed drive - HVX series - having wireless functions.
5. The object of the declaration described above is in conformity with the relevant Union harmonization legislation:
 - Directive 2014/53/EU of 16 April 2014 and subsequent amendments (radio equipment)
 - Directive 2011/65/EU of 8 June 2011 and subsequent amendments including directive (EU) 2015/863 (restriction of the use of certain hazardous substances in electrical and electronic equipment)
6. References to the relevant harmonised standards used or references to the other technical specifications, in relation to which conformity is declared:
 - EN 60034-1:2010, EN 60034-5:2001+A1:2007, EN IEC 60034-5:2020, EN 60034-6:1993, EN 60034-9:2005+A1:2007, EN 61800-5-1:2007+A1:2017+A11:2021, EN 62311:2008, EN IEC 62311:2020, EN 61800-3:2004+A1:2012, EN IEC 61800-3:2018, EN 61000-3-3:2013+A1:2019 +A2:2021, ETSI EN 300 328 V2.2.2 (2019-07)
 - EN IEC 63000:2018.
7. Notified body: ---
8. RED - Any accessories/components/software: ---
9. Additional information:

EMC
EN 61800-3:2004+A1:2012, EN IEC 61800-3:2018
- Emission: Category 2 (C2).
- Immunity: product suitable for second environment (e.g. industrial areas).
EN 61000-3-2:2014, EN IEC 61000-3-2:2019+A1:2021
This product is classifiable as 'professional equipment with a rated power greater than 1 kW'. In the case of connection to a public power grid, the installer must refer to the applicable technical standards.

RoHS
Annex III - Applications exempted from the restrictions: lead as a binding element in steel, aluminium and copper alloys [6(a), 6(b), 6(c)], in solders and in electrical/ electronic components [7(a), 7(c)-I].

Eco-design 2009/125/EC and subsequent amendments
The EXM series motor includes an integrated variable speed drive, and the energy performances of the two cannot be tested independently of each other (Regulation (EU) 2019/1781, Article 2(2)(b), (3)(a)). The marking shown (IE...-IES...) is that required by the technical standard IEC 61800-9-2.

Signed for and on behalf of:
Xylem Service Italia S.r.l.

Montecchio Maggiore, 23/03/2023

Peter Björnsson
Managing Director

rev.00



Xylem is a trademark of Xylem Inc. or one of its subsidiaries.
Hydrovar is a trademark of Xylem Inc. or one of its subsidiaries.
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Xylem Service Italia S.r.l. is under license.

Apple, Apple Logo, App Store and iPhone are trademarks of Apple Inc..
IOS® is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries, used under license by Apple Inc..
Google Play, Google Play logo and Android are trademarks of Google LLC.
All other trademarks or registered trademarks are property of their respective owners.



UK Declaration of Conformity (No 75)

1. RED - Radio equipment: EXM ... (see product data plate or label on last page)
RoHS - Unique identification of the EEE: EXM
2. Name and address of the manufacturer:
Xylem Service Italia S.r.l.
Via Vittorio Lombardi 14
36075 Montecchio Maggiore VI
Italy
3. This declaration of conformity is issued under the sole responsibility of the manufacturer.
4. Object of the declaration: permanent magnet-assisted synchronous reluctance motor (PMaSynRM), equipped with integrated variable speed drive - HVX series - having wireless functions.
5. The object of the declaration described above is in conformity with the relevant UK legislative acts:
 - S.I. 2017/1206 - The Radio Equipment Regulations 2017 and subsequent amendments.
 - S.I. 2012/3032 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 and subsequent amendments.
6. References to the relevant designated standards used or references to the other technical specifications, in relation to which conformity is declared:
 - EN 60034-1:2010, EN 60034-5:2001+A1:2007, EN IEC 60034-5:2020, EN 60034-6:1993, EN 60034-9:2005+A1:2007, EN 61800-5-1:2007+A1:2017+A11:2021, EN 62311:2008, EN IEC 62311:2020, EN 61800-3:2004+A1:2012, EN IEC 61800-3:2018, EN 61000-3-3:2013+A1:2019 +A2:2021, ETSI EN 300 328 V2.2.2 (2019-07)
 - EN IEC 63000:2018.
7. Approved body: ---
8. RED - Any accessories/components/software: ---
9. Additional information:
EMC
EN 61800-3:2004+A1:2012, EN IEC 61800-3:2018
- Emission: Category 2 (C2).
- Immunity: product suitable for second environment (e.g. industrial areas).

EN 61000-3-2:2014, EN IEC 61000-3-2:2019+A1:2021

This product is classifiable as 'professional equipment with a rated power greater than 1 kW'. In the case of connection to a public power grid, the installer must refer to the applicable technical standards.

RoHS

RoHS - S.I. 2020/1647 - The Hazardous Substances and Packaging (Legislative Functions and Amendment) (EU Exit) Regulations 2020 – regulation 3(1), Schedule A2, Table 1 – Exempted applications from the restrictions: lead as a binding element in steel, aluminium and copper alloys [12, 15, 18], in solders and in electrical/electronic components [19, 21].

Eco-design 2009/125/EC and subsequent amendments

The EXM series motor includes an integrated variable speed drive, and the energy performances of the two cannot be tested independently of each other (S.I. 2021/745, Regulation 34, Schedule 16, paragraphs 10(1)(b), 10(2)(a)). The marking shown (IE...-IES...) is that required by the technical standard IEC 61800-9-2.

Signed for and on behalf of:

Xylem Service Italia S.r.l.

Montecchio Maggiore, 23/03/2023

Peter Björnsson
Managing Director

rev.00



Xylem is a trademark of Xylem Inc. or one of its subsidiaries.

Hydrovar is a trademark of Xylem Inc. or one of its subsidiaries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Xylem Service Italia S.r.l. is under license.

Apple, Apple Logo, App Store and iPhone are trademarks of Apple Inc..

iOS® is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries, used under license by Apple Inc..

Google Play, Google Play logo and Android are trademarks of Google LLC.

All other trademarks or registered trademarks are property of their respective owners.

14 Warranty

For information on the warranty refer to the commercial documentation.

Xylem |'zīləm|

- 1) The tissue in plants that brings water upward from the roots;
- 2) A leading global water technology company.

We're a global team unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyse, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to www.xylem.com

Appicare qui l'adesivo con il codice a barre

Apply the adhesive bar code nameplate here



Xylem Service Italia S.r.l.
Via Vittorio Lombardi 14
36075 - Montecchio Maggiore (VI) - Italy
xylem.com